

GT-I9100M

P O R T A B L E Q u a d - B A N D
M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, provincial laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Copyright

© 2011 Samsung Electronics Canada, Inc. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark of RSA Security, Inc.

Post-it® is a registered Trademark of Minnesota Mining and Manufacturing Company aka 3M CORPORATION DELAWARE.



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics Canada, Inc. is under license. Other trademarks and trade names are those of their respective owners.

This product has an Android platform based on Linux, which can be expanded by a variety of JavaScript-based software.

Google™, Android Market™, Google Talk™, Google Mail™, Google Maps™, and YouTube™ are trademarks of Google, Inc.

Java™ is a trademark of Sun Microsystems, Inc.

Windows Media Player® is a registered trademark of Microsoft Corporation.

 and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.

Wi-Fi, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

Covered by one or more of the following U.S. patents:

7,295,673; 7,460,668; 7,515,710; 7,519,274

DivX
HD™

 **DLNA**
CERTIFIED™

About DivX Video

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

About DivX Video-On-Demand

This DivX Certified® device must be registered in order to play purchased DivX Video-On-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

To obtain your registration code, go to **Settings** → **About phone** → **Legal information** → **License settings** → **DivX® VOD** → **Register**. Go to vod.divx.com for more information on how to complete your registration.

“DivX Certified® to play DivX® video up to HD 720p, including premium content.” (LCD resolution: 800x480.)

Disclaimer of Warranties; Exclusion of Liability

Except as set forth in the express warranty contained on the warranty page enclosed with the product, the purchaser takes the product "as is", and Samsung makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to the merchantability of the product or its fitness for any particular purpose or use; the design, condition or quality of the product; the performance of the product; the workmanship of the product or the components contained therein; or compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto. Nothing contained in the instruction manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the product. In addition, Samsung shall not be liable for any damages of any kind resulting from the purchase or use of the product or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits.

Privacy

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.

Warning

Depending on the user interface used in the handset, you may experience slow keypad response when performing tasks in the background. This can impact making phone calls. When there is no activity or change in the icons at the top of the main LCD display, the handset will resume normal operations.

contents

introducing your phone	3
Unpack	3
Phone Layout	4
Keys	5
Indicator Icons	5
Install the SIM Card and Battery	7
Charge the Battery	9
Insert a Memory Card (optional)	11
Attach a Hand Strap (optional)	13
getting started with your phone	14
Turn Your Phone On and Off	14
Use the Touch Screen	15
Get to Know the Idle Screen	16
Access Applications	18
Customize Your Phone	20
Enter Text	25
Android Market	28

Download Files from the Web	29	Music	60
Synchronize Data	30	Music Hub	63
communication	32	FM Radio	63
Calls	32	Game Hub	66
Text and Multimedia Messages	38	personal information	67
Google Mail™	40	Contacts	67
Email	42	Calendar	70
Google Talk™	44	Task	71
Social Hub	44	Memo	72
IM	45	Voice Recorder	73
entertainment	46	web	74
Camera	46	Internet	74
Video Player	55	Google Maps™	78
Gallery	56	Google Search	80
Photo Editor	58	YouTube™	80
Video Maker	59	Samsung Apps	81

Market	82	Kies air	100
Readers Hub	82	Mini Diary	101
News & Weather	83	My Files	102
Zoom Pass	84	Polaris Office	102
connectivity	85	Task Manager	103
Bluetooth	85	Voice Commands	103
Wi-Fi	87	Voice Search	104
Wi-Fi Direct	89	Voice Talk	104
AllShare	90	Self serve	104
Mobile Network Sharing	91	settings	105
GPS	92	Settings	105
PC Connections	93	Wireless and Network	105
tools	97	Call	107
Clock	97	Sound	109
Calculator	99	Display	110
Downloads	100	Power Saving Mode	111
		Location and Security	111

Applications	113	Acknowledging Special Precautions and Industry Canada Notice	131
Accounts and Sync	114	Specific Absorption Rates (SAR) for Wireless Phones 132	
Motion	114	Owner's Record	133
Privacy	114	warranty information	134
Storage	115	Standard Limited Warranty	134
Language and keyboard	115	index	140
Voice Input and Output	117		
Accessibility	119		
Docking Settings	119		
Date and Time	119		
About Phone	119		
troubleshooting	120		
health and safety information	125		
Getting the Most Out of Your Reception	125		
Maintaining Safe Use of and Access to Your Phone	127		
Caring for the Battery	130		

using this manual

Instructional Icons

Before you start, familiarize yourself with the icons that are used in this manual:



Warning: Situations that could cause injury to yourself or others.



Caution: Situations that could cause damage to your phone or to other equipment.




Note: Notes, usage tips, or additional information.



Refer to: Pages with related information. For example: ▶ p. 12 (represents “see page 12”).



Followed by: The order in which options or menus must be selected to perform a step. For example: Select **Messaging** → **New message** represents: select **Messaging** followed by **New message**.

[] **Square brackets:** Device keys. For example:
[] (represents the Home key).

introducing your phone

Unpack

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- Stereo Headset
- Quick Start Guide and Safety and Warranty Guide



 
Only use Samsung-approved software. Pirated or illegal software might cause damage or malfunctions that are not covered by your manufacturer's warranty.



 
The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer. The supplied accessories provide the best performance with your phone.

Phone Layout

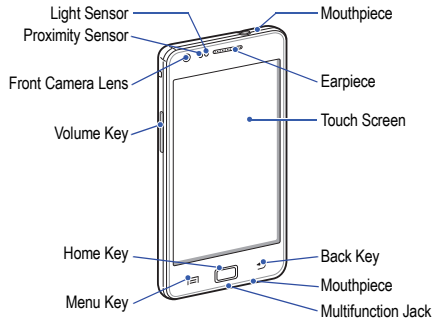


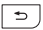

Front of phone

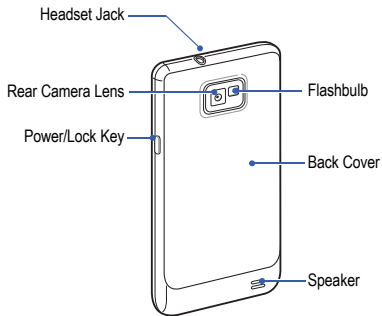

Back of phone



























Keys















Key	Function
 Power/ Lock	Turn on the phone (press and hold) or access the quick menus (press and hold). Lock the touch screen.
 Menu	Open a list of options available on the current screen. Open the quick search bar (press and hold).
 Home	Return to the idle screen. Open the Home screen or open the list of recent programs (press and hold).
 Back	Return to the previous screen.
 Volume	Adjust the phone's volume.

Indicator Icons

Icons shown on the display might vary depending on your region or service provider.

Icon	Definition
	No signal
	Signal strength
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSPA+ network connected
	Open WLANs available
	WLAN connected
	WLAN Direct connected
	Bluetooth activated

Icon	Definition
	Bluetooth headset connected
	GPS activated
	Call in progress
	Call on hold
	Speakerphone activated
	Missed call
	Synchronized with the web
	Uploading data
	Downloading data
	Call diverting activated
	Connected to PC
	USB tethering activated
	WLAN hotspot activated
	No SIM card

Icon	Definition
	New text or multimedia message
	New email message
	New voicemail message
	Alarm activated
	Event notification
	Roaming (outside of normal service area)
	Silent mode activated
	Vibration mode activated
	Flight mode activated
	Music playback in progress
	Music playback paused
	FM radio turned on in background
	Error occurred or caution required
	Battery power level

Icon	Definition
7:36 PM	Current time

 
Install the SIM Card and Battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription details, such as your personal identification number (PIN) and optional services.

To install the SIM card and battery:

1. If the phone is on, press and hold the Power/Lock key and select **Power Off** → **OK** to turn it off.


2. Remove the back cover.

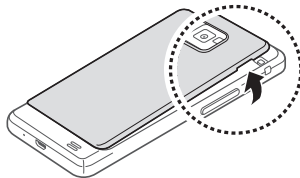




Be careful not to damage your fingernails when you remove the back cover.

 3. Insert the SIM card.

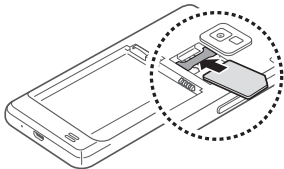


- Place the SIM card in the phone with the gold-colored contacts facing down.
- If you do not insert a SIM card, you can only use your phone's non-network services and some menus.
- Do not insert a memory card into the SIM card slot.

 4. Insert the battery.

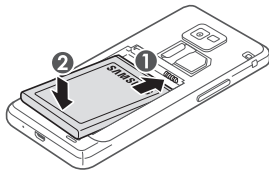

 5. Replace the back cover.

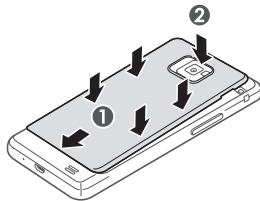


Charge the Battery

Before using the phone for the first time, you must charge the battery. You can charge the phone with the provided travel adaptor or by connecting the phone to a PC with a PC data cable.



Only use Samsung-approved chargers and cables. Unauthorized chargers or cables can cause batteries to explode or damage your phone.



 
When your battery is low, the phone will emit a warning tone and display a low battery message. The battery icon  will also be empty and turn red. If the battery level becomes too low, the phone will automatically power off. Recharge the battery to continue using the phone.



If the battery is completely discharged, you cannot turn the phone on, even with the travel adaptor connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device.

To charge the battery using the travel adaptor:

1. Open the cover to the multifunction jack at the bottom of the phone.
2. Plug the small end of the travel adaptor into the multifunction jack.

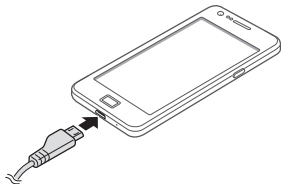




Improperly connecting the travel adapter can cause serious damage to the phone. Any damage caused by misuse is not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.



- You can use the phone while it is charging, but it might take longer to fully charge the battery.
- While the phone is charging, the touch screen might not function due to an unstable power supply. If this happens, unplug the travel adapter from the phone.
- While charging, the battery might heat up. This is normal and should not affect the phone's lifespan or performance.
- If your phone is not charging properly, bring the phone and the charger to a Samsung Service Center.

4. When the battery is fully charged (the battery icon  is no longer moving), unplug the travel adapter from the power outlet and then from the phone.



Do not remove the battery before removing the travel adapter. Doing so might cause damage to the phone.



To save energy, unplug the travel adapter when it is not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

5. Close the cover to the multifunction jack.

To charge the battery using the PC data cable:


Before charging, ensure that your PC is turned on.

1. Open the cover to the multifunction jack at the bottom of the phone.

2. Plug the micro USB end of the PC data cable into the multifunction jack.
3. Plug the other end of the PC data cable into a USB port on a PC.



Depending on the type of PC data cable you are using, it might take some time before charging begins.

4. When the battery is fully charged (the battery icon  is no longer moving), unplug the PC data cable from the phone and then from the PC.

Insert a Memory Card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 32 GB (depending on the memory card manufacturer and type).



Samsung uses approved industry standards for memory cards but some brands might not be fully compatible with your phone. Using an incompatible memory card might damage your phone or the memory card and can corrupt data stored on the card.

 


- Your phone only supports the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your phone will prompt you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- When you insert a memory card into your phone, the file directory of the memory card will appear in the /sdcard/external_sd folder under the internal memory (moviNAND™).

To insert a memory card:

1. Remove the back cover and battery.

2. Insert a memory card with the gold-coloured contacts facing down.

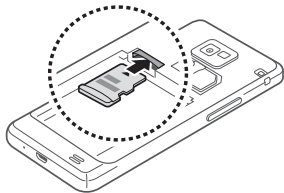

3. Push the memory card into the memory card slot until it locks into place.
4. Replace the battery and back cover.

To remove a memory card:

Before removing the memory card, unmount it for safe removal.



Do not remove the memory card while the phone is transferring or accessing information, as this might result in the loss of data or damage to the memory card or phone.

1. In Idle mode, select **Applications** → **Settings** → **Storage** → **Unmount SD card** → **OK**.
2. Remove the back cover and battery.
3. Push the memory card gently until it disengages from the phone.
4. Pull the memory card out of the memory card slot.
5. Remove the memory card.
6. Replace the battery and back cover.

To format a memory card:

Formatting your memory card on a PC might cause incompatibilities with your phone. Only format the memory card on the phone.

- In Idle mode, select **Applications** → **Settings** → **Storage** → **Unmount SD card** → **OK** → **Format SD card** → **Format SD card** → **Erase everything**.



 
Before formatting the memory card, remember to make backup copies of all important data stored on your phone. The manufacturer's warranty does not cover the loss of data resulting from user actions.

Attach a Hand Strap (optional)

To attach a hand strap to your phone:

1. Remove the back cover.

2. Slide the hand strap through the slot and hook it over the small projection.

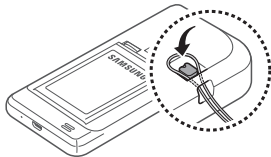

3. Replace the back cover.

getting started with your phone

Turn Your Phone On and Off

To turn your phone on, press and hold the Power/Lock key. Your phone will automatically connect to the network. When you turn on your phone for the first time, tap the Android image on the screen and follow the on-screen instructions to set up your phone for its first use.



You might be charged for the data connection because the connection to the Google web server is always active by default.

To turn your phone off:

1. Press and hold the Power/Lock key.
2. Select **Power off** → **OK**.



- Follow all posted warnings and directions when in an area where the use of wireless devices is restricted, such as air planes and hospitals.

- To only use your phone's non-network services, switch to Flight mode. Press and hold the Power/Lock key and select **Flight mode**.

Use the Touch Screen

Your phone's touch screen lets you easily select items or perform functions.



- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause it to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen might malfunction in humid conditions or when exposed to water.




- For optimal use of the touch screen, remove the screen protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to the touches of sharp tools, such as a stylus or pen.

To control the touch screen:

- **Tap:** Tap once with your finger to select or launch a menu, option, or application.
- **Tap and hold:** Tap an item and hold it for more than 2 seconds to open a pop-up option list.
- **Drag:** Tap and drag your finger up, down, left, or right to move to items on the list.
- **Drag and drop:** Tap and hold your finger on an item and then drag your finger to move the item.


- **Double-tap:** Tap twice quickly with your finger to zoom in or out while viewing photos or web pages.



- Your phone turns off the touch screen when you do not use the phone for a specified amount of time. To turn on the touch screen, press the Power/Lock key or [].
- You can also adjust the backlight time. In Idle mode, select **Applications** → **Settings** → **Display** → **Screen time-out**.

To lock or unlock the touch screen and keys:

You can lock the touch screen and keys to prevent any unwanted phone operations.

- To lock, press the Power/Lock key.
- To unlock, turn on the touch screen by pressing the Power/Lock key or [, and then flick the window with your finger.

Get to Know the Idle Screen


When your phone turns on or is in Idle mode, the Idle screen is displayed. From this screen, you can access various applications and your phone's status information.

The Idle screen has multiple panels. Scroll left or right to a panel on the Idle screen. You can also select a dot on the top of the screen to move to the corresponding panel of the Idle screen.

Add items to the Idle screen:

You can customize the Idle screen by adding shortcuts to applications or items in applications, widgets, or folders.

To add items to the Idle screen:

1. Press [] → **Add**.
2. Select the item category and then select an item:
 - **Widgets:** Add widgets to the Idle screen.

- **Shortcuts:** Add shortcuts to items, such as applications, bookmark, and contacts.
- **Folders:** Create a new folder or add folders for your contacts.
- **Wallpapers:** Set a background image.




Available items vary depending on the current Idle screen mode.

To move items on the Idle screen:

1. Touch and hold the item that you want to move.
2. Drag the item to a new location.

To remove items from the Idle screen:

1. Touch and hold the item that you want to remove.
The item is magnified and the  icon appears, indicating that the application tab has switched to the trash tab.

2. Drag the item to the trash tab.
3. When the item and the trash tab turn red, release the item.

Use the shortcuts panel

In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the shortcuts panel. You can activate or deactivate wireless connection features and access a list of a notifications, such as messages, calls, events, or processing status.

- To hide the shortcuts panel, drag the bottom of the list up.
- To clear the notification list, select **Clear**.

In the shortcuts panel, you can access the following options:

- **Wi-Fi:** Activate or deactivate the WLAN connection feature. ► p. 87



- **Bluetooth:** Activate or deactivate the Bluetooth wireless connection feature. ► p. 85
- **GPS:** Activate or deactivate GPS mode.
- **Sound/Vibration:** Activate or deactivate Vibration mode.
- **Auto rotation:** Activate or deactivate the auto rotation.





Available options might vary depending on your region and service provider.

Add or remove panels from the Idle screen

You can add or remove panels from the Idle screen to organise widgets according to your preferences and needs.

1. In Idle mode, press [] → **Edit**.
You can also place two fingers on the touch screen and pinch to switch to Edit mode.
2. To add or remove panels using the following features:
 - To remove a panel, tap and hold the thumbnail of a panel and drag it to  at the bottom of the screen.

- To add a new panel, select  .
 - To change the order of the panels, tap and hold the thumbnail of a panel and drag it to a new location.
3. When you are finished, press [].

Access Applications

To access your phone's applications:

1. In Idle mode, select **Applications** to access the application list.
2. Scroll left or right to display the application screens. You can also select a dot at the top of the screen to move to the corresponding main menu screen.
3. Select an application.




- When you use applications provided by Google, you must have a Google account. If you do not have a Google account, you will need to create one.
- You can add a shortcut to an application by tapping and holding an application icon in the application list. You can then move the icon to a new location on the Idle screen as needed.

4. Press [↩] to return to the previous screen or press [⏪] to return to the Idle screen.




- If you rotate the phone while using some features, the interface automatically rotates. To prevent the interface from rotating, open the shortcuts panel and select **Auto rotation**.

- While using the phone, you can capture an image of a screen by pressing and holding  and the Power/Lock key at the same time. The image is saved in **Applications** → **My files** → **ScreenCapture**.

To organize applications:

You can reorganise the applications in the application list by changing their order or grouping them into categories to suit your needs.


1. In the application list, press [☰] → **Edit**.
2. Tap and hold an application.
3. Drag the application icon to a **Add Folder** or **Add Page** at the bottom of the screen.
4. Repeat Steps 2 and 3 to add more applications.

5. Drag **Add Folder** or **Add Page** to the menu screen. A new folder or panel containing the applications is added to the menu screen.
6. If you added a folder, enter a name and select **Yes**.
7. Press [] → **Save**.

To change the order of the main menu screens:

1. In the application list, place two fingers on the screen and pinch.
2. Tap and hold the thumbnail of a screen and drag it to a new location.

To access recent applications:

1. Press and hold [] to open a list of applications that you have recently accessed.
2. Select the application that you want to access.

To use the task manager:

Your phone is a multitasking device and can run more than one application at a time. However, multitasking might cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, close unnecessary programs using the task manager.

1. In Idle mode, select **Applications** → **Task manager** → **Active applications**. A list of all of the applications that are currently running on your phone appears.
2. To close an application, select **Exit**. To close all of the active applications, select **Exit all**.

Customize Your Phone

Get more from your phone by customizing it to suit your needs.

To set the current date and time:

1. In Idle mode, select **Applications** → **Settings** → **Date and time**.
2. Set the date and time and change the other options as needed.

To turn the touch tone on or off:

- In Idle mode, select **Applications** → **Settings** → **Sound** → **Audible selection**.

To adjust the volume of the ringtones:

- Press the Volume key up or down to adjust the ringtone volume.



To switch to or from Silent mode:

To mute or unmute your phone, do one of the following:

- In Idle mode, select **Phone** → **Keypad** and tap and hold **#**.

- In Idle mode, press and hold the Power/Lock key and select **Silent mode**.



You can set the phone to alert you to various events in Silent mode. In Idle mode, open the application list and select **Applications** → **Settings** → **Sound** → **Vibration** → **Always, Never, Only in Silent mode, or Only when not in Silent mode**. When you switch to Silent mode,  will appear instead of .


To change your ringtone:

1. In Idle mode, select **Applications** → **Settings** → **Sound** → **Phone ringtone**.
2. Select a ringtone in the list and select **OK**.

To activate animation for switching windows:

- In Idle mode, select **Applications** → **Settings** → **Display** → **Animation** → **No animations, Some animations or All animations**.

To select wallpaper for the Idle screen:

1. In the Idle mode, press [] → **Wallpaper** and select **Gallery**, **Wallpaper gallery**, or **Live wallpapers**.
2. Select an image.
3. Select **Save** or **Set wallpaper**.



Samsung is not responsible for any use of default images or wallpapers provided on your phone.

To adjust the brightness of the display:

You can quickly adjust the brightness of the display by dragging the slider bar left or right.

1. In Idle mode, select **Applications** → **Settings** → **Display** → **Brightness**.
2. Clear the checkbox next to **Automatic brightness**.
3. Drag the slider to adjust the level of brightness.
4. Select **OK**.



The brightness level of the display will affect how quickly the phone uses battery power.

To set an unlock pattern:

You can set an unlock pattern to prevent unauthorized people from using your phone without your permission.

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **Set up screen lock** → **Pattern**.
2. Follow the on-screen instructions and example patterns and select **Next** (if needed).
3. Draw a pattern by dragging your finger to connect at least 4 dots.
4. Select **Continue**.
5. Draw the pattern again to confirm.
6. Select **Confirm**.



- When you have set an unlock pattern, you have to use the pattern each time you turn on the phone. If you do not want the phone to require a pattern, **Applications** → **Settings** → **Location and security** → **Change screen lock**, confirm the saved pattern and select **None**.
- If you forget the unlock pattern, take your phone to a Samsung Service Centre to be unlocked.
- Samsung is not responsible for the loss of passwords or private information or other damages caused by illegal software.

To set an unlock PIN code:

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **Set up screen lock** → **PIN**.
2. Enter a new PIN (numeric) and select **Continue**.
3. Enter the PIN again and select **OK**.

To set an unlock password:

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **Set up screen lock** → **Password**.
2. Enter a new password (alphanumeric) and select **Continue**.
3. Enter the password again and select **OK**.

To lock your SIM card:

You can lock your phone by activating the PIN supplied with your SIM card.

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **Set up SIM card lock** → **Lock SIM card**.
2. Enter your PIN and select **OK**.

Once the PIN lock is enabled, you must enter the PIN each time you turn on the phone.



- If you enter an incorrect PIN too many times, your SIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM card.
- If you block your SIM card by entering an incorrect PUK, bring the card to your service provider to be unblocked.

To activate the mobile tracker:

When someone inserts a new SIM card into your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone.

To use this feature, you need a Samsung account for controlling the phone from the web remotely.

1. In Idle mode, select **Applications** → **Settings** → **Location and security** → **SIM Change Alert**.

2. Enter the email address and password for your Samsung account and select **Sign in**. (To create a Samsung account, select **Sign up**.)
3. Read the terms and conditions and select **Accept**.
4. Select **Alert message recipients**.
5. Enter the password for your Samsung account again and select **OK**.
6. Enter a phone number, including a country code (with +).
7. Enter the text message to be sent to the recipients.
8. Select **Done**.



If you activate **Remote Functions**, you can control a lost phone via the web. Visit <http://www.samsungdive.com> to see detailed information for this feature.

Enter Text

You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the touch screen. You can enter text and create messages or contacts.



You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages. ► p. 115

To change the keyboard type:

You can change the type of keyboard that is used to enter text. Tap and hold the text input field, select **Input method**, and select a keyboard type (**Swype** or **Samsung keypad**).


Using the Swype keyboard

To enter text using the Swype keyboard:

1. Select the first character of a word and drag your finger to the second character without releasing the finger from the screen. A line joins the selected characters. Pause on the second character for a moment and then drag your finger to the next character.
2. Continue until you have finished the word.




3. Release your finger on the last character.

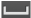- When the word displays correctly, select  to insert a space. If the correct word does not display, select an alternative word from the list that appears.
- Repeat Steps 1 to 4 to complete your text.



- You can also tap the keys to enter text.
- You can tap and hold a key to enter characters on the upper half of the key. When you tap and hold a key until the character list appears, you can enter special characters and symbols.

 - You can also use the following keys:

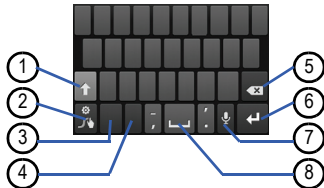

Number	Function
1	Change case.
2	Access the swype tip screen. Show the alternative word list for the selected characters. Change the text input method. Launch Help (tap and hold).
3	Switch between Symbol/Number mode and ABC mode.
4	Change the input language.

Number	Function
5	Clear your input.
6	Start a new line.
7	Enter text by voice. (This feature might not be available, depending on the selected input language.)
8	Insert a space.



- To hide the Swype keyboard, press [↵].
- To view the Help information about using the Swype keyboard, tap and hold

Using the Samsung keypad

 
To enter text using the Samsung keypad:

1. Select → **Portrait keypad types** and select a text input method.

You can select one of key input methods (QWERTY or traditional keypad) or the handwriting input methods.

2. Enter text by selecting alphanumeric keys or by writing on the touch screen.

You can also use the following keys:

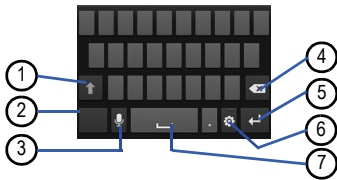





Number	Function
1	Change case.
2	Switch between Symbol/Number mode and ABC mode.

Number	Function
3	Enter text by voice. This icon is only available when you activate the voice input feature for the Samsung keypad. (This feature might not be available, depending on the selected input language.)
4	Clear your input.
5	Start a new line.
6	Access the keypad settings. Change the text input method (tap and hold).
7	Insert a space. Insert a full stop (double-tap). Change the input language (tap and hold and then scroll left or right). (The functions of this key might vary depending on your service provider.)

Copy and paste text

While you are entering text, you can use the copy and paste features to use the same text in other applications.

To copy and paste text:

1. Place the cursor on the text that you want to copy.
2. Select .
3. Select **Select word** or **Select all** to select part or all of the text.
4. Drag  or  to select the text.
5. Select **Copy** to copy, or **Cut** to cut the text onto the clipboard.
6. In another application, place the cursor where you want to paste the text.
7. Select  → **Paste** to insert the text from the clipboard into the text field.

Android Market

Android Market provides you with an easy way to shop for games and mobile applications. Based on the Android

platform, your phone's functionality can be extended by installing additional applications.



- This feature might not be available in your region.
- Your phone will save user files from downloaded applications to the internal moviNAND™ memory. To save the files in the memory card, connect your phone to a PC and copy them from moviNAND to the memory card.

To install applications:

1. In Idle mode, select **Applications** → **Market**.
2. Select **Accept** in the terms and conditions page.
3. Search for a file or application and download it.

To uninstall applications:

1. In the Android Market home screen, press **My apps**.
2. Select the item that you want to delete.

3. Select **Uninstall** → **OK**.

Download Files from the Web

When you download files or web applications from the web, your phone stores them on a memory card.



Files that you download from the web might include viruses that will damage your phone. To lessen your risk, only download from sources that you trust.



Some media files include Digital Rights Management to protect copyrights. This protection might prevent you from downloading, copying, modifying, or transferring some files.

To download files from the web:

1. In Idle mode, select **Applications** → **Internet**.
2. Search for a file or application and download it.

To install applications downloaded from websites other than Android Market, you must select **Settings** → **Applications** → **Unknown sources** → **OK**.

Synchronize Data

You can synchronize data (Google messages, calendar, and contacts) with the Google web server and back up or restore your data.

When the synchronization is complete, your phone stays connected to the web. If any change is made on the web, the updated information will appear on your phone and automatically will begin synchronization, and vice-versa.



- This feature might not be available in your region.
- To synchronize with the Google web server, you must have a Google account. If you do not have a Google account, sign up for a Google account by selecting **Create** on the first setup screen.

To set up a server account:

1. In Idle mode, select **Applications** → **Settings** → **Accounts and sync**.
2. Select **Add account** and select an account type.
3. Follow the on-screen instructions to complete the account setup.

For online community services, such as Facebook or MySpace, enter your user name and password and select **Log in**.

To activate automatic sync:

If you add or edit data in any of the applications on the web

(Google Mail, Calendar, and Contacts), the updated information will appear on your phone, and vice-versa.

1. In Idle mode, select **Applications** → **Settings** → **Accounts and sync**.
2. Select **Auto-sync**.
3. Select an account.
4. Select the applications that you want to synchronise.

To exclude applications from automatic synchronisation, clear the checkbox next to the application that you do not want to synchronise.

To synchronise data manually:

1. In Idle mode, select **Applications** → **Settings** → **Accounts and sync**.
2. Select an account.
3. Select **Sync now**. Your phone will start synchronising the data you have selected for synchronisation.

communication

Calls

You can use your phone to make and answer calls, use options during calls, and to customize and use call-related features.



Make and answer calls

You can use the buttons or touch screen when you make, accept, end, or reject calls.



- When you turn on the proximity sensor, your phone automatically turns off and locks the touch screen to prevent accidental inputs when you hold the phone near your face. ► p. 108
- Static electricity discharged from your body or clothing might interfere with the proximity sensor during a call.


To make a call:

1. In Idle mode, select **Phone** → **Keypad**.
2. Enter an area code and phone number.
3. Select  to make a voice call.
For a video call, select .
4. To end the call, select **End call**.



- Use the phonebook to save the numbers that you dial frequently. ► p. 67
- To quickly access the call log to redial numbers that you have dialed recently, select **Phone** → **Logs**.

To answer a call:


1. When a call comes in, drag  to the right.



When the phone is ringing, press the Volume key to mute the ringtone.

2. To end the call, select **End call**.

To reject a call:


When a call comes in, drag  to the left. The caller will hear a busy tone.

To send a message when you reject incoming calls, select **Reject call with message**.



First set a text message to be sent to callers. In Idle mode, select **Applications** → **Settings** → **Call** → **Set reject messages**. Select a preset message or select **Create** to create a custom message.

To call an international number:

1. In Idle mode, select **Phone** → **Keypad**, and tap and hold **0** to insert the + character.
2. Enter the complete number that you want to dial (country code, area code and phone number), and then select  to dial the number.

To call a contact from Contacts:

You can call numbers directly from Contacts using stored contacts. ► p. 67

1. In Idle mode, select **Phone** → **Contacts**.
2. Select a contact's name.
3. Select the number that you want to dial.

To use the headset:

By plugging the supplied headset into the phone, you can make and answer calls hands-free:




- **Answer a call:** Press the headset button.
- **Reject a call:** Press and hold the headset button and then release it to reject the call.
- **Place a call on hold or retrieve a held call during a call:** Press and hold the headset button.
- **End a call:** Press the headset button.



The supplied headset is only designed to be used with your phone and might not be compatible with other phones and MP3 players.

Use options during a voice call



You can use the following options while a voice call is in progress:

- **Adjust voice volume:** Press the Volume key up or down.
- **Place a call on hold:** Select .
- **Retrieve a held call:** Select .
- **Dial a second number:** Select **Add call** and dial the new number.
- **Answer a second call:** Drag  to the right when the call waiting tone sounds. The phone prompts you to end or hold the first call. You must subscribe to a call waiting service to use this feature.

- **Open the dialling screen:** Select **Keypad**.
- **Activate the speakerphone:** Select **Speaker**.







In noisy environments, you might have difficulty hearing some calls while using the speakerphone. For better audio performance, use the normal phone mode.


- **Turn off the microphone:** Select **Mute** so that the caller cannot hear you.
- **Use a Bluetooth headset:** Select **Headset** to use a Bluetooth headset to listen and talk to the caller.
- **Open the phonebook:** Press [] → **Contacts**.
- **Add a memo:** Press [] → **Memo**.
- **Switch between two calls:** Select **Swap**.
- **Make a multiparty call (conference call):** Make or answer a second call and select **Merge** when connected to the second party. Repeat to add more parties. You

must subscribe to the multiparty call service to use this feature.

Use options during a video call

You can use the following options while a video call is in progress:

- **Switch between cameras:** Select **Switch Camera** to switch between the front and back camera lens.
- **Turn off the microphone:** Select **Mute** so that the caller cannot hear you.
- **Hide your image from the caller:** Press [] → **Hide me**.
- **Select an alternate image:** Press [] → **Outgoing image**.
- **Open the dialling screen:** Press [] → **Dialpad**.
- **Use a Bluetooth headset:** Press [] → **Switch to headset** to listen and talk to the caller using a Bluetooth headset.

- **Use the speakerphone:** Press [] → **Speaker On/Off**.
- **Use the other party's image:** Tap and hold the caller's image. You can capture an image of the screen or record the video call.

View and dial missed calls

Your phone will display calls that you have missed.

To dial the number of a missed call:

1. Open the shortcuts panel.
2. Select the missed call.

Use additional features

You can use various other call-related features, such as auto rejection, call diverting, or call barring.

To set auto rejection and set up the reject list:

You can use auto rejection to automatically reject calls from specific numbers.

1. In Idle mode, select **Applications** → **Settings** → **Call** → **Call rejection**.
2. Select **Auto reject mode** and select an option.

Option	Function
All numbers	Reject all calls.
Only black list	Reject calls from phone numbers on the black list.

3. Select **Black list**.
4. Select **Add**.
5. Select an option under **Match criteria** (if necessary).
6. Enter a phone number and select **Save**.
7. To add more numbers, repeat Steps 4 to 6.

To set call forwarding:

Call diverting is a network feature that allows you to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area.

1. In Idle mode, select **Applications** → **Settings** → **Call** → **Call forwarding** and select **Voice Call** or **Video Call**.
2. Select a condition.
3. Enter a number to which calls will be forwarded and select **Enable**.
Your setting will be sent to the network.

To set call barring:

Call barring is a network feature that restricts specific types of calling or prevents others from making calls with your phone.

1. In Idle mode, select **Applications** → **Settings** → **Call** → **Additional settings** → **Call barring** and select **Voice Call** or **Video Call**.
2. Select a call barring option.
3. Enter a call barring password and select **OK**.
Your setting will be sent to the network.

To set call waiting:


Call waiting is a network feature that alerts you of an incoming call when you are on a call. This feature is only available for voice calls.

1. In Idle mode, select **Applications** → **Settings** → **Call** → **Additional settings** → **Call waiting**.
2. Your setting will be sent to the network.

To view call logs:

You can view logs of your calls and filter them by their types.

1. In Idle mode, select **Phone** → **Logs**.

2. Press [] → **View by** and select an option for sorting the call logs.



From the call logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right

3. Select a log to view its details.



From the detail view, you can dial the number, send a message to the number or add the number to the phonebook or reject list.

Text and Multimedia Messages




You can create and send text (SMS), multimedia (MMS), or email messages, and view or manage messages that you

have sent or received. For instructions on entering text, see ► p. 25.





You might incur additional charges for sending and receiving messages while outside your home service area. For details, contact your service provider.

To send a text message:


1. In Idle mode, select **Messaging** and select .
2. Add the recipients of your message.
 - Enter phone numbers manually, separating them with a semicolon or comma.
 - Select phone numbers from the lists by selecting .
3. Select **Tap to enter message** and enter your message text.
To insert emoticons, press [] → **Insert smiley**.
4. Select **Send** to send the message.



To send a multimedia message:

1. In Idle mode, select **Messaging** and select .
2. Add the recipients of your message.
 - Enter phone numbers or email addresses manually, separating them with a semicolon or comma.
 - Select phone numbers or email addresses from the lists by selecting .



When you enter an email address, the phone will convert the message as a multimedia message.

3. Press [] → **Add subject** and add a subject for the message.
4. Select **Tap to enter message** and enter your message text.

To insert emoticons, press [] → **Insert smiley**.
5. Select  and add an item.

You can select a file from the file list or create a new photo, video, or sound.
6. Select **Send** to send the message.

To view text or multimedia messages:

1. In Idle mode, select **Messaging**.

Your messages are grouped into message threads by contact.
2. Select a contact.

3. For a multimedia message, select a message to view its details.

Listen to voicemail messages

If you have set missed calls to be diverted to voicemail, callers can leave a voice message when you do not answer incoming calls.

To access your voicemail inbox and listen to voicemail messages:

1. In Idle mode, select **Phone** → **Keypad**, and tap and hold **1**.
2. Follow the instructions on the voicemail server.



You must save the voicemail server number before accessing the server. Your service provider can give you the number.

Google Mail™



You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and the unread messages display in bold. If you have labelled a message, its label appears in a coloured rectangle on the message.



- This feature might not be available in your region.
- This Google Mail menu might be labelled differently depending on your service provider.

To send an email message:




1. In Idle mode, select **Applications** → **Gmail**.
2. If you are launching this application for the first time, select **OK**.
3. Press [] → **Compose**.
4. Enter a name or address in the recipient field.



5. Enter a subject and message.
6. To attach an image file, press [] → **Attach** and select a file.
7. Select  to send the message.

To view email messages:

1. In Idle mode, select **Applications** → **Gmail**.
2. Select an email message.

In the message view, use the following options:

- **Reply:** Select  to reply to the message.
- **Reply to all:** Select  → **Reply all** to reply to the message including all recipients.
- **Forward:** Select  → **Forward** to forward the message to other recipients.
- **Preview:** Select **Preview** next to the attachment item to view the attachment.

- **Download:** Select **Download** to save the attachment on your phone.
- **Archive:** Select **Archive** to archive the message.
- **Delete:** Select **Delete** to delete the message.
- **Move to previous or next message:** Select  or  to view an older message.

Organize email by labels

You can organize your email by labelling your messages or adding stars to mark important messages. You can then sort messages by label filter.


To add a label to a message:

1. In the Inbox screen, tap and hold a message.
2. Select **Change labels**.
3. Select a label to add and select **OK**.

To add a star to a message:

1. In the Inbox screen, tap and hold a message.
2. Select **Add star**. The star icon next to the message is activated.

To filter messages:

1. In the Inbox screen, press [] → **Go to labels**.
2. Select the label of the messages that you want to view.

Email

You can send or view email messages using your personal or company email account.



To set up an email account:


1. In Idle mode, select **Applications** → **Email**.
2. Enter your email address and password.

3. Select **Next** (for general email accounts, such as Google Mail and Yahoo) or **Manual setup** (for other company email accounts).
4. Follow the on-screen instructions.

When you have finished setting up the email account, the email messages are downloaded to your phone. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one from which you want to retrieve messages.

To send an email message:

1. In Idle mode, select **Applications** → **Email**, select an email account and select .
2. Add the recipients of your message.
 - Enter email addresses manually, separating them with a semicolon or comma.
 - Select  and select email addresses from a list.

- To add more recipients, press [] → **Add Cc/Bcc**.
3. Select the subject field to enter a subject.
 4. Select the text input field to enter your email text.
 5. Select **Attach** and attach a file.

You can select an image, video, or sound clip.



You cannot attach Digital Rights Management (DRM) protected files.

6. Select **Send** to send the message.




If you are offline or outside your service area, the message will be held in the message thread list until you are online and in your service area.









To view email messages:

When you open an email account, you can view previously retrieved emails offline or connect to the email server to

view new messages. After you retrieve email messages, you can view them offline.

1. In Idle mode, select **Applications** → **Email** and select an email account.
2. Press [] → **Refresh** to update the message list.
3. Select an email message.

In the message view, use the following options:

- **Move to previous or next message:** Select  or .
- **Move message to another folder:** Select .
- **Delete the message:** Select .
- **Reply to the message:** Select  → **Reply**.
- **Forward the message:** Select  → **Forward**.
- **View an attachment:** Select  and select the attachment. To save it on your phone, select .


Google Talk™

You can send instant messages to your friends or family using Google Talk™.






This feature might not be available in your region or with your service provider.

To add friends to your Friends list:

1. In Idle mode, select **Applications** → **Talk**
The friend list shows all of your Google Talk contacts at a glance.
2. Press [] → **Add friend**.
3. Enter the email address of the friend and select **Send invitation**.

When your friend accepts the invitation, they are added to your friend list.

To start a chat:

1. In Idle mode, select **Applications** → **Talk**
2. Select a friend from the Friends list. The chat screen opens.
3. Enter your message and select **Send**.
To insert emoticons, press [] → **More** → **Insert smiley**.
4. To switch between active chats, press [] → **Switch chats**.
5. To end the chat, press [] → **End chat**.

Social Hub

You can access Social Hub™, the integrated communication application for email, messages, instant messages, contacts, or calendar information. Visit <http://socialhub.samsungmobile.com> for more details.

To access Social Hub:

1. In Idle mode, select **Applications** → **Social Hub**.
2. Check and use the contents delivered from the Social Hub.

IM

You can use IM to chat with friends and family using any of the universal instant messengers.

To use IM:

1. In Idle mode, select **Applications** → **IM**.
2. If you are launching this application for the first time, select the checkbox next to **I accept all the terms above** and select **Agree**.
3. Select **Add account** and select an instant messenger.
4. Enter your user name and password to sign in.
5. Chat with your friends and family instantly.

Camera

You can capture and view photos and videos. You can take photos at resolutions of up to 3264 x 2448 pixels (8 mega pixels) and videos at resolutions of up to 1920 x 1080 pixels.



 
- The camera automatically turns off if you do not use it for a specific amount of time.
- The memory capacity might differ depending on the shooting scene or shooting conditions.

Capturing photos

To capture a photo:

1. In Idle mode, select **Applications** → **Camera**.

2. Aim the lens at the subject and make any necessary adjustments.

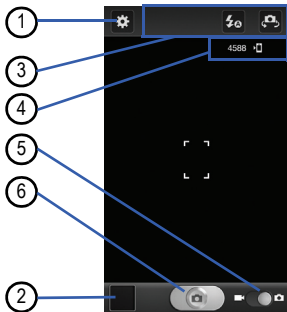

Number	Function
1	Change the camera settings.


Number	Function
2	Open the image viewer to view the photos you have captured.
3	Use the camera shortcuts. <ul style="list-style-type: none"> • : Change the flash setting. • : Switch between the front and rear camera lenses. You can add or remove shortcuts to frequently used options. ► p. 55
4	Check the camera status. <ul style="list-style-type: none"> • 4588: Total number of photos that can be taken (according to the available memory). • : Default storage location.
5	Switch to the camcorder.
6	Capture a photo.

3. Press the Volume key to zoom in or out.
You can also tap the screen with two fingers and spread

them apart (move your fingers closer together to zoom out).



The zoom function might not be available when you are shooting at the highest resolution.

4. In the preview screen, tap where you want to focus. The focus frame moves to the location that was tapped and changes to green when the subject is in focus.
5. Select  to take a photo. The photo is saved automatically.



After taking photos, select the image viewer icon to view the photos.

- **View more photos:** Scroll left or right.
- **Zoom in or out:** Place two fingers on the screen and spread them apart (move your fingers closer together to zoom out) or double-tap on the screen.
- **Send a photo to others:** Select **Share**.

- **Set a photo as wallpaper:** Select **Set as** to set a photo as wallpaper or as a caller ID image for a contact.
- **Delete a photo:** Select **Delete**.



To capture a photo using preset options for various scenes:

Your camera provides you with predefined settings for various scenes. You can select the proper mode for your shooting condition and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure.

1. In Idle mode, select **Applications** → **Camera**.
2. Select  → **Scene mode** and select a scene.
3. Make any necessary adjustments.
4. Select  to take a photo.



To capture a photo in Self shot mode:

You can conveniently take photos of yourself using the front camera lens.

1. In Idle mode, select **Applications** → **Camera**.
2. Select  → **Self shot**.
3. Make any necessary adjustments.
4. Select  to take a photo.

To capture a photo in Smile shot mode:



Your camera can recognise people's faces and help you to take photos of their smiling faces.

1. In Idle mode, select **Applications** → **Camera**.
2. Select  → **Shooting mode** → **Smile shot**.
3. Make any necessary adjustments.
4. Select .
5. Aim the camera lens at your subject.

Your phone recognizes people in an image and detects their smiles. When the subject smiles, the phone automatically takes a photo.



To capture a beauty photo:

You can hide facial imperfections using Beauty mode.

1. In Idle mode, select **Applications** → **Camera**.
2. Select  → **Shooting mode** → **Beauty**.
3. Make any necessary adjustments.
4. Select  to take a photo.

To capture a panoramic photo:



You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes.

1. In Idle mode, select **Applications** → **Camera**.
2.  → **Shooting mode** → **Panorama**.
3. Make any necessary adjustments.
4. Select  to take the first photo.

5. Slowly move the phone in any direction and align the green frame with the viewfinder.
When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.
6. Repeat Step 5 to complete the panoramic photo.

To capture a series of photos of action:



You can easily take a series of photos of moving subjects and then combine them into a single photo that shows the action. This is useful when you are photographing a sporting event or children at play.

1. In Idle mode, select **Applications** → **Camera**.
2. Select  → **Shooting mode** → **Action shot**.
3. Make any necessary adjustments.
4. Select  to capture the first photo.
5. Move the device to follow the moving subject. The phone automatically captures the next photos.

6. Continue to follow the subject until the phone has captured all of the necessary shots for the action photo.

To capture a photo in Cartoon mode:

You can take photos with cartoon effects.

1. In Idle mode, select **Applications** → **Camera**.
2. Select  → **Shooting mode** → **Cartoon**.
3. Make any necessary adjustments.
4. Select  to take a photo.

Customise the camera settings

Before taking a photo, select  to access the following options:

Option	Function
Self shot	Switch between the front and rear camera lenses.

Option	Function
Flash	Change the flash setting. You can manually turn the flash on or off or set the camera to automatically use the flash when needed.
Shooting mode	Change the shooting mode.
Scene mode	Change the scene mode.
Exposure value	Adjust the exposure value.
Focus mode	Take close-up photos or set the camera to automatically focus on the subject or on human faces.
Timer	Select the length of the delay before the camera takes a photo.
Effects	Apply special effects, such as sepia or black and white tones.
Resolution	Change the resolution option.


Option	Function
White balance	Adjust the colour balance according to the lighting conditions.
ISO	Adjust the sensitivity of the camera imaging sensor.
Metering	Select a type of exposure metre.
Outdoor visibility	Activate Outdoor visibility to select the appropriate lighting condition.
Anti-Shake	Reduce the blur caused by the phone's vibration or movement.
Auto contrast	Automatically adjust the contrast between your subject and the background.
Blink detection	Set the camera to alert you when people close their eyes.





Option	Function
Guidelines	Display the guidelines on the preview screen.
Review	Set the camera to display the taken image.
Image quality	Set the quality level for your photos.
GPS tag	Set the camera to include the location information for your photos. To use this feature, you must activate the location services. ► p. 93
Storage	Select a memory location for storing captured photos.
Reset	Reset menus and shooting options.

 Capturing video

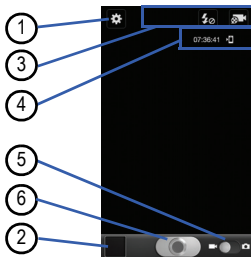To capture a video:

1. In Idle mode, select **Applications** → **Camera**.
2. Drag the slider in the bottom right corner to the camcorder icon to switch to the camcorder.
3. Aim the lens at the subject and make any necessary adjustments.





Number	Function
1	Change the camcorder settings.
2	Open the image viewer to view the videos you have recorded.
3	Use the camcorder shortcuts. <ul style="list-style-type: none"> • : Change the flash setting. • : Change the recording mode or switch between the front and rear camera lenses. You can add or remove shortcuts to frequently used options. ► p. 55
4	Check the camcorder status. <ul style="list-style-type: none"> • : The length of the video that can be recorded (according to the available memory). • : Default storage location.
5	Switch to the camera.
6	Record a video.

- Press the Volume key to zoom in or out.
You can also tap the screen with two fingers and spread them apart (move your fingers closer together to zoom out).



The zoom functionality might not be available when you are recording at the highest resolution.

- Select  to start recording.
- Select  to stop recording.
The video is saved automatically.




The camcorder might not be able to record videos properly to a memory card with a slow transfer speed.

After recording videos, select the image viewer icon to view the recorded videos.

- **View more videos:** Scroll left or right.

- **Send a video to others:** Select **Share**.
- **Play a video:** Select **Play**.
- **Delete a video:** Select **Delete**.

Customise the camcorder settings



Before capturing a video, select  to access the following options:

Option	Function
Flash	Change the flash setting. You can manually turn the flash on or off.
Recording mode	Change the recording mode.
Exposure value	Adjust the exposure level.
Timer	Select the length of the delay before the camera starts recording a video.
Effects	Apply a special effect, such as sepia or black and white tones.

Option	Function
Resolution	Change the resolution option.
White balance	Adjust the colour balance according to the lighting conditions.
Outdoor Visibility	Activate Outdoor visibility to select an appropriate lighting condition.
Video quality	Set the quality level for your videos.
Guidelines	Display the guidelines on the preview screen.
Review	Set the camera to display the recorded video.
Storage	Select a memory location for storing recorded videos.
Reset	Reset the menus and shooting options.

To edit the shortcut icons:

You can add or remove shortcuts to frequently used options.

1. From the preview screen, press [] → **Edit shortcuts** or tap and hold the shortcut area.
2. Tap and hold an icon in the option list and drag it to the shortcut area.
To remove shortcuts, tap and hold an icon and drag it to the option list.
3. Press [] to return to the preview screen.

Video Player



You can use the video player to play various kinds of videos. The video player supports the following file formats: 3gp, mp4, avi, wmv, flv, mkv (Codec: MP4, G4, H.263, H.263 Sorenson, H.264, VC-1, and DivX, XviD).









- Some file formats are not supported depending on the software of the phone.
- If the file size exceeds the available memory, an error can occur when you open files.

To play a video:

1. In Idle mode, select **Applications** → **Videos**.
2. Select the video that you want to play.
3. Rotate the phone counter-clockwise to switch to the landscape view.
4. Control the playback with the following icons:

Icon	Function
	Change a ratio of the video screen.
	Skip backward. Scan backward in a file (tap and hold).

Icon	Function
	Pause playback or select  to resume playback.
	Skip forward. Scan forward in a file (tap and hold).
	Activate the 5.1 channel surround sound system when a headset is connected.
	Adjust the volume.
	Stop the playback and return to the playlist.

Gallery

You can view photos and play videos saved in your phone's memory or on a memory card.



If your phone indicates that the memory is full when you access Gallery, delete some of the files using My Files or other file management applications and try again.

Supported File Formats



Your phone supports the following file formats:

Type	Format
Image	bmp, gif, jpg, and png
Video	3gp, mp4, avi, wmv, flv, mkv (Codec: MP4, G4, H.263, H.263 Sorenson, H.264, VC-1, and DivX, XviD).



- Avoid locking the phone's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented.
- Some file formats are not supported depending on the software of the phone.
- If the file size exceeds the available memory, an error can occur when you open files.

To view a photo in Gallery:



1. In Idle mode, select **Applications** → **Gallery**.
2. Select a folder.
3. To change the view mode, select  or  at the top right of the screen.
4. Select a photo (without an icon) to view.

While viewing a photo, use the following options:

- **View more photos:** Scroll left or right.
- **Zoom in or out:** Tap the screen with two fingers and spread them apart to zoom in (move your fingers closer together to zoom out).



If you activated the tilting motions, you can zoom in or out by tapping and holding two points with your fingers and then tilting the phone back and forth.

- **Send a photo to others:** Select **Send via**.
- **Set a photo as wallpaper:** Select **Set as** to set a photo as wallpaper or as a caller ID image for a contact.
- **Delete a photo:** Press [] → **Delete**.
- **Start a slideshow in the selected folder:** Press [] → **More** → **Slideshow**. Tap the screen to stop the slideshow.

To play a video in Gallery:













1. In Idle mode, select **Applications** → **Gallery**.
2. Select a video (with the  icon) to play.
3. Rotate the phone counter-clockwise to switch to the landscape view.
4. Control the playback with the virtual keys. ► p. 55

Photo Editor

You can edit photos and apply various effects.

1. In Idle mode, select **Applications** → **Photo editor**.
2. Select **Select picture** and select an image.
3. Select  → **New selection** → **OK**.
 - To add to or subtract from the selection border, select  → **Add to selection** or **Remove from selection**.

- To reverse the selection, select  → **Inverse selection**.
 - To change the selection size, select .
 - To rotate or flip the image, select .
 - To crop the image, select .
 - To undo or redo your last action, select  or .
4. Drag your finger over the area that you want to select.
 5. Select  to apply a colour effect or select  to apply a filter effect.
 6. Select a variation of the effect to apply.
 7. Adjust the image as needed (if necessary) and select **Done**.
 8. When you are finished, press [] → **Save**.

Video Maker

You can edit videos and apply various effects. The video editor supports the following video resolutions and codecs.



Type	Format
Resolutions	176 x 144, 320 x 240, 640 x 480, 720 x 480, 1280 x 720
Codecs	H.264, H.263, MPEG4




Some video files in the Gallery might not be viewable depending on the video resolutions and codecs.

To create a video:



1. In Idle mode, select **Applications** → **Video maker**.
2. Rotate the phone counter-clockwise to switch to the landscape view.
3. Select **New**.

4. Select a frame theme and select **Apply**.
5. Select an appropriate icon in the left pane of the screen to add media files.
6. Tap and hold a file and then drag it to the bottom pane of the screen and select **Done**.
 - To add more files, repeat Step 6.
 - To select the duration that an image displays, drag the image to the red line and select the Duration icon on the preview screen.
 - To delete images or videos, tap and hold an item and then drag it to the trash bin.
 - To rearrange the images or videos, tap and hold an item and drag it to a new location.
7. Select  and add a transition effect between the images or videos.
8. When you are finished, press [] → **Save**.

To trim a segment of a video:


1. Launch the video editor and add media files.
2. Select .
3. Drag an image or video to the red line.
4. Move the start bracket to the point at which you want the file to begin.
5. Move the end bracket to the point at which you want the file to end.
6. Save the edited video.

To split a video:

1. Launch the video editor and add media files.
2. Select .
3. Drag an image or video to the red line.
4. Move to the point at which you want to divide the file into two clips and select .

5. Save the edited video.

To apply an effect to a video:

1. Launch the video editor and add media files.
2. Select .
3. Drag an image or video to the red line.
4. Select an effect option.
5. Save the edited video.

Music

You can listen to music using the music player. The music player supports the following file formats: MP3, MP4, 3GP, WMA, OGG, WAV, AAC, AAC+, eAAC+, AMR, MIDI, SP-MIDI and i-melody.



- Some file formats are not supported depending on the software of the phone.
- If the file size exceeds the available memory, an error might occur when you open files.

To add music files to your phone:

Start by transferring files to your phone or memory card:

- Download from the web. ► p. 29
- Download from a PC with Samsung Kies. ► p. 94
- Receive using Bluetooth. ► p. 85
- Copy to your memory card. ► p. 94

To play music files:

1. In Idle mode, select **Applications** → **Music**.
2. Select a music category.
3. Select a music file.


4. Control playback with the following icons:


Icon	Function
	Adjust the volume.
	Activate the 5.1 channel surround sound system when a headset is connected.
	Activate Shuffle mode. (Displays when you tap the player screen.)
	Change the repeat mode (off, repeating a file, or repeating all files). (Displays when you tap the player screen.)
	Skip backward or scan backward in a file (tap and hold).
	Pause playback or select to resume playback.
	Skip forward or scan forward in a file (tap and hold).




- SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies.
- WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.


To create a playlist:

1. In Idle mode, select **Applications** → **Music**.
2. Select **Playlists**.
3. Press [] → **Create**.
4. Enter a title for the new playlist and select **Save**.
5. Select **Add music**.
6. Select the files that you want to include and select **Add**.

During playback, you can add files to a playlist by pressing [] → **Add to playlist**.

To add songs to the quick list:

You can add songs to the quick list and save them as a playlist. During playback, press [] → **Add to quick list** to add the current song to the quick list.

To go to the quick list, from the music player main screen, select **Playlists** → **Quick list**. To save the quick list as a playlist, press [] → **Save as playlist**.

To customise the music player settings:

1. In Idle mode, select **Applications** → **Music**.
2. Press [] → **Settings**.

3. Adjust the following settings to customise your music player:

Option	Function
Equalizer	Select a default equaliser type.
Sound effect	Select a sound effect.
Music menu	Select music categories to display on the music library screen.
Visualisation	Display an animated visualisation during playback.

Music Hub

You can access the online music store and search for and buy your favourite songs.



This feature might not be available depending on your region or service provider.

1. In Idle mode, select **Applications** → **Music Hub**.
2. If you are launching this application for the first time, select the checkbox next to **Do not show for 90 days** and select **Confirm**.
3. Search for songs and preview or buy your favourite songs.

FM Radio

You can listen to music and news on the FM radio. To listen to the FM radio, you must connect the supplied headset, which serves as the radio antenna.

To listen to the FM radio:

1. Plug the supplied headset into the phone.

 
2. In Idle mode, select **Applications** → **FM Radio**.
The FM radio automatically scans for and saves the available stations.



The first time you turn on the FM radio, it will start automatic tuning.

3. Select the radio station that you want to listen to from the all station list and press [↵] to return to the FM radio screen.

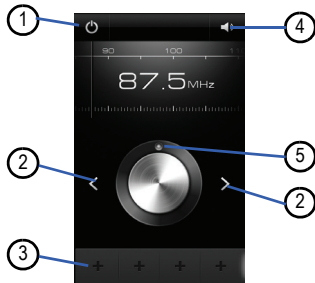

4. Control the FM radio with the following keys:



Number	Function
1	Turn the FM radio on or off.
2	Search for an available radio station.



Number	Function
3	Add the current radio station to the favourites list.
4	Adjust the volume.
5	Fine-tune the frequency.

To automatically save a radio station:


1. Plug the supplied headset into the phone.
2. In Idle mode, select **Applications** → **FM Radio**.
3. Press [] → **Scan** and select a scanning option. The FM radio automatically scans and saves available stations.
4. Select a radio station in the all station list and press [] to return to the FM radio screen.

To add a radio station to the favourites list:

1. Plug the supplied headset into the phone.

2. In Idle mode, select **Applications** → **FM Radio**.
3. Select  to turn on the FM radio.
4. Scroll to a radio station to which you want to listen.
5. Select  to add it to the favourites list.

To customise the FM radio settings:

1. In Idle mode, select **Applications** → **FM Radio**.
2. Press [] → Settings.
3. Adjust the following settings to customise your FM radio:

Option	Function
Region	Select your region.

Option	Function
Background playing	Set whether or not to run the FM radio in the background while using other applications. If this feature is on, you can control the FM radio from the shortcuts panel.
Show Station ID	Set whether or not to show the station ID on the FM radio screen. Station IDs are only available from radio stations that provide this information.
Alternative frequency	Set whether or not the FM radio attempts to retune a radio station when the signal is weak.
FM auto off	Set the FM radio to automatically turn off after a specified amount of time.

Game Hub

You can play social and premium games.

1. In Idle mode, select **Applications** → **Game Hub**.
2. If you are launching this application for the first time, select the checkbox next to **Do not show for 90 days** and select **Confirm**.
3. Select and install a game.
4. Follow the on-screen instructions.




- Available games might vary depending on your region or service provider.
- Controls and options in games might vary.

personal information

Contacts

You can use contact cards and groups to store personal information in the phone's memory or on a SIM card. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays, and more for your contacts.

To create a contact from the contact list:

1. In Idle mode, select **Contacts**.
2. Select .
3. Select a memory location. If you have more than one account, select the account to which you want to add the contact.
4. Enter the contact information.
5. Select **Save** to add the contact card to memory.

To create a contact from the dialer screen:

1. in Idle mode, select **Phone** → **Keypad**.

2. Enter a phone number.
3. Select **Add to Contacts** → **Create contact**.
4. Select a memory location. If you have more than one account, select the account to which you want to add the contact.
5. Enter the contact information.
6. Select **Save** to add the contact to memory.

To find a contact:


1. In Idle mode, select **Contacts**.
2. Scroll up or down in the contact list. You can also drag your finger along the index on the right side to quickly scroll through the list.
3. Select a contact's name.

Once you have found a contact, you can use the following options:

- **Call the contact:** Select  or .

- **Send a message:** Select .
- **Edit the contact information:** Press [] → **Edit**.



To set a speed dial number:

1. In Idle mode, select **Contacts**.
2. Press [] → **More** → **Speed dial setting**.
3. Select a location number and then select a contact.
4. Select a phone number (if necessary).



You can quickly dial this number by tapping and holding the location number in the dialling screen.

To create your namecard:

1. In Idle mode, select **Contacts**.
2. Press [] → **My profile**.
3. Press [] → **Edit**.
4. Enter your personal details.


5. Select **Save**.



You can send your namecard by attaching it to a message or email or by transferring it using Bluetooth.

To retrieve contacts from your community accounts:


You can view the list of community website accounts and select an account to add a contact from the website to your phone contacts.

1. In Idle mode, select **Contacts**.
2. Press [] → **More** → **View friends**.
3. Select an account.
4. Select contacts and select **Add**.

You can add comments to messages uploaded by your contacts and view their shared photos. In Idle mode, open the application list and select **Contacts**, select a contact, and select **Activities** or **Media**.

To create a group of contacts:


By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group.

1. In Idle mode, select **Contacts**.
2. Scroll left or right to **Groups**.
3. Press [] → **Create**.
4. Enter a name and select a ringtone for the group.
5. Select **Add member**, select the contacts that you want to add to the group, and select **Add**.
6. Select **Save**.

To copy contacts:


You can copy contacts from the SIM card to your phone.

1. In Idle mode, select **Contacts**.

2. Press [] → **Import/Export** → **Import from SIM card**.
3. Select a memory location. If you have more than one account, select the account to which you want to add the contact.
4. Select the contacts that you want to copy and select **Import** → **OK**.


To import contacts:

You can import contact files (in vcf format) from a memory card to your phone.

1. In Idle mode, select **Contacts**.
2. Press [] → **Import/Export** → **Import from SD card**.
3. Select a memory location. If you have more than one account, select the account to which you want to add the contact.

4. Select an option for importing a single contact file, multiple contact files, or all contact files, and select **OK**.
5. Select the contact files that you want to import and select **OK**.

To export contacts:


1. In Idle mode, select **Contacts**.
2. Press [] → **Import/Export** → **Export from SD card**.
3. Select **OK** to confirm.

Calendar

You can create and manage daily, weekly, or monthly events, and set alarms to remind yourself of important events.

To create an event:



1. In Idle mode, select **Applications** → **Calendar**.

2. Select **Tap to create event** or press [] → **Create**.
3. Enter the details of the event as required.
4. Select **Save**.

To change the calendar view:


1. In Idle mode, select **Applications** → **Calendar**.
2. Select a view mode at the top of the calendar.

To view events on a specific date:

1. In Idle mode, select **Applications** → **Calendar**.
2. Select a date on the calendar. In the month view, days with scheduled events are indicated by a small square. To move to a specific day by entering a date manually, press [] → **Go to**, enter the date by selecting + or -, and select **Set**.
To select today's date, press [] → **Today**.

3. Select an event to view its details.



You can send the event to others by pressing [] → **Send via** and selecting an option.

To stop an event alarm:


If you set an alarm for a calendar event, the event alarm icon will appear at the specified time.

1. Open the shortcuts panel from the top of the screen.
2. Select a reminder to view more details about the event.
3. To snooze or dismiss the reminder, select **Snooze all** or **Dismiss all**.


Task

You can record important information to save and view it at a later date.

To create a task:

1. In Idle mode, select **Applications** → **Task**.
2. Select **Create task** or press [] → **Create** to create a task.
3. Enter the details of the task.
4. Select **Save**.


To view a task:

1. In Idle mode, select **Applications** → **Task**.
2. Press [] → **List by** and select an option to sort the tasks.
3. Select a task to view its details.
For completed tasks with an expired deadline, you can set their status to completed by selecting the checkbox.




Memo

You can record important information to save and view later.

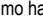To create a memo:

1. In Idle mode, select **Applications** → **Memo**.
2. If a memo has been saved, select **Create memo** or press [] → **Create** to create a memo.
3. Enter your memo text.
4. Select **Save**.

To view memos:

1. In Idle mode, select **Applications** → **Memo**.
2. Press [] → **Search** or press and hold [] to search for a memo (if necessary).
3. Select a memo to view its details.
To edit the memo, select .



You can send the memo to others by tapping and holding the memo and selecting **Send**.

Voice Recorder

You can use your phone's voice recorder to record and play voice memos.

To record a voice memo:

1. In Idle mode, select **Applications** → **Voice recorder**.
2. Select **Record** to start recording.
3. Speak into the microphone.
4. When you are finished, select **Stop**. Your memo is saved automatically.
5. To record more voice memos, select **Record** again.

To play a voice memo:

1. In Idle mode, select **Applications** → **Voice recorder**.
2. Select **List**.
3. Select the voice memo that you want to play.



You can send the voice memo to others by pressing [≡] → **Share**.

web

Internet

You can access and bookmark your favourite web pages.



- You might incur additional charges for accessing the web and downloading media. For details, contact your service provider.
- Available icons can vary depending on your region.

To browse web pages:

1. In Idle mode, select **Applications** → **Internet**. The preset homepage opens.
To access a specific web page, select the URL input field, enter the web address (URL) of the web page and select .



2. Navigate web pages using the following keys:















The screen above might be different on your phone, depending on your region and service provider.

Number	Function
1	Enter the web address of the web page that you want to access.
2	Open a list of saved bookmarks, frequently visited pages, and recent internet history.

While browsing web pages, you can use the following options:

- Zoom in or out:** Tap on the screen with two fingers and spread them apart (move your fingers closer together to spread them out).
- 
 If you activated the tilting motions, you can zoom in or out by tapping and holding two points with your fingers and then tilting the phone back and forth.
- Open a new window:** Press [] → **New Window**.


- **View currently active windows:** Press [] → **Windows**. You can open multiple pages and switch back and forth between them.
- **Adjust screen brightness:** Press [] → **Browser Brightness**. This feature might not be available, depending on your region.
- **Reload the current web page:** Press [] → **Refresh**.
- **Go to next page in history:** Press [] → **Forward**.
- **Bookmark the current web page:** Press [] → **More** → **Add bookmark**.
- **Add shortcut to current web page to the Idle screen:** Press [] → **More** → **Add shortcut to Home**.
- **Search for text on web page:** Press [] → **More** → **Find on page**.
- **View web page details:** Press [] → **More** → **Page info**.
- **Send web address (URL) of web page to others:** Press [] → **More** → **Share page**.
- **View download history:** Press [] → **More** → **Downloads**.
- **Customize browser settings:** Press [] → **More** → **Settings**.
- **Print current web page or screen:** Press [] → **More** → **Print** to print the current web page or screen using a connected printer. Your phone is only compatible with Samsung printers.

To search for information by voice:





This feature might not be available depending on your region or service provider.

1. In Idle mode, select **Applications** → **Internet**.
2. Select the URL input field.

3. Select  and say a keyword into your phone's microphone. The phone searches for information and web pages related to the keyword.

To bookmark your favourite web pages:

If you know the web address of the web page, you can manually add a bookmark.


1. In Idle mode, select **Applications** → **Internet**.
2. Select  → **Bookmarks**.
3. Select **Add** or press [] → **Bookmark last-viewed page**.
4. Enter a page title and a web address (URL).
5. Select **OK**.

In the bookmark list, tap and hold a bookmark and use the following options:


- **Open web page in current window:** Select **Open**.

- **Open web page in new window:** Select **Open in new window**.
- **Edit bookmark details:** Select **Edit bookmark**.
- **Add bookmark shortcut to Idle screen:** Select **Add shortcut to Home**.
- **Send web address (URL) to others:** Select **Share link**.
- **Copy web address URL:** Select **Copy link URL**.
- **Delete bookmark:** Select **Delete bookmark**.
- **Use web page as browser homepage:** Select **Set as homepage**.

To access frequently visited pages or recent history:

1. In Idle mode, select **Applications** → **Internet**.
2. Select  → **Most visited** or **History**.
3. Select a web page to access.



You can add a web page to the bookmark list by selecting .



Google Maps™








You can use Google Maps to find your location, search the online map for streets, cities, or countries, and get directions.





- This feature might not be available in your region.
- To use Google Maps, you must select **Applications** → **Settings** → **Location and security** → **Use wireless networks** or **Use GPS satellites**.





To search for a specific location:

1. In Idle mode, select **Applications** → **Maps**.
2. If you are launching this application for the first time, select **OK**. The map will display your current location.
3. Press [] → **Search**.
4. Enter a keyword for the location and select .

- **View a list of all search results:** Select .
- **Search for location by voice:** Select .
- **Zoom in or out:** Select  or .
- **Search for places around you:** Select .
- **Add layers to map:** Select .
- **View current location:** Select .

To get directions to a specific destination:


1. In Idle mode, select **Applications** → **Maps**.
2. Press [] → **Directions**.
3. Enter the addresses of the starting location and the ending location.
To enter an address from your contact list or to point to a location on the map, select  → **Contacts** or **Point on map**.
4. Select a travel method (car, bus, or walk) and select **Go**.
5. Select a travel route to view the details of your trip (if necessary).


6. Select . The route is indicated on the map. To view only a single part of the route, select  or .
7. When you are finished, press [] → **Clear Map**.

Latitude

To share your location using Google Latitude™:

You can share your location with your friends and view your friend's locations using Google Latitude™.

1. In Idle mode, select **Applications** → **Latitude**. The phone automatically joins Latitude.
2. Select  → **Select from contacts** or **Add via email address**.
3. Select the friends that you want to add or enter an email address and select **Add friends**.
4. Select **Yes**. When your friend accepts your invitation, you can share locations.



5. Press [] → **See map**. Your friends' locations are indicated by their photos on the map.

Places

You can search for a place around you.



This feature might not be available depending on your region or service provider.

1. In Idle mode, select **Applications** → **Places**.
2. Select a category. Your phone searches for places around your current location that are related to the selected category.
3. Select a place name to view its details.
4. To view the place on the map, select . To view the route to the place, select .

Navigation

You can use the GPS navigation system to find and show your destination with voice guidance.



This feature might not be available depending on your region or service provider.

1. In Idle mode, select **Applications** → **Navigation**.
2. If you are launching this application for the first time, select **Accept**.
3. Enter your destination using one of the following methods:
 - **Speak Destination:** Speak your destination (e.g., “Navigate to destination”).
 - **Type Destination:** Enter your destination using the virtual keypad.
 - **Contacts:** Select your destination from the addresses of your contacts.

- **Starred Places:** Select your destination from your list of starred places.

Google Search

You can search for information on your phone or on websites using the Google Search service. The Google Search bar is added to your Idle screen by default.

1. In Idle mode, select **Applications** → **Google Search**.
2. Enter a keyword to search for.
3. Select the item's name in the results list.

YouTube™

YouTube is a free online video streaming service. You can view and share videos using YouTube.



This feature might not be available depending on your region or service provider.

To watch videos on YouTube:





1. In Idle mode, select **Applications** → **YouTube**.
2. If you are launching this application for the first time, select **Accept**.
3. Select a video in the list.
4. Rotate the phone counter-clockwise to switch to the landscape view.
5. Control playback using the icons on the screen.

To share videos on YouTube:

1. In Idle mode, select **Applications** → **YouTube**.
2. Select a video.
3. Select **More** → **Share** and select an option.

To upload videos to YouTube:

1. In Idle mode, select **Applications** → **YouTube**.

2. Press [] → **Upload** and select a video. Skip to Step 8.
If you want to upload new videos, select  to turn on the camera.
3. Aim the lens at the subject and make any adjustments.
4. Select  to start recording.
5. Select  to stop recording.
6. Select **Save** to upload the video that you have recorded.
7. Enter your user name and password and select **Sign in** (if necessary).
8. Enter the details of the upload and select **Upload**.

Samsung Apps

Samsung Apps allows you to simply and easily download an abundance of applications directly to your phone. Featuring a wealth of games, news, references, social networking,

navigation, health related applications, etc. Samsung Apps gives you instant access to a huge choice of mobile experience.

Your phone gets smarted with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better.



- This feature might not be available depending on your region and service provider.
- For details, please visit www.samsungapps.com.

1. In Idle mode, select **Applications** → **Samsung Apps**.
2. Search for an download applications as required.

Market

You can download games, ringtones, or other applications from the Android Market.



This feature might not be available depending on your region and service provider.

1. In Idle mode, select **Applications** → **Market**.
2. Search for a file and download it to the phone. ► p. 28

Readers Hub

You can use the integrated Readers Hub to access various reading materials.



This feature might not be available depending on your region and service provider.

1. In Idle mode, select **Applications** → **Readers Hub**.
2. If you are launching this application for the first time, select the checkbox next to **Skip this screen for 90 days** and select **Confirm**.

3. Select an image of reading material.
4. Search for and download reading material from the online store.


News & Weather

You can view weather information and read top news and other stories.

To view the weather information:

1. In Idle mode, select **Applications** → **News & Weather**.
2. Select **Weather** at the top of the screen. Your phone searches for your current location and displays the current weather information.




You can change the location to view the weather information for another region. Press [] → **Settings** → **Weather settings** and clear the checkbox next to **Use my location**. Then select a location in **Set location**.

To read news articles:

1. In Idle mode, select **Applications** → **News & Weather**.
2. Scroll left to a news topic at the top of the screen.
3. Select an article to open it.



To add news topics, press [] → **Settings** → **News settings** → **Select news topics**.

Zoom Pass

You can securely send and receive money using your phone.

1. In Idle mode, select **Applications** → **Zoom Pass**.
2. Follow the instructions on the screen.

connectivity

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10 metres without requiring a physical connection.

You do not need to line up the phones to beam information with Bluetooth. If the phones are within range of one another, you can exchange information between them even if they are located in different rooms.



- Samsung is not responsible for the loss, interception, or misuse of data sent or received using the Bluetooth wireless feature.
- Always ensure that you share and receive data with phones that are trusted and properly secured. If there are obstacles between the phones, the operating distance might be reduced.

- Some devices, especially those that are not tested or approved by Bluetooth SIG, might not be compatible with your phone.

To turn on the Bluetooth wireless feature:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Bluetooth settings**.
2. Select **Bluetooth** to turn on the Bluetooth wireless feature.

To find and pair with other Bluetooth-enabled phones:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Bluetooth settings** → **Search for devices**.
2. Select a device.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN (if it has one), and select

OK. Alternatively, select **Accept** to match the PIN between your phone and the device.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services.



Some devices, especially headsets or hands-free car kits, might have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

To send data using the Bluetooth wireless feature:

1. Select a file or item, such as a contact, calendar event, memo, or media file, from an appropriate application or from **My files**.
2. Select an option for sending data via Bluetooth.



The method of selecting an option might vary by data type.

3. Search for and pair with a Bluetooth-enabled device.

To receive data using the Bluetooth wireless feature:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Bluetooth settings** → **Visible**.
Your phone is visible to other Bluetooth phones for 120 seconds.
2. When prompted, enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
3. Select **Accept** to confirm that you are willing to receive data from the device.

Received data is saved to the Bluetooth folder. If you receive a contact, it is automatically saved to the phonebook.

Wi-Fi

You can use your phone's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.



Your phone uses non-harmonised frequency and therefore some countries might restrict the use of a WLAN.

To activate the WLAN feature:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings** → **Wi-Fi**.



An active WLAN running in the background will consume battery power. To preserve battery power, only activate the WLAN when needed.

To find and connect to a WLAN:

- In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**.

The phone will automatically search for available WLANs.

2. Select a network under **Wi-Fi networks**.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

To add a WLAN manually:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings** → **Add Wi-Fi network**.
2. Enter the SSID for the network and select the security type.
3. Set the security settings depending on the selected security type.

4. Select **Save**.

To connect to a WLAN using a Wi-Fi Protected Setup (WPS):

Using WPS, you can connect to a secured network.

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Select **WPS button connection**.
3. Press a WPS button on the access point within 2 minutes.


To connect to a WLAN with a WPS PIN:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi settings**.
2. Select a network indicated by the WPS icon and select **WPS PIN**.
3. At the access point, enter the PIN and press the start button.

Wi-Fi Direct

You can use the WLAN Direct feature to connect to devices via a WLAN without requiring an access point.

To connect your phone to another WLAN device:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Wi-Fi Direct settings** → **OK** → **Wi-Fi Direct**.
2. Press [] → **Scan**.
3. Select a phone and select **Connect**. When the owner of the other phone accepts the connection, pairing is complete.
4. To deactivate the WLAN Direct feature, select **Disconnect Wi-Fi Direct**.

To send data via a WLAN:

1. Select a file or item, such as a memo, media file, or web address, from an appropriate application or from **My files**.
2. Select an option for sending data via a WLAN.



The method of selecting an option might vary by data type.

3. Search for and select a WLAN device.

To receive data via a WLAN:

When prompted, select **OK** to confirm that you are willing to receive data. Received data is saved to the ShareViaWiFi folder.

AllShare

You can use the Digital Living Network Alliance (DLNA) service to share media files between DLNA-enabled phones in your home over a WLAN.

You must first activate the WLAN feature and add a WLAN profile. ► p. 87

To customise DLNA settings for sharing media files:

To allow other DLNA-enabled phones to access media files on your phone, you must activate media sharing.



Some files might not play on the DLNA-enabled phones depending on the phones.

1. In Idle mode, select **Applications** → **AllShare**.
2. Press [] → **Settings**.

3. Adjust the following settings to customise the DLNA feature:

Option	Function
Device name	Enter a name for your phone as a media server.
Share video	Turn on video sharing with other DLNA-enabled phones.
Share picture	Turn on image sharing with other DLNA-enabled devices.
Share audio	Turn on music sharing with other DLNA-enabled devices.
Upload from other device	Set whether or not to accept the upload from other device.
Default memory	Select the default memory location for saving downloaded media files.
Subtitles	Set to display subtitles.

To play your files on another DLNA-enabled phone:

1. In Idle mode, select **Applications** → **AllShare**.
2. Select **My device**.
3. Select a media category and a file.
4. Select a player (the one that will play the media file). Playback begins on the selected player.
5. Control playback using the icons on your phone.



Playback might be buffered, depending on the network connection and the connected server.

To play files from one phone on another phone:

1. In Idle mode, select **Applications** → **AllShare**.
2. Select **Remote device**.
Your phone automatically searches for DLNA-enabled phones.

3. Select a phone as the media server (the one that contains media files).
4. Select a media category and a file.
5. Select a player (the one that will play the media file). Playback begins on the selected player.
6. Control playback using the icons on your phone.

Mobile Network Sharing

You can use your phone as a wireless modem or wireless access point for PCs or other devices and share your phone's mobile network connection.

To share your phone's mobile network via WLAN:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Tethering and portable hotspot**.
2. Select **Portable Wi-Fi hotspot settings** → **OK**.

3. Select **Portable Wi-Fi hotspot** to activate the WLAN hotspot.
4. Select **Configure portable Wi-Fi hotspot** to customise the WLAN hotspot.

Option	Function
Network SSID	View and edit the phone name that will be shown to external devices.
Security	Select the security type.

5. When you are finished, select **Save**.
6. From another phone, locate your phone's name in the available connection list and connect to the network. Your phone shares the mobile network connection on the other phone.

To share your phone's mobile network via USB:

1. Using a PC data cable, connect the multifunction jack on your phone to a PC.

2. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **Tethering and portable hotspot**.
3. Select **USB tethering** to activate the USB tethering feature.
Your phone shares the mobile network connection on your PC.
To stop sharing the network connection, clear the checkbox next to **USB tethering**.



The sharing method for the network connection might differ depending on your PC's operating system.

GPS

Your phone is equipped with a global positioning system (GPS) receiver. You need to activate the location services to use the GPS.

To receive better GPS signals, avoid using your phone in the following conditions:

- Between buildings, in tunnels or underground passages, or inside buildings.
- In poor weather.
- Around high voltage or electromagnetic fields.



Do not touch the internal antenna area or cover this area with your hands or other objects while using GPS functions.



This feature might not be available depending on your region or service provider.

To activate location services:

You must activate the location services to receive location information and search the map.

1. In Idle mode, select **Applications** → **Settings** → **Location and security**.

2. Adjust the following settings to activate the location services:

Option	Function
Use wireless networks	Set to use WLAN and/or mobile networks to find your location.
Use GPS satellites	Set to use the GPS satellite to find your location.
Use sensor aiding	Use sensors to enhance pedestrian positioning when the GPS signal is obstructed. There might be variations between the sensor estimates and your actual location.

PC Connections

You can connect your phone to a PC with an optional PC data cable in various USB connection modes. By connecting

the phone to a PC, you can transfer data to and from your phone directly and use the Samsung Kies program.

To connect with Samsung Kies:

Ensure that Samsung Kies is installed on your PC. You can download the program from the Samsung website (www.samsung.com).

1. Using a PC data cable, connect the multifunction jack on your phone to the PC.
Samsung Kies will launch automatically.
If Samsung Kies does not launch automatically, double-click on the Samsung Kies icon on your PC.
2. Copy files from the PC to your phone.
Refer to the Samsung Kies help for more information.

To connect as a mass storage phone:

You can connect your phone to a PC as a removable disk and access its file directory. If you insert a memory card into

the phone, you can access the file directory of the memory card using the phone as a memory card reader.



The file directory of the memory card will appear as a removable disk, separate from the internal memory.

1. If you want to transfer files to or from a memory card, insert a memory card into the phone.
2. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **USB utilities** → **Connect storage to PC**.
3. Select **OK** to confirm (if necessary).
4. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
5. When connected, select **Connect USB storage**.
6. Select **OK** to confirm (if necessary).
7. Open the folder to view the files.

8. Copy files from the PC to the memory card.
9. When you are finished, select **Disconnect storage from PC**.



To disconnect the phone from the PC, click the USB phone icon in the Windows task bar and select the option to safely remove the mass storage phone. Then remove the PC data cable from the PC. Otherwise, you might lose data stored on the memory card or damage the memory card.

VPN connections

You can create virtual private networks (VPN) and connect to your private network securely through a public network, such as the internet.



Your phone should already be configured with internet access. If you have trouble accessing the internet, you need to edit the connections. If you are not sure about what connection information to enter, ask your service provider.

To set up VPN connections:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **VPN settings** → **Add VPN**.
2. Select a VPN type.
3. Customise the connection information.




Available options might vary depending on the VPN type.

Option	Function
VPN name	Enter the name of the VPN server.

Option	Function
Set VPN server	Enter the IP address of the VPN server.
Enable Encryption	Set to encrypt the VPN server.
Set IPsec pre-shared key	Enter a pre-shared key.
Enable L2TP secret	Set to use the L2TP secret password.
Set L2TP secret	Enter the L2TP secret password.
Set user certificate	Select a user certificate that the VPN server uses to identify you. You can import certificates from the VPN server or download them from the web.

Option	Function
Set CA certificate	Select a certificate authority (CA) certificate that the VPN server uses to identify you. You can import certificates from the VPN server or download them from the web.
DNS search domains	Enter the domain name server (DNS) address.

4. When you are finished, press [] → **Save**.


To connect to a private network:

1. In Idle mode, select **Applications** → **Settings** → **Wireless and network** → **VPN settings**.
2. Select a private network to which to connect.
3. Enter the user name and password and select **Connect**.

Clock


You can set and control alarms for important events and set various world clocks. You can also use the stopwatch and the desk clock.


To set a new alarm:

1. In Idle mode, select **Applications** → **Clock** → **Alarm**.
2. Select **Create Alarm** or press [] → **Create**.
3. Set the alarm details.
Select the checkbox next to **Smart alarm** to activate simulated nature sounds with the alarm screen before the main alarm.
4. When you are finished, select **Save**.


To stop an alarm:

When an alarm sounds:



- To stop the alarm, drag  to the right.

- To repeat the alarm after a specified length of time, drag  to the left.

To delete an alarm:

1. In Idle mode, select **Applications** → **Clock** → **Alarm**.
2. Press [] → **Delete**.
3. Select the alarms that you want to delete.
4. Select **Delete**.

To create a world clock:

1. In Idle mode, select **Applications** → **Clock** → **World clock**.
2. Select **Add city** or press [] → **Add**.
3. Enter a city name or select one from the city list.
To select a city in the world map view, select .
4. To add more world clocks, repeat Steps 2 and 3.




To apply the summer time to the clocks, tap and hold a clock and select **DST settings**.

To use the stopwatch:


1. In Idle mode, select **Applications** → **Clock** → **Stopwatch**.
2. Select **Start** to begin the stopwatch.
3. Select **Lap** to record lap times.
4. When you are finished, select **Stop**.
5. Select **Reset** to clear the recorded times.

To use the count-down timer:

1. In Idle mode, select **Applications** → **Clock** → **Timer**.
2. Set the length of time to count down.
3. Select **Start** to begin the countdown.
4. When the timer expires, drag  to the right.

To use the desk clock

The desk clock displays the current time and date and the weather.

1. In Idle mode, select **Applications** → **Clock** → **Desk clock**.
2. Press [] → **Settings**.
3. Change the following options:

Option	Function
Time/Calendar display	Set to display the clock or calendar.
AccuWeather	Set to display the weather for your current location. You can also set the desk clock to be automatically updated with the latest information and select a temperature unit.

Option	Function
Reset to default	Reset the desk clock settings to the factory default values.
Dock settings	Set to use the connected dock's speaker when your phone is connected to a car of desktop dock.


Calculator

You can perform mathematical operations directly on your phone, similar to using a hand-held or desktop calculator.



To perform a calculation

1. In Idle mode, select **Applications** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.



Rotate the phone counter-clockwise to the landscape view to use the scientific calculator. If you deactivated auto rotation, press [] → **Scientific calculator**.

To view the calculation history

1. In Idle mode, select **Applications** → **Calculator**.
2. Perform the calculation.
3. Select  to close the calculator keypad. The calculation history appears.
4. To clear the history, press [] → **Clear history**.

Downloads

You can open and manage files that you have downloaded from the web and email.

1. In Idle mode, select **Applications** → **Downloads**.
2. Select a download folder.

3. To open a file, select the file.
To delete a file, select the checkbox and then select **Delete**.

Kies air

Kies air allows you to connect a PC to your phone via a WLAN. From the PC browser, you can view and control media files, contacts, messages, and any other data saved on your phone.

To customise the Kies air settings:

1. In Idle mode, select **Applications** → **Kies air**.
2. Press [] → **Settings**.

3. Change the following options:

Option	Function
Access request	Set to receive authorization requests from other devices while your device is connected to a PC.
Enable visibility	Set the device to be visible on a PC.
Time-out	Select the length of time that the phone waits before ending the connection.
Lock contents	Select the types of data that should not display on the PC browser.
Reset settings	Reset your settings to the factory default values.

To connect a PC to your phone via a WLAN:

- In Idle mode, select **Applications** → **Kies air** → **Start**.
- Enter the web address displayed by Kies air in the browser on your PC.
When connected, you will see your phone's data on the PC's web browser.
- To end the connection, select **Stop**.

Mini Diary

You can keep a photo diary on your phone.


To create a Mini Diary:

- In Idle mode, select **Applications** → **Mini Diary**.
- Select **Create diary** to create a new entry.
- Change the date and set the weather (if necessary).
- Select **Tap to add photo** and add an image or use the camera to capture a photo.
- Select **Tap to add text**, enter the text, and select **Done**.
- Select **Save**.

To view a Mini diary:

1. In Idle mode, select **Applications** → **Mini Diary**.
2. Select a diary.




To upload a mini diary to your community website, press [] → **Publish**.

My Files

You can quickly and easily access all of your images, videos, music, sound clips, and other types of files stored in your phone and on a memory card.

1. In Idle mode, select **Applications** → **My Files**.
2. Select a folder and then select a file.

In a folder, press [] to use the following options:



- **Send a file to others:** Select **Share**.
- **Create a new folder:** Select **Create folder**.

- **Delete files or folders:** Select **Delete**.
- **Change view mode:** Select **View by**.
- **Sort files or folders:** Select **List by**.
- **Use additional features using a file:** Select **More** to use additional features, such as moving, copying, or renaming files.

Polaris Office

You can view and edit document files on your phone and on a memory card.

To create a document:

1. In Idle mode, select **Applications** → **Polaris Office**.
2. Select  and select a document type.
3. Enter the contents of the document.
4. When you are finished, press [] → **Save**.

5. Enter a name for the document and select the saving location.
6. Select **Save**.

To open a document:

1. In Idle mode, select **Applications** → **Polaris Office**.
2. Select **My Files** and then select a document.

Task Manager

With the task manager, you can view currently running applications and memory information.

1. In Idle mode, select **Applications** → **Task manager**.
2. Use the following options:
 - **View list of currently running applications:** Select **Active applications** to view a list of all of the applications currently running on your phone.

- **Amount of memory used by applications:** Select **Downloaded** to view the total amount of memory used by applications installed on your phone.
- **Manage RAM on phone:** Select **RAM** to check and manage the RAM on your phone.
- **View used and available memory:** Select **Storage** to view the used and available memory on your phone and memory card.
- **View help information:** Select **Help** to view help information about extending the battery life.

Voice Commands

Your phone provides an intelligent voice command feature that turns your voice commands into action. You can dial a number, send a message, search for locations or information, or complete other tasks by speaking into your phone.

1. In Idle mode, select **Applications** → **Voice command**.

2. If you are launching this application for the first time, read the help information, and select **Next** → **I Agree** → **Finish**.
3. Select **Tap & Speak**.
4. Say a command into the microphone.

Voice Search

You can use the voice command feature to dial a number, send a message, or search for locations and information by voice.



This feature might not be available depending on your region or service provider.

1. In Idle mode, select **Applications** → **Voice Search**.
2. Select **Speak now**.
3. Say a command into the microphone.

Voice Talk

You can use the voice command feature provided by Voice talk to dial a number, send a message, write a memo, or complete other tasks by speaking into your phone.

1. In Idle mode, select **Applications** → **Voice talk**.
2. If you are launching this application for the first time, select **Continue** → **Get Started**.
3. Select **Tap & Speak**.
4. Say a command into the microphone.

Self serve

You can get your account balance, top up your balance, and add features to your service plan.

1. In Idle mode, select **Applications** → **Self serve**.
2. Follow the onscreen commands.

settings

Settings

To access the Settings menu:

1. In Idle mode, select **Applications** → **Settings**.
2. Select a setting category and then select an option.

Wireless and Network

Change the settings for wireless network connections.

Flight mode

Disable all wireless functions on your phone. You can only use non-network services.

Wi-Fi settings

- **Wi-Fi:** Turn the WLAN feature on or off. ► p. 87
- **Network notification:** Set the phone to notify you when an open network is available.

- **WPS button connection:** Connect to a WLAN using a Wi-Fi Protected Setup (WPS) button.
- **Add Wi-Fi network:** Add WLAN APs manually.

Wi-Fi Direct settings

- **Wi-Fi Direct:** Activate the WLAN Direct feature to connect two devices via a WLAN without requiring an access point. ► p. 89
- **Configure Wi-Fi Direct:** View or edit the name and password for your device.
- **Status:** View the connection status.
- **Disconnect Wi-Fi Direct:** Deactivate the WLAN Direct feature.

Kies via Wi-Fi

Connect your phone to Samsung Kies via a WLAN.

Bluetooth settings

- **Bluetooth:** Turn the Bluetooth wireless feature on or off.
► p. 85
- **Device name:** Set a Bluetooth name for your phone.
- **Visible:** Set your phone to be visible to other Bluetooth phones.
- **Search for devices:** Search for available Bluetooth devices.

USB utilities

Connect your phone to a PC as a mass storage device. ► p. 94

Tethering and portable hotspot

- **USB tethering:** Activate the USB tethering feature to share your phone's mobile network connection with PCs

via USB. When connected to a PC, your phone is used as a wireless modem for a PC. ► p. 92

- **Portable Wi-Fi hotspot settings:**
 - **Portable Wi-Fi hotspot:** Activate the Portable WLAN hotspot feature to share your phone's mobile network connection with PCs or other devices through the WLAN feature. ► p. 91
 - **Configure portable Wi-Fi hotspot:** Configure network settings for your WLAN hotspot.
- **Help:** Learn about more USB and WLAN tethering.

VPN settings

Set up and manage Virtual Private Networks (VPNs).
► p. 95

Mobile networks


- **Use packet data:** Set to allow packet switched data networks for network services.

- **Data roaming:** Set the phone to connect to another network when you are roaming or when your home network is not available.
- **Access Point Names:** Set up access point names (APNs).
- **Network mode:** Select a network type.
- **Network operators:** Search for available networks and select a network for roaming.

Call

Customize the settings for calling features.

- **Call rejection:** Set to reject calls from specified phone numbers automatically. You can add phone numbers to the reject list. ► p. 33
- **Set reject messages:** Add or edit the message that will be sent when you reject a call.
- **Call alert:**

- **Outgoing call vibration:** Set the phone to vibrate when the other party answers the call.
- **Call status tones:** Activate or deactivate the call connection tone, minute minder tone, or call end tone.
- **Alerts on call:** Select how the phone will alert you to events during a call.
- **Call answering/ending:**
 - **Answering key:** Set the phone to answer calls by pressing [].
 - **Automatic answering:** Set to answer automatically after a specified period (only available when a headset is connected).
 - **The power key ends calls:** Set the phone to end a call when you press the Power/Lock key.
- **Turns on proximity sensor:** Set to turn on the proximity sensor during a call.
- **Call forwarding:** Divert incoming calls to another number.
- **Additional settings:**
 - **Caller ID:** Display your caller ID to other parties for outgoing calls.
 - **Call barring:** Block incoming or outgoing calls.
 - **Call waiting:** Activate call waiting to receive an incoming call when you are already on a call.
 - **Auto redial:** Activate auto redial for automatically redialling a call that was not connected or was cut off during a call.
- **Video call image:** Select an image to be shown to the other party.
- **Own video in received call:** Set whether or to show your live image or preset image to the other party.
- **Use call fail options:** Select whether or not to retry a voice call when a video call fails to connect.

- **Voicemail service:** Select your service provider or set another provider to receive voicemail messages.
- **Voicemail:** Enter the number to access the voicemail service. You can obtain this number from your service provider.

Sound

Change the settings for various sounds on your phone.

- **Silent mode:** Activate silent mode to mute all sounds, except for media sounds and alarm ringtones.
- **Vibration:** Set when the phone will vibrate for various events.
- **Volume:** Adjust the volume level for incoming call ringtones, media, phone system sounds, and notification ringtones.
- **Phone ringtone:** Select a ringtone to alert you to incoming voice calls.
- **Video call ringtone:** Select a ringtone to alert you to incoming video calls.
- **Notification ringtone:** Select a ringtone to alert you to events, such as incoming messages, missed calls, and alarms.
- **Audible touch tones:** Set the phone to sound when you touch the keys on the dialling screen.
- **Audible selection:** Set the phone to sound when you select an application or option on the touch screen.
- **Screen lock sounds:** Set the phone to sound when you lock or unlock the touch screen.
- **Haptic feedback:** Set the phone to vibrate when you touch the keys.
- **Vibration intensity:** Adjust the vibration intensity of the haptic feedback.

Display

Change the settings for the display.

- **Screen display:**

- **Font style:** Change the font type for the display text. You can download fonts from Android Market by selecting **Get fonts online**.

- **Home screen:**

- **Wallpaper:** Select a background image for the Idle screen.


- **Lock screen:**

- **Wallpaper:** Select an image to display when the screen is locked.
- **Clock position:** Select the location of the clock on the locked screen.

- **Brightness:** Set the brightness of the display.

- **Background effect:** Select a display mode.

- **Auto-rotate screen:** Set whether or not to rotate the content automatically when the phone is rotated.
- **Animation:** Set the phone to display animation when you switch between windows.
- **Screen time-out:** Set the length of time the phone waits before turning off the display's backlight.
- **Touch key light duration:** Set the duration for the touch key backlight.
- **Auto adjust screen power:** Set to save power by adjusting the brightness of the display.
- **Horizontal calibration:** Calibrate the accelerometer to adjust the horizontal axis of the phone for better motion recognition.

- **Gyro sensor calibration:** Calibrate the gyroscope so that your phone can correctly recognize rotation.
- 
- Place the phone on a stable surface during calibration. The calibration process might fail if the phone vibrates or moves during calibration.
 - Calibrate the gyroscope when tilting or panning motions, or motion-enabled games show drifting or unintended movements.

Power Saving Mode

- **Use Power saving mode:** Automatically activate Power saving mode when the battery is low.
- **Power saving mode on at:** Select a power level for Power saving mode.
- **Turn off Wi-Fi:** Deactivate the WLAN feature when the device is not connected with a WLAN AP.

- **Turn off Bluetooth:** Deactivate the Bluetooth feature when not in use.
- **Turn off GPS:** Deactivate the GPS feature when not in use.
- **Turn off Sync:** Turn off sync when the phone is not synchronising with the web server.
- **Brightness:** Set the brightness of the display.
- **Screen time-out:** Set the length of time that the phone waits before turning off the phone's backlight.
- **Power saving tips:** Learn how to reduce battery consumption.

Location and Security

Change the settings for securing your phone and the SIM card, and GPS functionality.

- **Use wireless networks:** Set to use WLAN and/or mobile networks to find your location.

- **Use GPS satellites:** Set to use the GPS satellite to find your location.
- **Use sensor aiding:** Set to use sensors to enhance pedestrian positioning when the GPS signal is obstructed. There might be variations between the sensor estimates and your actual location.
- **Set up screen lock:** Set the unlock security code. When you have set your security code, this option changes to **Change screen lock**.
 - **None:** Disable the screen lock.
 - **Pattern:** Set an unlock pattern to unlock the screen.
 - **PIN:** Set a PIN (numeric) to unlock the screen.
 - **Password:** Set a password (alphanumeric) to unlock the screen.
- **Set up SIM card lock:**
 - **Lock SIM card:** Activate or deactivate the PIN lock feature to require the PIN before using the phone.
 - **Change SIM PIN:** Change the PIN used to access the SIM data.
- **SIM Change Alert:** Activate or deactivate the mobile tracker feature that helps you locate your phone when it is lost or stolen. ► p. 24
- **Alert message recipients:** Add or edit recipients for the alert message.
- **Remote functions:** Set to control a lost phone remotely via the web.
- **Visible passwords:** By default, the phone displays your password as ●●● for security. Set the phone to display your password as you enter.
- **Select device administrators:** View the device administrators that are installed on your phone. You can activate device administrators to apply new policies to your phone.
- **Use secure credentials:** Use certificates and credentials to ensure the use of various applications.

- **Install from USB storage:** Install encrypted certificates that are stored in the USB storage.
- **Set password:** Create and confirm a password for accessing credentials.
- **Clear storage:** Erase the credential contents from the phone and reset the password.

Applications

Change the setting for managing installed applications.

- **Unknown sources:** Select to download applications from any source. If you do not select this option, you can only download applications from the Android Market.
- **Manage applications:** Access the list of the applications installed on the phone and check the application information.
- **Running services:** View the services that you are using and access them to manage them.

- **Memory usage:** View the available memory and the memory used by applications on your phone.
- **Battery usage:** View the amount of power consumed by your phone.
- **Development:**
 - **USB debugging:** Select to connect your phone to a PC using a PC data cable. This is for application development.
 - **Allow mock locations:** Allow mock locations and service information to be sent to a Location Manager service for testing. This is for application development.
- **Samsung Apps:** Select a network connection (Wi-Fi or packet switched data network) to get notifications about new applications from Samsung Apps.



This feature might not be available depending on your region or service provider.

Accounts and Sync

Change the settings for the auto sync feature or manage accounts for synchronisation.

- **Background data:** Select this setting to use the auto sync feature. The auto sync will run in the background without opening applications and synchronise data.
- **Auto-sync:** Set the phone to automatically synchronise contact, calendar, and email data.

Motion

Change the settings that control motion recognition on your phone.

- **Motion activation:** Set to use motion recognition.
- **Turn over:** Set to mute incoming calls, alarms, music, and the FM radio by placing the phone face down.

- **Tilt:** Set to zoom in or out while viewing images in Gallery or browsing web pages when you tap and hold two points with your fingers and then tilt the phone back and forth.
- **Panning:** Set to move an item to another page when you tap and hold the item and then tilt the phone to the left or right.
- **Double tap:** Set to activate Voice talk by double-tapping the phone.
- **Tutorial:** Learn how to control motions.

Privacy

Change the settings for managing your settings and data.

- **Back up my data:** Set to back up your settings and application data when the applications are reinstalled on your phone.

- **Automatic restore:** Set to restore your settings and application data when the applications are reinstalled on your phone.
- **Factory data reset:** Reset your settings to the factory default values and delete all of your data.

Storage

View memory information for your phone and memory card. You can also format the memory card.



Formatting a memory card will permanently delete all of the data from the memory card.

Language and keyboard


Change the settings for text input.

- **Select language:** Select a display language for all menus and applications.
- **Select Input Method:** Select a default keyboard type for text input.
- **Swype:**
 - **Language:** Select languages for text input.



You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.

- **Audio feedback:** Set to alert you when there are no alternative words for your input if you double-tap a word.
- **Vibrate on keypress:** Set the phone to vibrate when you touch a key.
- **Word suggestion:** When turned on, a flashing indicator displays on-screen, providing help information.
- **Auto-spacing:** Set the phone to automatically insert a space between words.

- **Auto-capitalization:** Set the phone to automatically capitalise the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.
 - **Show complete trace:** Set to display the trace of your finger while dragging on the keyboard.
 - **Speed vs. accuracy:** Set the balance for the speed and accuracy.
 - **Swype help:** Access help information about using the Swype keyboard.
 - **Tutorial:** Learn how to enter text faster using the Swype keyboard.
 - **Version:** View the version information.
 - **Samsung keypad:**
 - **Portrait keypad types:** Select the default input method, such as the QWERTY keyboard, traditional keypad, or handwriting screen.
 - **Input languages:** Select languages for text input.
-  You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.
- **XT9:** Activate XT9 mode to enter text using Predictive input mode.
 - **XT9 advanced settings:** Activate the advanced features of XT9 mode, such as auto completion, auto correction, or auto substitution, and set up your own word list.
 - **Keypad sweeping:** Enable or disable the keypad sweeping feature for the text input mode. You can switch between input modes by scrolling left or right on the keypad.
 - **Auto-capitalization:** Set the phone to automatically capitalise the first letter after a final punctuation

mark, such as a period, question mark, or exclamation mark.

- **Handwriting settings:** Customise the recognition time in Handwriting mode.
- **Voice input:** Activate the voice input feature to enter text by voice on the Samsung keypad.
- **Auto-full stop:** Set the phone to insert a period when you double-tap the space bar.
- **Tutorial:** Learn how to enter text with the Samsung keypad.

Voice Input and Output

Change the settings for the voice recogniser and the text-to-speech feature.

- **Voice recognition:** Select a voice recognition engine.
- **Voice recognition settings:** For the Samsung voice recognition, use the following options.

- **Language:** Select a language for the voice recognition.
- **Auto-dial:** Set to automatically dial a number when the voice recognition result is confident.
- **Use Location:** Set to use your location information for voice search results.
- **Hide offensive words:** Hide offensive words that your phone has recognised from the voice search results.
- **Auto-punctuation:** Set to automatically insert punctuation marks when needed.
- **Listen over Bluetooth:** Set to recognise your voice commands when using a connected Bluetooth headset..
- **About:** Information about the voice recognition software.
- **Auto-start listening:** Set to automatically begin voice recognition when you launch the couce command feature.

- **Voice command help:** Access help information for using the voice command feature.
- **Social settings:** Change the settings for accessing community websites.
- **Voice talk settings:** Change the settings for using Voice talk.
- **Voice talk help:** Access help information for using Voice talk.

For Google voice recognition, use the following options:

- **Language:** Select a language for the voice recognition.
- **SafeSearch:** Set the phone to filter explicit text and/or images from the voice search results.
- **Block offensive words:** Hide offensive words that your phone has recognised from the voice search results.
- **Text-to-speech settings:**

- **Listen to an example:** Listen to the spoken text for an example. Install voice data for using the text-to-speech feature.
- **Driving mode:** Activate Driving mode to set the device to read the contents aloud.
- **Driving mode settings:** Specify the applications to use in Driving mode.
- **Always use my settings:** Set the phone to use the settings that you specify in applications rather than the default settings.
- **Default engine:** Set the speech synthesis engine to be used for spoken text.
- **Install voice data:** Download and install voice data for the text-to-speech feature.
- **Speech rate:** Select a speed for the text-to-speech feature.
- **Language:** Select a language for the text-to-speech feature.

- **Engines:** View the text-to-speech engines downloaded from Android Market. Select **Samsung TTS** or **Pico TTS**.

Accessibility

- **Accessibility:** Activate an accessibility application that you have downloaded, such as Talkback or Kickback, which provide voice, melody, or vibration feedback.
- **The power key ends calls:** Set the phone to end a call when you press the Power/Lock key.

Docking Settings

- **Audio output mode:** Set to use the connected dock's speaker when your phone is connected to a car or desktop dock.

Date and Time

Access and alter the following settings to control how time and date are displayed on your phone:

- **Automatic:** Automatically update the time when you move across time zones.
- **Set date:** Set the current date manually.
- **Select time zone:** Set your home time zone.
- **Set time:** Set the current time manually.
- **Use 24-hour format:** Set to the time to be displayed in 24-hour format.
- **Select date format:** Select a date format.

About Phone

Access information about your phone, check the phone's status, and learn how to use your phone.

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the phone's lock feature is enabled, you must enter the password that you set for the phone.
PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM card. You can disable this feature using the Lock SIM card menu.

Code	Try this to solve the problem:
	Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.

Your phone displays network or service error messages

- When you are in areas with weak signals or poor reception, you might lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

The touch screen responds slowly or improperly

If the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers might prevent the phone from recognising your inputs and are not recommended for touch screen phones.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your phone to clear any temporary software bugs.

- Ensure that your phone's software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local Samsung Service Centre.

Your phone freezes or has fatal errors

If your phone freezes or hangs, you might need to close programs or reset the phone to regain functionality. If your phone is frozen and unresponsive, press and hold the Power/Lock key for 8-10 seconds. The phone will reboot automatically.

If this does not solve the problem, perform a factory data reset. In Idle mode, select **Applications** → **Settings** → **Privacy** → **Factory data reset** → **Reset phone** → **Erase everything**.

Calls are being dropped

When you are in areas with weak signals or poor reception, you might lose your connection to the network. Move to another area and try again.

Outgoing calls are not connected

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the correct cellular network.
- Ensure that you have not set call barring for the phone number you are dialling.

Incoming calls are not connected

- Ensure that your phone is turned on.
- Ensure that you have accessed the correct cellular network.
- Ensure that you have not set call barring for the incoming phone number.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

Audio quality is poor

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you might lose reception. Move to another area and try again.

When dialling from contacts, the call is not connected

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.
- Ensure that you have not set call barring for the contact's phone number.

The phone beeps and the battery icon flashes

- Your battery is low. Recharge or replace the battery to continue using the phone.

The battery does not charge properly or the phone turns off

- The battery terminals might be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery (refer to your local bylaws for proper disposal instructions).

Your phone is hot to the touch

When you use applications that require more power or use applications on your phone for an extended period of time, your phone may feel hot to the touch. This is normal and should not affect your phone's lifespan or performance

Error messages appear when launching the camera

Your Samsung phone must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery or replace it with a battery that is fully charged.
- Free some memory by transferring files to a PC or deleting files from your phone.
- Restart the phone. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

Error messages appear when launching the FM radio

The FM radio application on your Samsung phone uses the headset cable as an antenna. Without a headset connected, the FM radio will be unable to receive radio stations. To use the FM radio, first ensure that the headset is properly

connected. Next, scan for and save the available radio stations.

If you still cannot use the FM radio after performing these steps, try accessing the station with another radio receiver. If you can hear the station with another receiver, your phone might require service. Contact a Samsung Service Centre.

Error messages appear when opening music files

Some music files might not play on your Samsung phone for a variety of reasons. If you receive error messages when opening music files on your phone, try the following:

- Free some memory by transferring files to a PC or deleting files from your phone.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your phone supports the file type.

Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your phone.
- Ensure that the Bluetooth wireless feature is activated on the device that you wish to connect to, if necessary.
- Ensure that your phone and the other Bluetooth device are within the maximum Bluetooth range (10 metres).
- If the tips above do not solve the problem, contact a Samsung Service Centre.

A connection is not established when you connect the phone to a PC

- Ensure that the PC data cable you are using is compatible with your phone.
- Ensure that you have the proper drivers installed and updated on your PC.

health and safety information

Comply with the following precautions to avoid dangerous or illegal situations and to ensure peak performance of your mobile phone.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines for operating your phone properly and maintaining safe, satisfactory service.

- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.



For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

Failure to follow the instructions outlined may lead to serious personal injury and possible property damage.



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the headphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free phone) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free phone.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check

with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical phones, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.



Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off.

Construction crews often use remote-control RF phones to set off explosives.

Turn off your phone when you are in an area with a potentially explosive atmosphere. Although it is rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. These areas include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.

- Any other area where you would normally be advised to turn off your vehicle's engine.



Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE. IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS. DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.

- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.



Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.



For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and

chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital phone, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the I9100M are:

GSM850: Head: 0.11 W/Kg; Body-worn: 0.49 W/Kg

GSM1900: Head: 0.13 W/Kg; Body-worn: 0.79 W/Kg

WCDMA2: Head: 0.16 W/Kg; Body-worn: 0.96 W/Kg

WCDMA5: Head: 0.09 W/Kg; Body-worn: 0.49 W/Kg

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: **GT-I9100M**

Serial No.:

warranty information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to

deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product.

Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE

PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL,

CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED

WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR

OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2011 Samsung Electronics Canada, Inc. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342

index

AllShare 90

Android Market 28

Download 29

Install applications 29

Uninstall applications 29

Animation 21

Applications

Access 18

Organize 19

Battery

Charging 9

Installing 7

Bluetooth 85

Activating 86

Connect to other devices 86

Receive data 87

Send data 86

Brightness 22

Calculator 99, 100

Calendar 70

Call barring 37

Call forwarding 37

Call waiting 37

Calls

Answering 33

Auto rejection 36

Call logs 37

From Contacts 34

International 33

Making 33

Missed 36

Options during video call 35

Options during voice call 34

Reject 33

Use headset 34

Camcorder

Settings 54

Camera

Beauty photo 49

- Capture photo 46
- Cartoon mode 50
- Panoramic photo 49
- Preset options for scenes 48
- Series of photos 50
- Settings 50
- Shortcut icons 55
- Smile shot mode 49

Clock

- Alarm 97
- Desk clock 99
- Stopwatch 98
- Timer 98
- World clock 98

Contacts

- Create 67
- Find 68

- Group 69
- Import/Export 70
- Namecard 68

Current date and time 21

Data

- Synchronise automatically 31
- Synchronise manually 31
- Synchronize 30

Downloads 100

Email 42

Enter Text 25

File Formats 56

Flight mode 105

FM radio 63

Gallery 56

- View photo 57
- View video 58

Game Hub 66

Google Latitude 79

Google Mail 40

Google Maps 78

Google Search 80

Google Talk 44

GPS 92

GPS navigation 80

Hand Strap 13

Idle Screen

- Add items 16
- Add/remove panels 18

- Move items 17
- Remove items 17
- IM 45
- Indicator Icons 5
- Instant Messaging 45
- Internet 74
 - Bookmark 77
 - Browse 74
- Kies air 100
 - Connect to PC 101
 - Settings 100
- Market 82
- Mass Storage 94
- Memo 72
- Memory Card 11

- Format 12
- Insert 11
- Remove 12
- Messages
 - Sending multimedia 39
 - Sending text 38
 - Viewing multimedia 39
 - Viewing text 39
- Mini Diary 101
- Mobile Tracker
 - Activate 24
- Music 60
 - Add music files 61
 - Play music files 61
 - Playlist 62
 - Quick list 62

- Settings 62
- Music Hub 63
- My Files 102
- Namecard 68
- News & Weather 83
- PC Connections 93
- PC Data Cable 10
- Phone
 - Back 4
 - Customize 20
 - Front 4
 - Keys 5
 - Turn On/Off 14
- Photo Editor 58
- Places 79

- Polaris Office 102
- Readers Hub 82
- Ringtone
 - Change 21
 - Volume 21
- Samsung Apps 81
- Samsung keypad 27
- Samsung Kies 94
- Self Service 104
- Settings
 - About Phone 119
 - Accessibility 119
 - Accounts 114
 - Applications 113
 - Bluetooth 106
 - Call 107
 - Date and Time 119
 - Display 110
 - Dock 119
 - Flight mode 105
 - Keyboard 115
 - Language
 - 115
 - Location 111
 - Mobile networks 107
 - Motion 114
 - Power Saving Mode 111
 - Privacy 114
 - Samsung Kies via Wi-Fi 106
 - Security 111
 - Sound 109
 - Storage 115
 - Sync 114
 - Tethering and portable hotspot 106
 - USB utilities 106
 - Voice Input and Output 117
 - VPN 107
 - Wi-Fi 105
 - Wi-Fi Direct 106
- Shortcuts Panel 17
- Silent mode 21
- SIM card 7
 - Lock 23
- Social Hub 44
- Speed Dial Number 68
- Swype 25
- Task 71
- Task Manager 103

Text

- Copy 28
- Entering 25
- Paste 28
- Samsung keypad 27
- Swipe 25

Touch Screen

- Control 15
- Lock/Unlock 16

Touch tone 21

Travel Adapter 9

Unlock password 23

Unlock Pattern 22

Unlock PIN code 23

Video Maker 59

- Create video 59

Video Player 55

- Play 55

Voice Commands 103

Voice Dialer 104

Voice Recorder 73

Voice Search 104

Voicemail 40

Volume

- Ringtone 21

VPN connections 95

Wallpaper 22

Web

- Download 29

Wi-Fi 87

- Connect 88

WLAN 87

WLAN 87

WLAN Direct 89

YouTube 80

Zoom Pass 84