

Using the ExpressVu™ System

TURN ON SYSTEM

Remote
Buttons

Menu Options

1. Turn ON the TV, VCR, and any other installed equipment.
2. Turn ON the receiver. The power light on the front panel of the receiver will illuminate.



OPEN MAIN MENU

Remote
Buttons

Menu Options

Press the **Menu** button.



CANCEL A PROCEDURE



If you want to cancel a procedure, you must press the **Cancel** or **View** button before you perform the last step of the procedure (for example, by selecting the **OK** or Save option). See the specific procedure for more information. If Cancel or View does not exit from the current screen, you must finish the current procedure by selecting a menu option.

**Remote
Buttons**

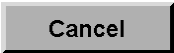 
Menu Options

If you want to return immediately to watching your program, press the **View** button.



or

If you want to return to the previous menu, press the **Cancel** button. Note: In some functions, this will also return you immediately to your program.



or

Wait a few minutes and the menus will automatically close, discarding any changes you have made.

CHANGE CHANNELS

ATTENTION!



If the program you select using any of the following procedures is security locked, you must enter the system password to view the program.

CHANNEL UP OR DOWN

Remote Buttons

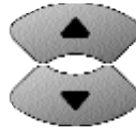
Menu Options

Press the **Up** or **Down** arrow button to bring the desired channel into view.

All unpurchased channels are automatically skipped. Only the channels in the active Favourites List are displayed.

or

1. Enter the desired 3-digit channel number.



User and
Installation Guide

BROWSE PROGRAM INFORMATION FOR OTHER CHANNELS

Remote Buttons Menu Options


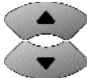 

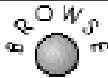
1. Press the **Browse** button to display the **Browse Banner** for the program you are watching.

2. **Either:** Enter the desired 3-digit channel number using the number pad buttons.

or

Press the **Up** or **Down** arrow button to display the desired channel in the bottom part of the **Browse Banner**.

3. You can press the **Information** button (not the **System Information** button) for more information about the program listed in the **Browse Banner**.



SELECT PROGRAM USING PROGRAM GUIDE

OPEN PROGRAM GUIDE


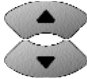 



Remote Buttons Menu Options

1. Press the **Guide** button to open the **Program Guide**.

2. **Either:** Enter the desired 3-digit channel number using the number pad buttons. Then, press the **Select** button to change to the new program.

or

Press the **Up** or **Down** arrow button to highlight the desired channel. Then, press the **Select** button to change to the new program.



Using the ExpressVu™ System Change Channels

3

ATTENTION!



If you select a program that has not started yet, the receiver displays program information for the program but does *not* change to the channel on which the program is to be shown.

SELECT PROGRAM IN PROGRAM GUIDE

Remote Buttons

Menu Options

Either: Enter the desired 3-digit channel number using the number pad buttons.

or

Press the **Up** or **Down** arrow button to highlight the desired channel.

or

Press the **Page Up** button to page up through the **Program Guide**, and the **Page Down** button to page down.





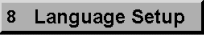
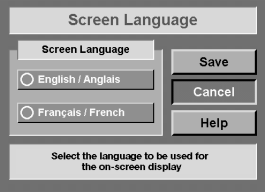
If desired, press the **Information** button (*not* the **System Information** button) for more information about the highlighted program.

You can press the **Select** button to change to the new program.






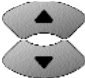 

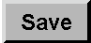 


CHANGE LANGUAGES

To change the menu and screens language from English to French or vice versa, do the following:

	Remote Buttons	Menu Options
1. Press the Menu button to open the Main Menu .		
2. Select the System Setup option.		
3. Select Installation .		
4. Select the Language Setup option.		
5. You will see a screen that asks you which language you want. Select English or French, then select the Save button on the screen. From now on, most screens will appear in the language of your choice.		

READ ELECTRONIC MAIL

	Remote Buttons	Menu Options
1. Press the Menu button to open the Main Menu .		
2. Select the Mail option.		
3. Use the arrow buttons to highlight the mail message. Press Select .		
4. If necessary, press the Up or Down arrow button to view all of the message.		
5. Either: After you are finished reading, select the Delete option to delete the mail message.		
or		
Select the Save option to save the message.		



Do not save a mail message unless it is an important message. The receiver memory can store only a limited number of messages. If it receives more messages than it can hold, the receiver will delete old messages, as necessary, to make room. If this happens, you may miss important information.

ORDER DISH-ON-DEMAND PPV PROGRAM









Remote Buttons	Menu Options
<p>1. Select the desired DISH-On-DemandSM PPV program using one of the procedures in "Change Channels" on page 3-3.</p> <p>2. If the system is locked, enter the password using the numeric pad.</p> <div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>0</div></div><div><div>* * * *</div></div></div> <p>Select the OK option to accept the password.</p> <p>3. Either: If you do not want to purchase the [DISH-On-DemandSM PPV program, press the Up or Down arrow button (if in View mode) or select the No option. If you do this, you can stop here.</p> <div><div><div>▲</div><div>▼</div></div><div><div>No</div></div></div> <p>Or</p> <p>In the DISH-On-DemandSM PPV menu, select the Purchase or Yes option.</p> <div><div><div>Purchase</div></div><div><div>Yes</div></div></div> <p>4. Select the Yes option again to confirm purchase. The DISH-On-DemandSM PPV fee will be added to your next invoice.</p> <p>Note: You cannot cancel previously ordered DISH-On-DemandSM PPV programs using this procedure.</p> <div><div><div>Yes</div></div></div> <p>Note: Your ExpressVuTM receiver must be connected to a phone line at all times to order DISH-On-DemandSM PPV programs using the receiver.</p>	

SET AND USE SECURITY LOCKS






Your ExpressVu™ system must be locked for the receiver security locks to be in effect. This applies to all the locks discussed below.

LOCK THE SYSTEM

	Remote Buttons	Menu Options
1. Press the Menu button to open the Main Menu .		
2. Select the Locks option.		
3. Select the Lock System option.		
4. When you lock the system, enter and verify the desired system password using the numeric pad. This will become the system password. Write down the password and put it in a safe place. Thereafter, this password must be entered to lock or unlock the system. Locking the system also locks DISH-On-Demand SM PPV programs.		
5. Select the OK option. All defined locks are now active.		

User and
Installation Guide








VIEW A LOCKED PROGRAM

	Remote Buttons	Menu Options
<div>1. Change to a locked channel, or select a program that is rating locked. See "Change Channels" on page 3-3.</div> <div>2. Enter the system password using the numeric pad.</div> <div>3. Select the OK option.</div>	<div></div>	<div></div> <div></div>

UNLOCK THE SYSTEM



After you perform this procedure, all receiver security locks will be turned off until you lock the system again.

	Remote Buttons	Menu Options
<div>1. Press the Menu button to open the Main Menu.</div> <div>2. Select the Locks option.</div> <div>3. Enter the system password using the numeric pad.</div> <div>4. Select the Unlock System option.</div>	<div></div> <div></div> <div></div> <div></div>	<div></div> <div></div> <div></div>

SET LOCKS BY RATINGS CODES






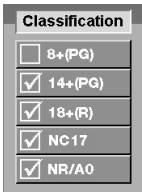


See "Glossary" on page A-17 for a definition of each of the ratings codes.



The rating and extended rating (content) codes that are used for security locks reflect the codes that were assigned to the programs by the original program providers. These codes are provided for your assistance, but you should be aware that the actual content of the programs may differ from the assigned codes.






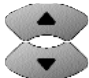 




The ratings code locks feature is not available as of the printing of this manual. This capability will be activated when broadcasters begin transmitting rating guidelines as part of the electronic datastream.

	Remote Buttons	Menu Options
1. Press the Menu button to open the Main Menu .		
2. Select the Locks option.		
3. Select the Ratings Locks option.		
4. Select the rating to lock that corresponds to the lowest desired audience age. Note: All ratings that apply to audience age ranges above that of the selected rating are also selected. For example, if you lock 14+ (PG) rated programs, then all programs with the 18+ (R), NC17 and NR/AO ratings are also locked.		
5. Select the expanded ratings code(s) to lock, if desired.		
6. Select the Save option to save the changes.		

User and
Installation Guide

SET LOCKS BY CHANNELS















	Remote Buttons	Menu Options
1. Press the Menu button to open the Main Menu .		
2. Select the Locks option.		
3. Select the Channel Locks option.		
4. Select the channel(s) that you want to lock. If necessary, press the Up or Down arrow button to bring the desired channels into view.		
You can also enter each channel number directly using the numeric pad.		
5. Select the Save option to save the changes.		

CHANGE RECEIVER PASSWORD

You must be careful to remember your password. Without the correct password, you will not be able to unlock the system or access locked items. If you do forget your password, you must call the ExpressVu™ Customer Service Centre at 1-888-SKY-DISH. Upon proper authorization, they will unlock your system using the satellite signal.









Using the ExpressVu™ System Set and Use Security Locks

3

	Remote Buttons	Menu Options
1. Press the Menu button to open the Main Menu .		
2. Select the Locks option.		
3. Select the Change Password option.		
4. Enter the current password.		
5. Enter the new password using the numeric pad.		
6. Either: Select the OK option.		
If you do not want to change the password, select the Cancel option to cancel the password change. You can stop here.		
7. Enter the new password again for verification, using the numeric pad.		
8. Select the OK option.		
9. Write down the new password and keep it in a safe place.		

DISCARDING ALL SETUP INFORMATION

If you want to discard changes made to the ExpressVu™ system menus and reset the receiver to be the same as when it was shipped from the factory, perform the following steps:

	Remote Buttons	Menu Options
1. Press the Menu button.		
2. Select the System Setup option.		
3. Select the Installation option.		
4. Select the Factory Defaults option.		
5. Select the Yes option. (This may take a few seconds)		

Note: If the system is locked, this does not discard any receiver security locks. If the system is not locked, this does discard these locks.

WATCHING VIDEO TAPES AND TAPING PROGRAMS

WHAT YOU CAN AND CANNOT DO

You can tape a program you are currently watching.

You cannot tape a program different from the one you are currently watching.

Note: Many TV programs and films are copyrighted. In certain circumstances, copyright law may apply to private, in-home videotaping of copyrighted materials.

TAPING A PROGRAM YOU ARE WATCHING

As long as the VCR is connected to the system correctly, you can record programs by inserting a tape in the VCR and pressing the **Record** button. See *Wiring the System Together* on page A-13.

ATTENTION!



If you activate a system menu (including the **Program Guide**) while recording a program, the menu will also be recorded.

CONTROLLING SOUND VOLUME



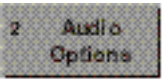


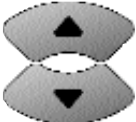

If you are recording a program using a VCR, and you change the sound volume using the receiver remote, the volume recorded will also change. For this reason, you may want to change how the volume is controlled.

If you are recording a program using a VCR, you may want to set up the receiver so that only the TV remote can control the sound volume. If you do this, then even if you change the volume with the TV remote, the volume recorded will not change.

Note: When you are finished recording, make sure to change the receiver setup back so that the receiver remote can control the sound volume.

To change the way sound volume is controlled, do the procedure on page 3-16.

User and
Installation Guide

	Remote Buttons	Menu Options
1. Make sure that the TV sound volume is not turned down or muted <i>using the TV remote control</i> . If you turn down or mute the sound volume using the TV remote, the receiver remote will <i>not</i> be able to turn the volume back up.		
2. Press the Menu button to open the Main Menu .		
3. Select the Audio Options option.		
4. Select the Volume Control option. This displays the Select a Volume Control Method menu.		
5. Use the Up or Down arrow button to move the highlight to the TV Remote Only (Fixed Volume) or TV Remote or Receiver Remote option, as desired.		
6. Press the Select button to select the desired option.		
7. Select the Save option to save the volume control setting.		