

## LISTING AND CHOOSING PROGRAMS BY THEMES

You can list and choose programs according to the theme of their contents, for example, just movies or just sports. You can then quickly list programs based on that theme, and choose the program you want. **Note:** If you select a program that has not started yet, the receiver displays information about the program but does not change to the channel on which the program is to be shown.

### Remote Buttons

 
### Menu Options

1. **Either:** While watching a program, press the **Left** arrow button to display the **Theme Categories** menu.




**Or:** Press the **Menu** button to display the **Main** menu. Select the **Themes** option to display the **Theme Categories** menu.

2. Use the **Arrow** buttons to move the highlight to the option for a desired category. Press the **Select** button to select that option. This displays a list of programs within the category. Programs on channels to which you have not subscribed are shown with a red background.



 3. To speed your search, highlight the **Page Down** or **Page Up** options and press **Select** to page down or page up through the list of programs.



4. Use the **Arrow** buttons to move the highlight to the desired program in the program list.



5. Press the **Select** button to watch the program.