USING CALLER ID

Caller ID displays on your TV the names of people as they call you if you subscribe to **Caller ID** from your local phone company. To use this feature, make sure you have a phone line connected to the receiver and that the **Caller ID** feature is enabled. After you turn on Caller ID, it stays on until you decide to turn it off.

CALLER ID SCREENS

When you receive a call, you will see a **Caller ID** popup screen.



You can select \mathbf{OK} to eliminate the message. If you do nothing, it will disappear after 20 seconds.

If you are in a menu when a call comes in, you will see a different **Caller ID** popup screen.



User Guide

TURNING CALLER ID ON AND OFF

	Remote Buttons	Menu Options
1. Press Menu on the remote control.	MEND	
2. Select System Setup.	mno 6	
3. Select Installation.	1	
4. Select Caller ID.	abc 2	
	DEnoste C	AH CATHID
5. Select Enable Caller ID or select Disab	ole Caller ID.	
6. Select Done .		

RESETTING TO FACTORY DEFAULT SETTINGS

Note: Resetting the receiver to factory default settings discards all **Favourite Lists** except the **All Chan** and **All Sub** lists.

Note: If you have set any locks on the receiver, and the receiver is locked, these locks will be kept. If the receiver is unlocked, any such locks will be lost; however, you cannot reset the receiver to factory default settings to bypass a lock or to discard a password you have forgotten. Call the Customer Service Center if you have forgotten your password.

Complete the following instructions if you want to reset the receiver to be the same as when it was shipped from the factory.