

CHANGING PROGRAM LANGUAGES

You may be able to change the language of some programs. An alternate language may not be available for all programs. Some programs, such as movies, show at the start whether an alternate language is available. An alternate language applies only to the audio part of a program and does not change the language used in the menus displayed by the receiver.

Remote Buttons

Menu Options

1. Press the Menu button.
2. Select the **System Setup** option.
3. Select the **Alternate Audio** option.
4. Select the language you want in the **Languages** list.
5. Select the **Done** option to save your language choice. The receiver displays the **System Setup** menu.

MENU



mno



abc

