

USING THE MENUS

The menus make using the receiver and selecting programs quick and easy. Use the menus to control the receiver and to use its features, such as setting locks, choosing a program, or creating a favourites list.

OPEN AND CLOSE MENUS

You can open the menus in either of two ways:

- Press the menu button to open the **Main Menu**, then open any of the other menus from the **Main Menu**.

MENU



- Use the matching buttons on the remote control:
Open the **Program Guide**.

GUIDE



- When watching a program, open the **Themes and Search** menu.

T H E M E S



User Guide

- Display the **Browse Banner**.



To close a menu and return to watching a program, press either the View tv or Cancel button.

Note: If you do not do anything in a menu for several minutes, the menu automatically closes. This will discard any changes you made, and display the program you were watching.

HIGHLIGHTING MENU OPTIONS

To highlight a menu option, use the remote control Arrow buttons to move the on-screen highlight to the menu option. When you do move the on-screen highlight, the option becomes amber. The highlight is like the one that you may have seen on a computer screen.

SELECTING MENU OPTIONS

When you select a menu option, that option takes effect right away. You can select a menu option in either of two ways:

- If the option has a number next to it, press the number on the number pad button that matches this number. When you use the number pad button, you do not need to highlight the option first.
- Move the highlight to the menu option using the remote control Arrow buttons. Then press the remote control Select button. In the example above, **Sports** is highlighted.

Movies
Sports
News / Business
Family / Kids
Education
Series / Specials
Music / Arts
Religious

LIST OF CHOICES IN THE MENUS

When you make a choice in a list, the receiver does not apply the change until you select the **Save** or **OK** option. If you do not want to save any changes, select the **Cancel** option to discard all the changes made in the menu.

There are two types of lists:

- A single choice list allows you to select only one choice at a time. If you select another choice, your previous choice is deselected.



- A multiple choice list allows you to select more than one choice at one time. If you select another choice, your previous choice(s) stays selected.



HIGHLIGHTING A CHOICE IN A MENU LIST

Use the remote control Arrow buttons to move the highlight to the desired item in the list. The black arrows on the list show where you can move the highlight.

SELECTING A CHOICE IN A MENU

To select a choice in a list, highlight the choice and then press the remote control Select button. Make sure you select the **Save** or **OK** option to save your choice. Select the **Cancel** or **Done** option to discard your choice.

CANCELING A PROCEDURE

You can cancel a procedure in any of three ways:

- If you want to return to watching a program, press the remote control View TV button.
- If you want to return to the previous menu, press the Cancel button.
- Wait a few moments and the menu will close automatically, discarding any changes you have made. If this does not work, you must finish the procedure.

