 


2

The Parts of The System

THE RECEIVER FRONT PANEL

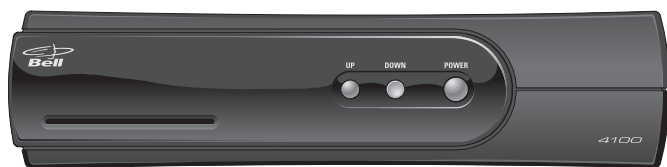

SMART CARD DOOR

Behind this door is a slot for a future smart card. No smart card is included with this receiver.

UP AND DOWN ARROW BUTTONS

The UP and DOWN buttons change the channel on the receiver.

IR SENSOR AND IR BLASTER

The IR Sensor receives IR signals from the remote control. For information on the IR Blasters, see page 3-28, *Setting Up the Receiver and VCR to use VCR Event Timers*.

POWER BUTTON AND LIGHT

This green light on the front panel lights up when you turn the receiver ON and goes out when you turn the receiver OFF.

THE RECEIVER BACK PANEL



The back panel of the receiver provides the connections that you use to connect the receiver to other electronic devices. It also provides the receiver power cord and telephone jack. Depending on the setup that you use, you may only use some of these connections. For information on wiring and wiring diagrams, see the installation instructions.

User Guide

COAXIAL CONNECTIONS

The three coaxial connections on the back of your receiver are colour coded. When you install your receiver or if you ever have to move it, the colour coding will make it easier for you to connect the cables to the back of your receiver. Inside the front cover of this guide are stickers that are colour coded the same way as the coaxial connections.

SATELLITE

Connect the coaxial cable between the satellite dish and the receiver using this output. The **SATELLITE IN** connection is colour coded blue.



TV SET OUT CONNECTION

Connect the coaxial cable between the receiver and TV using this input. The **TV SET OUT** connection is colour coded white.



TV SET OUT

TV ANTENNA/CABLE IN

If you connect a cable TV box or a broadcast TV antenna to the receiver, use the back panel **TV ANTENNA/CABLE IN** connection for the local signal. The **TV ANTENNA/CABLE IN** connection is colour coded black.



TV ANT. / CABLE IN

PHONO (RCA) AUDIO/VIDEO OUTPUTS

The back panel **PHONO (RCA) AUDIO/VIDEO** outputs provide good picture quality and stereo sound. If the TV has only one input for this type of audio, connect it to the right (R) phono (RCA) audio output on the receiver.



If you use the **PHONO (RCA) AUDIO/VIDEO** outputs to connect the receiver with other devices, you may need to use the menus displayed by each device to change the input from local broadcast TV to satellite TV. See the user manuals that came with the other devices for more information.



VIDEO

SUPER VIDEO (S-VIDEO) OUTPUT

The receiver provides S-Video, which supports the highest quality video available. If you use this back panel output for video, you must connect the audio using the **PHONO (RCA) AUDIO OUTPUTS**.



S-VIDEO

DIGITAL AUDIO OUTPUT (DOLBY®)

Digital Audio OUTPUT is for use with high-quality digital sound decoding systems. Connect the Digital Audio Output with a Digital Audio Optical cable (available at consumer electronics stores).



Digital Audio OUTPUT

TELEPHONE JACK

Connect a telephone cable with a standard RJ-11 telephone connector to the receiver here, and then connect the cable to an active telephone line.

Note: The receiver *must* be connected at all times to an active telephone line. If you install two or more receivers, each receiver *must* be connected at all times to an active telephone line.



PHONE

THE REMOTE CONTROL

This section describes the remote control and how to use the buttons to operate the satellite receiver.

For information on using the remote to control other devices, go to the section titled *Control Other Devices with the Remote*, beginning on page 3-48.

If you lose or damage the remote control, you will not be fully able to control the receiver. If this happens, call the Customer Service Center at 1-888-SKY-DISH to order a replacement.



IMPORTANT SAFETY INSTRUCTIONS

For your protection, you must remember certain safety issues while using this device. Please keep these and any additional instructions for future references.

INSTALLATION

Observe Warnings: Carefully follow all warnings on the device and in the operating instructions.

Heat: DO NOT place the device near heat sources such as radiators, stoves, heat registers, or other appliances that produce heat.

CARE AND USE

Cleaning: DO NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.

When in Use: Remove the batteries if this device is to be left unattended or unused for a long period of time.



Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.




DO NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

THE MENU STRUCTURE

The following diagram shows the general structure of the menus that the receiver displays on the television screen. These menus are described on the next few pages.

 Note: Software updates may change the appearance and function of some menus.

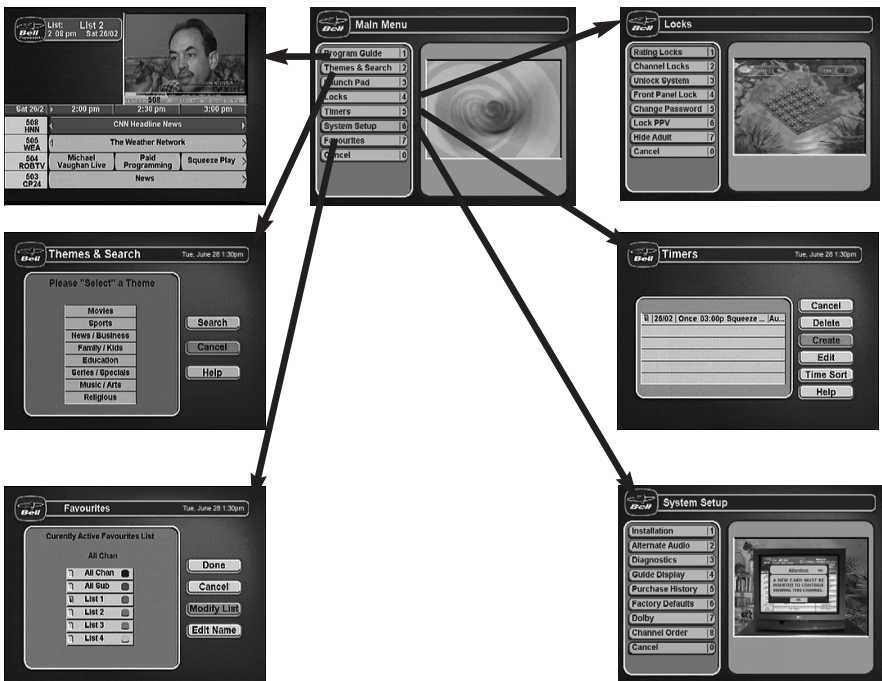

SELECTING MENU OPTIONS

You can select a menu option in either of two ways:

- If the option has a number next to it, press the number on the number pad button that matches this number. When you use the number pad button, you do not need to highlight the option first.
- Move the highlight to the menu option using the remote control Arrow buttons. Then press the remote control SELECT button.

 
The Parts of The System

The Menu Structure

2


THE MAIN MENU

The **Main Menu** is the key to the menu structure. Each option on this menu displays another menu.

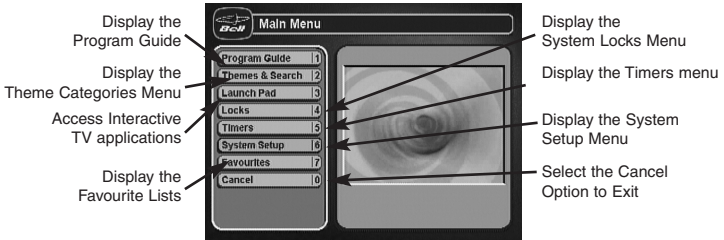

PROGRAM GUIDE

 The **Program Guide** provides a complete listing of the available channels and programs.

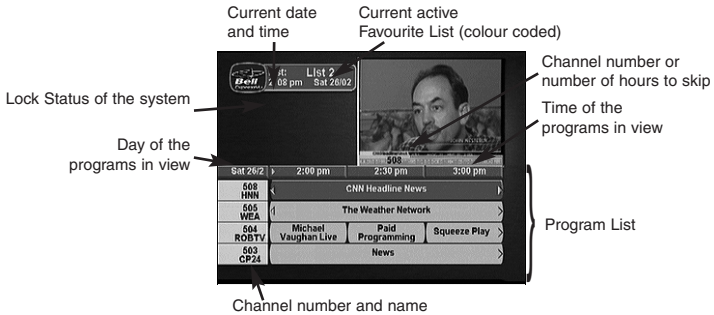

THEMES AND SEARCH MENU

 
The **Themes and Search Menu** allows you to choose programs based on the theme of their contents.



User Guide


LOCKS MENU

The **Locks Menu** allows you to set and use security locks.

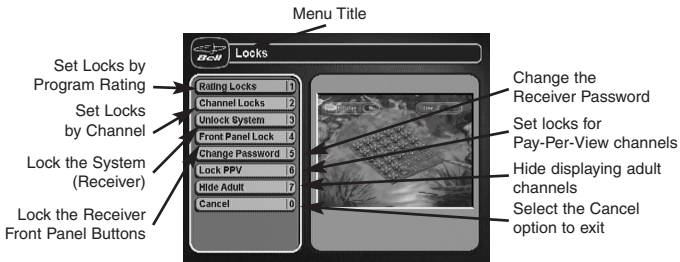


TIMERS MENU

 The **Timers Menu** allows you to set up the receiver to tune in and/or record a future “event,” that is, a program.

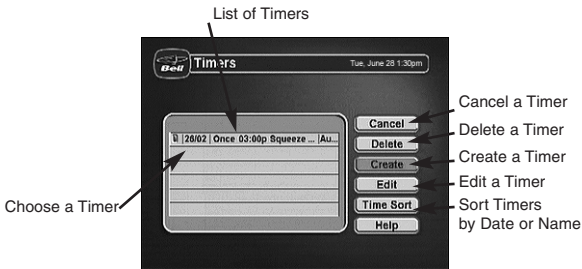

SYSTEM SETUP MENU

 The **System Setup Menu** provides a number of functions that help you set up and maintain the system.

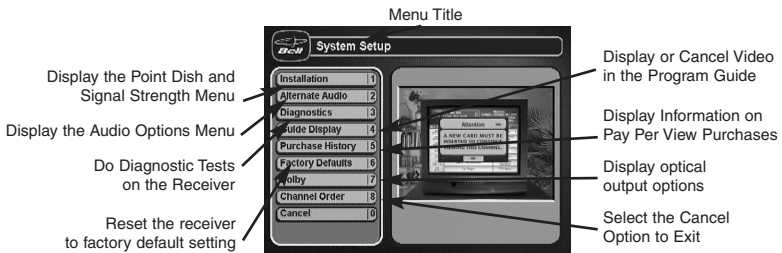


The Parts of The System

The Browse Banner



FAVOURITES MENU

 The **Favourites Menu** allows you to create, modify, and activate lists of favourite channels.

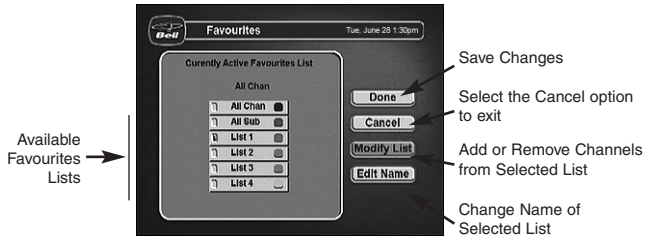


THE BROWSE BANNER

You can use the **Browse Banner** to change channels or to see what other programs are available without changing the current program. Because the **Browse Banner** is transparent, using it will not block out the program you are viewing.

Note: If the ALL CHAN Favourites List is active, the **Browse Banner** displays all the channels. If another list is active, the **Browse Banner** displays only the channels on that list.

 The **Browse Banner** information includes the following items.

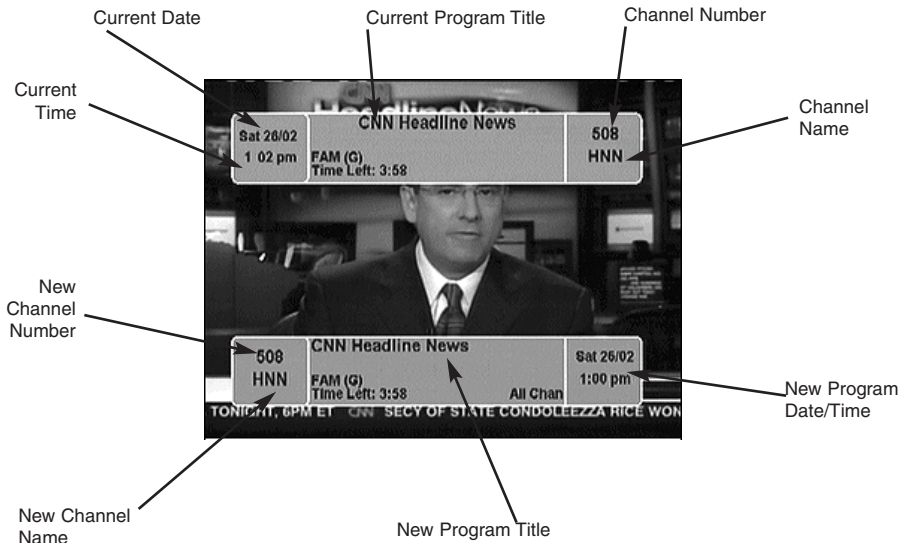

Notes