

DISPLAYING THE LIST OF AVAILABLE CHANNELS AND PROGRAMS




The on-screen **Program Guide** provides a complete listing of the available channels and programs. You can use the **Program Guide** to change channels, to see what programs are scheduled, and to buy pay per view programs.



The **Program Guide**:







- Indicates which Favourites List is active. If the ALL CHAN list is active, the **Program Guide** displays all the channels. If another list is active, the **Program Guide** displays only the channels on that list. See Using Favourites Lists on page 3-32 for more details on this.
- ALL CHAN listing may include channels to which you have not subscribed. These channels have a red background behind the channel name and number. You can not tune in to these channels. See *Available Services* on page 1-6.
- Includes only programs that are being shown now and that are scheduled for an extended time beyond the present. The listing does not include programs that have ended.
- Can be set up to list channels in ascending order (from bottom to top, 122, 140, and 170) or in descending order (from top to bottom, 170, 140, and 122). To do this press the remote control **Menu** button to open the **Main** menu. Then, highlight and select the **System Setup** option. Highlight and select the **Channel Order** option, choose ascending or descending and select the save option. **Note:** If you do not set a channel order, the **Program Guide** automatically displays the channels in descending order.
- This receiver allows you to see the last program that you watched in a corner of the **Program Guide**. To do this, open the **Main Menu**. Then, select the **System Setup** option. Finally, select the **Guide Displays** option, select the **Partial Guide With Video** or **Full Guide Without Video** option, and select the **Save** option. When you first display the inset, there may be a brief delay before a picture appears. A similar delay may occur at times when you are using the **Program Guide**.
- You can set up the **Program Guide** to hide adult channels. See *Hiding Adult Channels* on page 3-55.
- The (DD) symbol shows that a program features Dolby Digital Sound.

OPENING THE PROGRAM GUIDE

	Remote Buttons	Menu Options
Either: Press the Guide button.		
Or:		
1. Press the Menu button to display the Main menu.		
2. Select the Program Guide option.		

SELECTING A PROGRAM IN THE PROGRAM GUIDE

Following are three ways of selecting a program in the Program Guide. If you select a program that has not started yet, the receiver displays information about the program but does not change to the channel on which the program is to be shown.

	Remote Buttons	Menu Options
Either:		
1. Use the number pad buttons to enter the desired channel number. The Program Guide displays the channel number and a block of channels including the one just entered.		
2. Use the Arrow buttons to move the highlight to the desired program.		
3. If desired, press the Info button for more information about the highlighted program. Press the Cancel button to return to the Program Guide .	 	
4. Press the Select button to change to the new channel.		
Or:		
1. Press the Page Down button to page down, or the Page Up button to page up through the Program Guide .		


Using The System

Displaying The List of Available Channels and Programs


3

Or:

1. Enter a number of hours using the number pad buttons. **The Program Guide** displays that number of hours in the upper right hand corner.
2. Press the **Left** or **Right** arrow button to skip the display forward or backward that many hours. **Note:** The **Program Guide** can display programs scheduled for an extended time beyond the present.

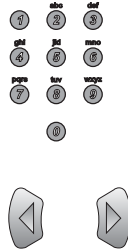

The **Program Guide** may contain any or all of the items shown below:

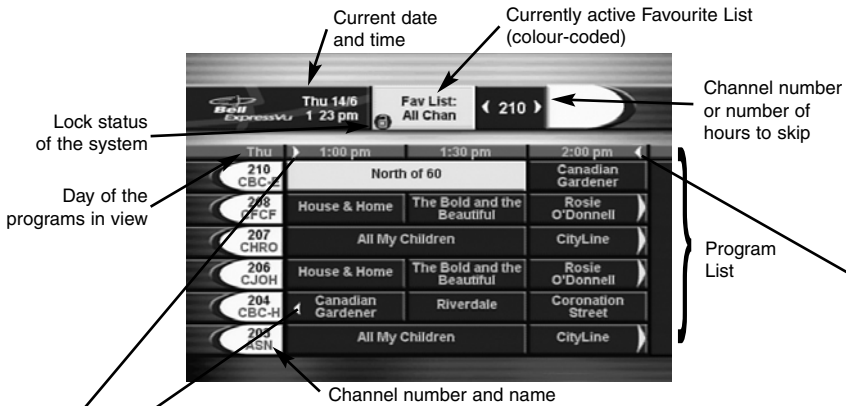

Indicates that this program began or will end in a time period that is not in view.



Indicates that the last available time period available is in view (you cannot display a time later than this).



Indicates that the first viewable time period is in view (you cannot display a time earlier than this).



Allows you to skip backward or forward a desired number of hours. Enter the number of hours using the remote control numeric pad, then press the **Left** or **Right** arrow button. Also allows you to skip to another channel number. Enter the channel number, then press the **Select** button.

Note: The **Program Guide** can only display programs scheduled for a limited time beyond the present.

User Guide

CLOSING THE PROGRAM GUIDE

Remote
Buttons

Menu Options

To close the **Program Guide**, press the remote control **Cancel** button. The receiver displays the program you were watching before you opened the **Program Guide**.

