

# USING FAVOURITES LISTS

---

Favourite Lists are lists of your favourite channels. You can create and change the lists yourself, adding and removing channels as you wish. You can have an unlimited number of favourite channels but they must be grouped into no more than four lists. For example, one Favourite List could have 100 channels and a second list only 10. Or all four lists could have 50 channels each.

- When you make a Favourite List active, the **Program Guide** displays *only* the channels in that list. Also, the receiver skips channels that are not on the list when you use the remote control Up or Down arrow button to change channels.
- The **All Chan** Favourite List contains all the channels. But, if you have set up the **Program Guide** to hide adult channels and the receiver is locked, *no* list displays such channels. You cannot make any changes to the **All Chan** list.
- The **All Sub** Favourite List contains all the channels in your subscription. But, if you have set up the **Program Guide** to hide adult channels and the receiver is locked, *no* list displays such channels. You *cannot* make any changes to the **All Sub** list, except by changing your subscription.
- You can tune the receiver to a channel whether or not that channel is on the active Favourite List by entering the channel number using the remote control number pad buttons. This will also automatically return the receiver to the **All Chan** list.
- If you choose a program using **Theme Categories**, the receiver tunes to the channel for that program whether or not that channel is on the active Favourite List.
- Each Favourite List has a unique color in the **Program Guide**. You can give each list a name. When you first get the receiver, the four lists are named **List 1**, **List 2**, **List 3**, and **List 4**. The lists are empty until you add channels to them.

### MAKING A FAVOURITES LIST ACTIVE

If the **Program Guide** is open, press the Guide button to select the next Favourite List. Press the Guide button again to scan through all the available lists.

**Note:** This works *only* if you have added channels to the Favourite Lists. If you have not created any Favourite Lists, pressing the Guide button switches the receiver between the **All Chan** and **All Sub** lists.

#### Remote Buttons

#### Menu Options

**Either:** If the **Program Guide** is open, press the **Guide** button to select the next Favourites List. Press the **Guide** button repeatedly to scan through all the available lists.

GUIDE



**Or:**

1. Press the **Menu** button to display the **Main** menu.

 
MENU



2. Select the **Favourites** option.



3. Use the **Arrow** buttons to move the highlight to the desired Favourites List.



4. Highlight and select the **Save** option.



 

 
 
 

SELECT



**Note:** If you try to make an empty Favourites List active, the receiver highlights the **Modify List** option. You must add at least one channel to this Favourites List before you can make it active.

CREATING OR MODIFYING A FAVOURITES LIST

You can create, add channels to, and remove channels from a Favourites List.

	Remote Buttons	Menu Options
1. Press the <b>Menu</b> button to display the <b>Main</b> menu.		
2. Select the <b>Favourites</b> option.		
3. Use the <b>Arrow</b> buttons to move the highlight to the option for the Favourites List that you want to create or change. Press the <b>Select</b> button to select the highlighted list.		
4. Highlight and select the <b>Modify List</b> option.		
<p><b>Note:</b> At any time you can select the <b>Clear List</b> option to remove all channels from the current list. This does <i>not</i> apply to the <b>All Chan</b> and <b>All Sub</b> lists.</p>		
5. In the <b>Channels</b> list, highlight a channel you want to add to the Favourite List.	 	
<p><b>Note:</b> You can use the number pad buttons to enter the channel number, or select the Page Up or Page Down option to move quickly through the list.</p>		
6. Press the <b>Select</b> button to add the highlighted channel to the Favourite List. A check mark appears next to the channel.		

7. Repeat steps 5 and 6 until you have added all the channels that you want.
8. To delete a channel from the Favourite List, select the channel in the list. The check mark next to the channel disappears.
9. Select the **Save** option to save all changes to the Favourite List.

Save

### CHANGING THE NAME OF A FAVOURITES LIST

Remote  
Buttons

 
Menu Options

1. Press the **Menu** button to display the **Main** menu.
2. Select the **Favourites** option to display the **Favourites Lists** menu.
3. Use the **Arrow** buttons to move the highlight to the Favourites List to be changed.

MENU



4

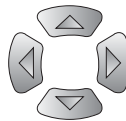

Press the **Select** button to select the highlighted list.

SELECT

4. Highlight and select the **Edit List Name** option.

Edit List Name

**Note:** You *cannot* change the name of the **All Chan** or **All Sub** list.

5. Use the **Arrow** buttons to highlight a letter in the keypad area on the menu.

Press the **Select** button. Repeat to spell out the desired name. You can enter up to eight characters, including spaces. If necessary, highlight and select the **space** option to insert a space in the name or the **<back** option to correct a letter.

**Note:** A list *must* have at least one character. Two lists *cannot* have the same name.

**Note:** At any time, you can select the **Clear List** option to clear the name.

6. Highlight and select the **Save** option to save all changes.

