

WATCHING PROGRAMS IN OTHER LANGUAGES

You may be able to change the language of the programs you watch by using the **Alternate Audio** menu. An alternate language may not be available for all programs. Some programs, such as movies, indicate at the start of the program whether an alternate language is available.

Alternate language applies only to the audio part of programs and does not change the language used in the menus displayed by the receiver.

Remote Buttons

Menu Options

1. Press the **Menu** button to display the **Main** menu.

MENU



 
2. Select the **System Setup** option to display the **System Setup** menu.



3. Select the **Alternate Audio** option.



4. Use the **Arrow** button to move the highlight to the desired language in the **Languages** list. Press the **Select** button.



Note: If the program is being transmitted in a language not listed, then selecting the **Alternate** option selects that language. If not, then selecting the **Alternate** option selects English.



5. **Either:** Highlight and select the **Save** option to save your language choice. The receiver displays the **System Setup** menu.

Or: Press the **Cancel** button to cancel any changes. The receiver displays a confirmation menu.



CANCEL

At the **Confirmation Menu:**

Either: Highlight and select the **Yes** option to discard any language changes.

Or: Highlight and select the **No** option to save any language changes you have made.