

CHANGING CHANNELS

There are three ways to change channels:

- Press the Up or Down arrow buttons.
- Use the number pad buttons.
- Press Guide and then select the channel from the **Program Guide**.