

DISPLAYING PROGRAM INFORMATION

THE PROGRAM BANNER

The **Program Banner** provides information about the program you are watching. The receiver displays the **Program Banner** for a few seconds at the top of the TV screen every time you change the channel or press the remote control View TV button.



THE BROWSE BANNER

You can use the **Browse Banner** to change channels, or to see what other programs are available without changing the program that you are watching. The receiver displays information on the program you are watching at the top and **Browse Banner** information at the bottom of the TV screen.



Note: If the **All Chan Favourite List** is active, the **Browse Banner** displays all the channels. If the **All Sub** list is active, the **Browse Banner** displays only the channels in your subscription. If a **Favourites List** is active, the **Browse Banner** displays only the channels in that list.

If you have set up the **Program Guide** to hide adult channels and the receiver is locked, the **Browse Banner** does not display such channels.

USING THE BROWSE BANNER

Remote Buttons

Menu Options

1. Press the Browse (Right Arrow) button to open the **Browse Banner**.



2. Change the channel displayed on the **Browse Banner** by doing one of the following:

- Enter the channel number for the program that you want, using the number pad buttons.
- Press the up or down arrow to display the next channel.



3. Press the Right arrow button multiple times to highlight the next programs. Press the Left arrow button to return to the current program.



4. Close the **Browse Banner** by doing one of the following:


- Press the Select button to watch the program.
- Press the View TV or Cancel button to close the Browse Banner without changing the channel.



User Guide

ORDERING PAY PER VIEW PROGRAMS

1. Highlight the desired pay per view program in the **Program Guide** and press the Select button. A message like the following displays:

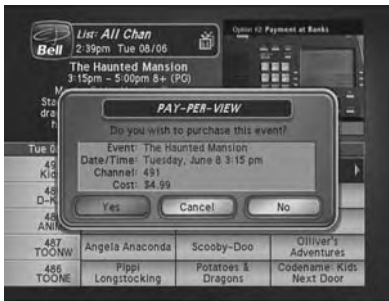

2. To buy the pay per view program, select the **Yes** option. The receiver displays a confirmation menu.

Note: Once you confirm an order for a pay per view program, you cannot cancel the order and you will be billed for it.

Select **Yes** if you want to confirm your purchase. If you do not want to purchase the pay per view program, select the **No** or **Cancel** option.