

RESETTING RECEIVER TO FACTORY DEFAULT SETTINGS

Note: Resetting the receiver to factory default settings discards all **Favourite Lists** except the **All Chan** and **All Sub** lists.

Note: If you have set any locks on the receiver, and the receiver is locked, these locks will be kept. If the receiver is unlocked, any such locks will be lost. You cannot reset the receiver to default settings to discard a password you have forgotten. Nobody can reset the receiver to bypass a receiver lock.

Using The System Changing Program Languages

3

If you want to reset the receiver to be the same as when it was shipped from the factory, do the following:

Remote Buttons

Menu Options

1. Press the Menu button.
2. Select the **System Setup** option.
3. Select the **Factory Defaults** option. When the receiver displays a **Warning** message, confirm that you want to reset the receiver's preferences by selecting **Yes**.

MENU



mno

6

mno

6

