

USING THEMES AND SEARCH

The **Themes and Search** feature of your receiver makes it easy to find programs to watch. This menu allows you to search for programming by themes (movies, sports, etc.) or by key words used in the program information.

THEMES

You can list and choose programs by the theme of their contents, for example, just movies or just sports. You can then quickly list programs based on that theme, and choose the program you want.

Remote Buttons

Menu Options

1. Open the **Themes and Search** menu by doing one of the following:

- While watching a program, press the Left arrow button.
- Press the Menu button, and then select the **Themes and Search** option.



2. Select the option for a category.

3. Select the desired program in the program list.



Note: If the program you highlighted is on some time in the future, the receiver will open the **Create An Event Timer** menu. See *Using Timers* on page 3-19 for more information.

SEARCH

Remote Buttons

Menu Options

1. Open the **Search** screen by doing one of the following:

- Press the Pound (#) button on the remote control.
- While watching a program, press the Left arrow button to display the **Themes and Search** menu. Then select **Search**.
- Press the Menu button, and then select the Themes option to display the Themes and Search menu. Then select Search.

search



MENU



2. The **Search** screen displays with a virtual keyboard.

3. You can search for events two ways:

- Select **Title** to search for the words that appear in the title of a program.
- Select **Info** to search for words that are in the program description.

4. Enter the information in that space provided in one of two ways:

- Use the virtual keyboard to type the information in the space provided.
- Use the letters above the number pad buttons while in the **Enter Search Criteria** field. For example, when looking for the channel and times to watch *Rudy Fremmel Presents*, you press 7 three times for an R, 8 two times for a U, 3 one time for a D, and 9 three times for a Y to spell the word “Rudy.”
- Use the Left, Right, Up, and Down arrow buttons to navigate around the **Search** screen.



- Use the Left arrow button to delete characters in the **Enter Search Criteria** field.
- Use the Star button to backspace without deleting in the **Enter Search Criteria** field.
- Use the Right Arrow button to forward space without deleting in the **Enter Search Criteria** field.

5. Select Search.

6. When the receiver displays the **Search Results** you have the following options:

- Use the Up and Down Arrow buttons to scroll through the results.
- Use the Page Up and Page Down buttons to scroll a page at a time.
- Select **Page Up** or **Page Down** to scroll a page at a time.

7. Select one of the programs to watch, or select **Done** to close the **Search Results** screen.

Note: If you select a program that is on now, the receiver tunes to that program. If you select a program that is on in the future, you will have to set a timer. See page 3-19 for more information on event timers.



SEARCH HISTORY

After you have searched for programs or other information, your receiver builds a history. TV1 and TV2 keep separate **Search History** information. You can use the **Search History** instead of typing the information again with the virtual keyboard.

**Remote
Buttons**

Menu Options

1. Press the Pound (#) button to open the **Search** screen.
2. Select **History** to display the **Search History** screen.

search



3. At the **Search History** screen, you have the following options:
 - **Search** - Select one of the items and then select **Search**.
 - **Edit** - Select one of the items and then select **Edit** to make changes.
 - **Delete** - Select one of the items and then select **Delete**.
 - **Delete All** - Select Delete All to clear the **Search History**.

