USING CALLER ID

Caller ID displays on your TV the names of people as they call you *if you subscribe* to Caller ID from your local phone company. To use this feature, make sure you have a phone line connected to the receiver and that the **Caller ID** feature is enabled. After you turn on **Caller ID**, it stays on until you decide to turn it off.

Note: For best performance, make sure your system is properly grounded.

CALLER ID SCREENS

When you receive a call, you will see a **Caller ID** popup screen.



You can select **OK** to eliminate the message. If you do nothing, it will disappear after 20 seconds.

If you are in a menu when a call comes in, you will see a different **Caller ID** popup screen.



TO TURN THE CALLER ID ON AND OFF

Remote Buttons

Menu Options

- 1. Press MENU.
- 2. Select the **Installation** option
- 3. Select the **Phone System** option. The following screen will display.
- 4. Highlight Enable Caller ID or Disable Caller ID and press SELECT
- 5. Select Save.

Note: You can also press the SYS INFO button located on the far right side of the front panel on your receiver.







