

CHANGING CHANNELS

There are three basic ways to change channels while watching a program:

- Press the remote control UP or DOWN ARROW buttons to get to the desired channel.
- Use the remote control number pad buttons to enter the desired channel number.
- Press the GUIDE button and select a program from the **Program Guide**. See page 3-4 for more information.



GUIDE

