

## RESETTING THE RECEIVER

---

Use these instructions if you want to reset the receiver to be the same as when it was shipped.

**Note:** Resetting the receiver discards all Favourite Lists *except* the **All Chan** and **All Sub** lists.

**Note:** If you have set *any* locks on the receiver, and the receiver is locked, these locks will be kept. If the receiver is unlocked, any such locks will be lost. You *cannot* reset the receiver to default settings to discard a password you have forgotten. Only the Customer Service Center can reset the receiver to bypass a receiver lock.

### Remote Buttons

### Menu Options

1. Press the MENU button.
2. Select the **System Setup** option.
3. Select the **Installation** option.
4. Select the **Factory Defaults** option. The receiver displays a **Warning** message, prompting you to confirm that you want to reset the receiver.
5. Select the **Yes** option to confirm the reset. The receiver resets, and then displays the **Installation and Setup** menu.

MENU



mno

