

A

- Account Information 1-4
- Adjusting the Remote Antenna 10-4
- Adult Content, Hiding 6-7
- All Episodes 9-2
- Arrow Buttons 1-5
- Attach the Remote Antenna 2-7
- Automatic Timer 9-6

B

- Back Panel 2-14
 - Connections 2-14
- Batteries, Remote Control 2-7
- Bell ExpressVu Account 1-4
- Browse Banner 3-4
 - Troubleshooting 13-10
- Browsing 1-5
- Buying a Pay-Per-View 4-2
- Buying Pay-Per-View 4-2

C

- Caller ID 11-3
 - History 11-4
 - Screens 11-3
 - Setting Up 11-4
 - Troubleshooting 13-14
- Canceling a Procedure 2-17
- Changing Channels 3-2
 - Browse Banner 3-4
 - Channel Number 3-2
 - Program Guide 3-2
 - Troubleshooting 13-11
 - Up and Down Arrows 3-2
- Channel Locks 6-5
- Check Switch 12-19
- Checking the Device Codes 10-10
- Checking the Remote Control Address 10-3
- Closed Captioning 11-6
- Connecting a VCR to the Remote TV 12-13
- Connecting Off-Air Antenna/Cable TV 12-14
- Connecting to the Nearby HDTV (TV1)
 - HDTV Digital Audio/Video Connections 12-2
 - YPbPr Connections 12-3
- Connecting to the Phone Line 12-12
- Connecting to the Remote TVs (TV2) 12-5
- Connecting to Your Dish Antenna 12-11
- Connections, Back Panel 2-14
- Controlling Other Components 10-6
- Controls and Indicators, Front Panel 2-12
- Conventions, Guide 1-3
- Customer Service 7-2

D

- Deleting a Timer 9-8
- Descriptive Video 11-5
- Device Codes 10-6, 10-10, 13-15
- DVD Player 13-16
 - DVD/VCR Device Codes 13-17
 - Tuner/Amplifier 13-17
 - TV 13-15
 - TV/DVD 13-17
 - TV/DVD Combo 13-17
 - TV/VCR Combo 13-16
 - VCR 13-16
- Device Codes Scan 10-8
- Diagnostics 12-19
- Dish Antenna 12-11
- Dolby Surround Sound 11-7
- Dual Mode 2-4, 2-5, 8-7
 - Recording Events without Record Plus 8-9
 - Recording with Record Plus 8-8
 - Using Record Plus 8-7
- DVD Player Device Codes 13-16
- DVD/VCR Combo Device Codes 13-17

E

- Entering a Channel Number 3-2

F

- Factory Defaults 11-10
- Fast Forwarding 8-3
- Favourites Lists 2-5,
 - Creating or Changing Naming 5-3
 - Off-air Channels
 - Troubleshooting 13-12
 - Using 5-4
- Finding a Program to Watch 1-5
- Finding Information on Your Account 1-5
- Frame-By-Frame 8-4
- Front Panel 2-12
 - Locking 6-8

G

- Guide Conventions 1-3

H

- HDTV Digital Audio/Video Connections 12-2
- Hiding Adult Content 6-7
- Highlighting Options in a Menu 2-16

I

- Improving Receiver Control 10-2
 - Adjusting the Remote Antenna 10-4
 - Changing the Address for Remote Control 2 10-2
 - Checking the Remote Control Address 10-3
 - Confirming Remote Control Address 10-3
 - Installing a UHF Attenuator 10-5
- Information on Your Account 1-5
- Installing a UHF Attenuator 10-5

L

- Limited Mode 10-6
- List of Choices in Menus 2-17
- Locks 6-2
 - Channel Locks 6-5
 - Creating or Changing a Password 6-3
 - Hiding Adult Content 6-7
 - Locking and Unlocking Your Receiver 6-4
 - Locking or Unlocking Pay-Per-View Channels 6-6
 - Locking or Unlocking the Front Panel 6-8
 - Ratings Locks 6-4
 - Troubleshooting 13-11
- Low Battery Warning 2-7

M

- Manual Timer 9-7
- Menus 2-16
 - Canceling a Procedure 2-17
 - Highlighting Options 2-16
 - List of Choices 2-17
 - Open and Close 2-16
 - Selecting Options 2-16
 - Troubleshooting 13-10
 - Using 2-16
- Message Numbers 13-3
- Mode Light 2-3, 2-4
- Modes
 - Dual 2-4, 2-5
 - Single 2-3

N

- Naming Favourites Lists 5-4
- Nearby HDTV 1-3, 2-2, 2-3, 2-6
- Nearby TV
 - Connecting 12-2
 - HDTV Digital Audio/Video Connections 12-2
 - No Picture 12-3
 - Remote Control 1 2-2
 - Setting Up to Display in HD 12-4
 - YPbPr Connections 12-3
- New Episodes 9-2

User Guide

No Picture on the Nearby TV 12-3

O

Off-Air Antenna 12-14
 Peaking 12-16
 Scanning for Channels 12-15
Off-Air Channels 6-5
Off-Air TV Broadcasts 12-17
Opening Menus 2-16
Ordering Your Program Packages 1-4

P

Password 6-3
Pausing a Program 8-2
Pay-Per-View 1-8, 4-2
 Buying 4-2
 Locks 6-6
 Reviewing Purchases 4-3
 Troubleshooting 13-13
Peaking Your Off-Air Antenna 12-4
Personal Identification Number 6-8
Phone Line 12-12
Phone Line Connection 1-9, 12-13
Phone System Setup 12-12
Picture-In-Picture 3-8
Playing a Recorded Program 8-5
Point Dish 12-19
Program Guide 1-5, 3-2
 Channel Order 11-8
 Display 11-9
 Troubleshooting 13-10
Programming the Recover Button for Remote Control 2 10-17
PVR Buttons 2-10

R

Rain and Snow Fade 1-8
Ratings Locks 6-4
Reasons Why Timers are Skipped 9-4
Receiver Back Panel 2-14
Receiver Front Panel 2-12
Receiver Updates 11-11
Record Plus 8-7, 8-8, 8-9
Recording a Live Program 8-5
Recording Events without Record Plus 8-9
Recording in Single Mode 8-6
Recording Options 8-10
Recording While Watching Different Programs 8-6
Recover Button 10-17
 Programming 10-17
 Using 10-18
Remote Antenna 10-4
Remote Battery Low 2-7
Remote Control 2-6
 Antenna 2-7, 10-4
 Batteries 2-7
 Buttons, PVR 2-10
 Buttons, Receiver Control 2-8
 Changing the Address 10-2
 Checking the Address 10-3
 Checking the Device Codes 10-10
 Combination Devices 10-6
 Confirming Operation 10-3
 Controlling Other Components 10-6
 Limited Mode 10-6
 Low Battery Warning 2-7
 Modes 10-6
 Programming the Recover Button for Remote Control 2 10-17
 Programming to Control a Second Satellite Receiver 10-12
 Removing the Recover Button Channel Programming 10-19
 Setting Up Using Device Codes Scan 10-8

Switching Between TV and Device Volume Control 10-11

Troubleshooting 13-6

Types 2-6

UHF Attenuator 10-5

Using the Recover Button 10-18

Using the Remote Control with Other Components 10-14

Remote Control 1 1-3, 2-2

Remote Control 2 1-3, 2-2, 10-2

Recover Button 10-11

Removing the Recover Button Channel Programming 10-19

Using the Recover Button 10-18

Removing the Recover Button Channel Programming 10-19

Resetting to Factory Defaults 11-10

Resetting Your Receiver 12-16

Reversing, Fast Forwarding, and Skipping 8-3

S

Satellite Receiver Overview 2-2

Satellite TV Reception 1-8

Scanning for Off-Air Antennas 12-15

Scheduling Receiver Updates 11-11

Search History 3-6

Second Satellite Receiver 10-12

Selecting Menu Options 2-16

Shared View 11-2

Single and Dual Modes

 Favourites Lists 2-5

 Recording 2-5

 Switching 2-5

Single Mode 2-3

 Picture-In-Picture 3-8

 Recording 8-6

 Shared View 11-2

Skipped Timers 9-4

Slow Motion and Frame-By-Frame 8-4

T

Themes 3-7

Timer Frequency 9-2

Timer Options 9-3

Timer Types 9-2

Timers and Recordings 9-2, 9-4

 Deleting a Timer 9-8

 Reasons Why Timers are Skipped 9-4

 Setting Up an Automatic Timer 9-6

 Setting Up a Manual Timer 9-7

 Special Considerations When Using Timers 9-5

 Timer Frequency 9-2

 Timer Options 9-3

 Timer Types 9-2

 Timers List 9-3

 Troubleshooting 13-8

Timers List 9-3, 9-5

Troubleshooting 13-2

 Caller ID 13-14

 Changing Channels 13-11

 Changing Languages 13-12

 Favourites Lists 13-12

 Hearing a Program 13-12

 Locks 13-11

 Menus 13-10

 Message Numbers 13-3

 Pay-Per-View 13-13

 Phone Line 13-13

 Program Guide and Browse Banner 13-10

 Remote Control 13-6

 Timers 13-8

 Watching a Program 13-7

Troubleshooting Tools 12-18

Tuner/Amplifier Device Codes 13-17

TV Codes 13-15
TV Device Codes 13-15
TV/DVD Combo Codes 13-17
TV/VCR Combo Device Codes 13-16

U

UHF Attenuator 10-5
Updates 11-11

V

VCR Codes 13-16
VCR Connection 12-13
VCR Device Codes 13-16

Y

YPbPr Connections 12-3

Notes