



Bell Fibe™ TV remote guide



Fibe is a trade-mark of Bell Canada.

BATTERY INSTALLATION

1. Remove cover on back.
2. Insert 2 new AA alkaline batteries.

PROGRAMMING THE REMOTE TO CONTROL OTHER DEVICES

The remote will only control a device that has been selected by the appropriate mode key (TV, DVD, and AUX). You do not need to program the remote to operate your Bell Fibe TV receiver. Once pressed, the mode keylight will flash. In order to control other devices, you need to tell the remote what types of devices you have. Refer to sections A and B. The volume controls will control your Set Top Box (Bell button) until the TV device mode is setup. The channel controls will always control your receiver. If you want to change this, you should follow the steps in Sections E & F.

To use your remote for other devices, you will need to setup the TV, DVD and AUX mode keys to control the devices (Section A).

Refer to the code list for a list of supported brands and models. If you do not find the brand of your device, refer to section B for the search function or section C for instructions on the learning feature.

If you have a TV/DVD, each component may need to be setup separately.

NOTE: The DVD and AUX mode keys can be setup with any code. The TV mode key can only be setup with TV codes.

A. MANUAL PROGRAMMING

Use the following steps to setup mode keys:

1. Turn on the device you want to program and locate the 4-digit code from the code list (see over).
2. Press and hold the mode key. While holding it pressed, press the SELECT key for 1 second.
3. Release both keys, all of the mode keys will flash then the selected mode key light will stay lit.
4. Enter the 4-digit code.
5. Press the power key once. The device should turn off. If the device stayed on, repeat steps 2 thru 5 trying each code for your brand.

Repeat the steps above to setup another device.

NOTE: If an invalid code is entered or no key is pressed for 30 seconds, the mode key light will flash for 3 seconds and turn off. You will need to start over.

B. USING THE SEARCH FUNCTION

1. Turn on the device you want to control.
2. Press and hold the mode key and while holding it pressed, press the SELECT key for 1 second.
3. Release both keys, all the mode keys will flash then the selected mode key light will stay lit.
4. Press the power button repetitively until the selected device turns off. Once your device has turned off, press SELECT to save the code.
5. If setup is successful the mode key will turn off and you are ready to setup another device.

C. LEARNING

If the code for your device is not found in the code list and the search feature was not able to find the code for your device, then the learning feature will let you "learn" functions from your original remote.

IMPORTANT: Before using the Learning feature of your remote, please follow steps 1-5 in Section A. If you are not able to find a code for your device in this manual, please use "0000" as your code for Step 4 of Section A.

C-I. Learning Commands

1. Press and hold the mode key and while holding it pressed, press the LEARN key for 1 second then release both keys.
2. All of the mode keys will flash and then the selected mode key light remains on.
3. Press and release the key that you want to teach.
4. While pointing your original remote approximately 1 inch from the bottom of your Bell Fibe TV remote, press and hold the original remote key until the mode key light blinks once and stays on. (If there is a learning problem, the mode key light blinks for 3 seconds and stays on. If this happens, repeat steps 3 and 4 above.)
5. Repeat steps 3 and 4 above for each key you want your Bell Fibe TV Remote to learn.
6. Press and release the LEARN key when all desired remote commands have been learned.

D. CLEARING COMMANDS

D-I. To Clear all Learned Commands (under a single mode)

1. Press and hold the mode key and while holding it pressed, press the LEARN key for 1 second then release both keys.
2. All the mode keys will flash and the selected mode key light will stay on.
3. Press and release the LEARN key once. The mode key light blinks off.
4. Press and release the DELETE key. The mode key light turns off. All learned commands are now cleared.

D-II. To Clear all Learned Commands (under ALL modes)

1. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the LEARN key for 1 second then release both keys.
2. All the mode keys will flash and the selected mode key light will stay on.
3. Press and release the LEARN key twice. The mode key light blinks off.
4. Press and release the DELETE key. The mode key light turns off. All learned commands in the remote are now cleared.

E. VOLUME CONTROL

The volume controls will control your receiver until the TV device mode is programmed,

E-I. Volume Always Controls the Same Device

1. Press the TV key and while holding it pressed, press the SELECT key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then remains on. Press and release the mode key that you always want to operate the volume commands (Bell, TV, DVD, and AUX). The selected mode key light will remain on.
4. Press and release the MUTE key to save the setting. The selected mode key light will turn off indicating a successful setup. If the selected mode key light flashes for 3 seconds and turns off, then the selected mode will have no volume commands of its own and will need to start over from step 1.

E-II. Volume Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the SELECT key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the MUTE key.
4. Press and release the MUTE key to save the setting. The TV mode key light turns off indicating successful setup.

NOTE: If a programmed mode key has no volume commands of its own, then the volume control will normally operate the TV. If an invalid key is pressed, the selected mode key light flashes for 3 seconds and turns off. You will need to start over.

If no key is pressed within 30 seconds, the selected mode key light flashes for 3 seconds and turns off. You will need to start over.

F. CHANNEL CONTROL SETUP OPTIONS

The channel controls (Channel Up/Down, 0-9 and LAST) will always work your receiver. If you'd like the channel commands to be sent to different devices depending which mode you are in, then follow the instructions in Section F-I.

F-I. Channel Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the SELECT key for 1 second.
2. Release both keys, all of the mode keys flash followed by the TV mode key light remaining on.
3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the LAST key.
4. Press and release the LAST key to save the setting. The TV mode key light turns off indicating successful setup.

F-II. Channel Always Controls your Set Top Box (Factory Default)

1. Press and hold the TV key and while holding it pressed, press the SELECT key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then remains on.
4. Press and release the Bell mode key. The selected mode key light remains on.
5. Press and release the LAST key to save the setting.

The Bell mode key light will turn off indicating a successful initial setup. The channel commands will be setup for your receiver regardless of what mode is selected. If the selected mode key light flashes for 3 seconds and turns off, then you will need to start over from step 1.

G. MODE DEACTIVATION

1. Press and hold the mode key to be deactivated and while holding it pressed, press the SELECT key for 1 second.
2. Release both keys, all mode keys will flash and then the selected mode key light will remain on.
3. Enter the 4-digit code 1755. Note the receiver mode cannot be deactivated.

H. MULTIPLE DEVICE POWER CONTROL SETUP OPTIONS

After pressing the Bell key, pressing the POWER key turns the Set Top Box on or off, AND turns on or off the TV if it has been setup. If you want the POWER key to turn on other devices at the same time you can enable these as follows:

1. Press and hold the Bell key and while holding it pressed, press the SELECT key for 1 second. Then release both keys.
2. Press and release the mode key (TV, DVD or AUX) you want to enable.
3. Press and release the 1 key. If no mode key is pressed in step 2 ALL modes will be enabled.

To remove a mode from the Power key:

1. Press and hold the Bell key and while holding it pressed, press the SELECT key for 1 second. Release both keys.
2. Press and release the mode key (TV, DVD or Aux) you want to disable.
3. Press and release the 0 key. If no mode key is pressed in step 2, ALL modes will be disabled.

NOTE: you can turn individual devices on/off by pressing the desired Mode key followed by the POWER key.

I. BACKLIGHT CANCELLATION FEATURE

You can turn the backlights on or off.

1. Press and hold both the TV key and the SELECT key. Release both at the same time.
2. Press GUIDE.

To reverse it repeat the same steps again.

J. RESETTING TO FACTORY DEFAULT

1. Press and hold both the TV key and SELECT. Release both keys at the same time.
2. Press and hold DELETE for 3 seconds until the TV key blinks and stays off.
3. If no key is pressed within 30 seconds, the remote will turn off and return to normal.

K. TROUBLESHOOTING LEARNING

You can only learn TV codes under the TV mode, DVD codes under the DVD mode, etc. If you are trying to learn from a "Universal" remote, it might have more than one code type stored under a mode.

- a. No functions may be stored under the LEARN key, or in the Bell mode.
- b. Depending on your original remote, some keys may not be learnable.
- c. Only 1 original device type can be learned per individual mode.
- d. Use only new batteries.
- e. Keep at least 3 feet away from incandescent or low energy lights.
- f. Before learning, clear all learned commands (refer to Section D-II) then try learning 2 or 3 commands initially.
- g. Point your original remote at the bottom end of your Bell Fibe TV Remote so both remotes are directly in line with each other. You may need to adjust the height of either remote.
- h. Avoid learning your original remote's Volume/Mute, VCR or DVD transport keys unless you're sure these operate the same device.
- i. If learning the first or second keys for a mode results in continuous errors then try the following:

- End the learn session by pressing the LEARN key.
- Clear out the learned commands for that mode.
- Adjust the distance between the two remotes to be closer or further away.
- Try learning the original remote for that mode again. If problems reoccur with the same key, check to see if it works with the original remote. Try learning that key, under a different clear mode. If it learns SELECT then it is likely to be a different code type from the others and cannot be learned under the same mode.