



Fibe™ TV remote instructions



Programming the remote to your TV

1. Turn on your TV and Fibe receiver.
2. Press and hold the options key for 3 seconds, until the green light flashes twice. Within 10 seconds, enter the 4-digit code for the brand of your TV (see table below), or use 0001 to search through all brands.

The green light will blink twice to confirm a correct entry. It will light up for 2 seconds if an incorrect 4 digit code was entered. If no code was entered within 10 seconds, start this step again.

TV Brand List

0010	Insignia
0011	Vizio
0012	RCA
0013	Sanyo
0014	Panasonic
0015	Funai/Emerson
0016	Sharp
0017	LG
0018	Toshiba
0019	Sony
0020	Samsung
0021	Philips
0022	Fluid
0001	search all brands

3. Hold down the power button until your TV turns off. This could take up to 5 minutes for a popular brand or up to 15 minutes to search through all brands. The green light will slowly blink as it cycles through all the TV manufacturer codes.
4. Once your TV switches off, let go of the power button and press the select key. The green light will blink twice to confirm it has been successfully programmed.

Note:

If the green light blinks 5 times, it means the remote has searched through the list of available codes, and hasn't found a match. If this occurs, please start again at Step 2 and enter code 0001 to find an alternate code which could work with your TV. If a correct code is still not found, then the remote will control your Fibe receiver only.

For additional information and troubleshooting visit bell.ca/support.