



# Reference

## WIRING THE SYSTEM TOGETHER

---

### TWO OR MORE RECEIVERS

Each output on the LNBF can support a single receiver. You cannot connect two receivers to the same output (for example, by using a line splitter), because the two receivers would interfere with each other during channel selection. This is a characteristic of satellite television in general, and is not a limitation of the Bell ExpressVu system.

If you want to connect two or more receivers to the same satellite dish and be able to watch different channels through each receiver, you must use a dual-output LNBF. This allows you to connect each receiver to a different output, preventing interference between the receivers. In this case, during installation you must run a separate coaxial cable from each output on the LNBF to each receiver.

If you want to purchase an LNBF different from the one that you originally purchased, contact your local Bell ExpressVu Authorized Agent.

### CABLES AND CONNECTIONS

Use either the Phono (RCA) Audio/Video Wiring Setup Diagram on page 4-5 or the TV Set Out (RF or VHF) Wiring Setup Diagram on page 4-6 as the basic plan to wire the system together. If you have more devices, or do not have all of the devices that are shown in the setup, adjust the wiring accordingly. If possible, use the setup shown in the Phono (RCA) Audio/Video Wiring Diagram, as using the setup shown in the TV Set Out (RF or VHF) Wiring Diagram will not support the best quality video on broadcast or cable channels

**ATTENTION!**




We highly recommend the use of a surge protector device to protect your satellite and television equipment from damage by AC power, cable, telephone, or lightning surges.

**WARNING!**



Tighten the receiver back panel coaxial cable connections only by hand. Using a wrench may over-tighten the connections, causing damage. Such damage is not covered by the Limited Warranty.

## RF OR VHF CONNECTIONS (GOOD PICTURE AND SOUND)

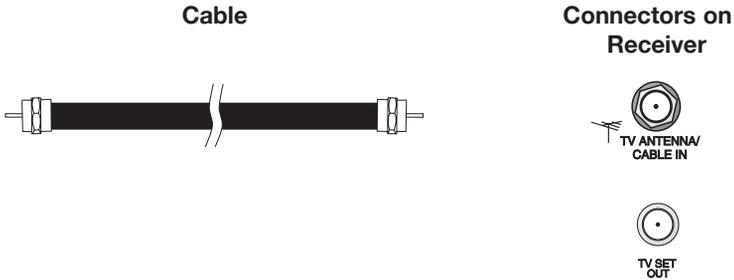


The back panel RF or VHF connections (also called the modulator connections) provide good picture and good mono (non-stereo) sound quality. Be aware that even if you have a TV and other devices that support stereo sound, this type of connection will provide only non-stereo sound.

If you connect a cable TV box or a broadcast TV antenna to the receiver, use the back panel **TV Antenna/Cable In (RF or VHF Connection)** for the local programming signal input. Use the back panel **Phono (RCA) Audio/Video Output** connections for the output if possible, as using the **TV Set Out (RF or VHF Connection)** will not provide the best quality video on broadcast or cable channels.

This is the simplest cabling scheme, and many people prefer it because of its ease of installation and use. The RF or VHF connections require that you keep the TV tuned to either channel 3 or 4 to view satellite channels. You also need to set the back panel **Channel 3/4 Switch** to match this channel.

**Note:** If you connect a VCR to the receiver, you must also set both the VCR channel switch and viewing channel to this same channel. All receivers come preset to channel 3.

### PHONO (RCA) AUDIO/VIDEO CONNECTIONS (BETTER PICTURE AND SOUND)

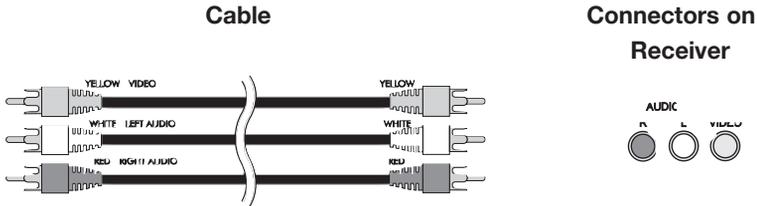

The back panel phono (RCA) audio/video connections provide better picture quality and stereo sound. The phono (RCA) audio/video cable is available as a single cable with three connectors on either end, or as three separate cables. The connectors are colour-coded according to the type of signal they carry: the yellow connector carries the video signal, the white connector carries the left audio signal, and the red connector carries the right audio signal. If the TV only has one input connection for this type of audio, connect it to the right (R) phono (RCA) audio connection on the receiver.

If you use the phono (RCA) audio/video connections to connect the receiver with other devices, then depending on the type of device that you connect to the receiver you may need to use the menus displayed by each device to change the input from local broadcast TV to satellite TV. See the user guides that came with the other devices for more information.

### CHANNEL 3/4 SWITCH

If you use the **TV Set Out (RF or VHF Connection)** to wire the receiver to a television, set this switch to the channel for the signal output. Select a channel that is not being used by a cable or local television station. **Note:** If you connect the receiver to a VCR that also uses a channel switch, set both switches to the same channel.



### TV ANTENNA/CABLE IN (RF OR VHF)

Connect your broadcast TV antenna or cable TV connection here to switch between satellite programming and your local or cable TV. When the satellite receiver is turned OFF or you press the **TV/Video** button on the remote, you have access to your local TV stations from this connection.



## TV SET OUT (RF OF VHF)

The receiver sends non-stereo output through this connector. If you connect the cable or broadcast TV antenna to the receiver, you must use this to connect the TV. If you use this connection, you do not need to use the **Phono (RCA)** or **S-VIDEO** connectors. However, we recommend that you use them to support the highest quality stereo sound and video.



## SUPER VHS VIDEO (S-VIDEO) OUTPUT (BEST PICTURE)

The receiver supports S-VIDEO, which supports the highest quality video available. If you use this back panel connection for video, you must still connect the audio using the **Phono (RCA) Audio Outputs**.



## TELEPHONE JACK

Connect a telephone line with a standard RJ-11 telephone connector to the receiver here, and then connect the line to an active telephone connection.



**Note:** The receiver must be connected at all times to an active telephone connection. If you install two or more receivers, each receiver must be connected at all times to an active telephone connection.

## SATELLITE IN


Connect the coaxial cable from the satellite dish to the receiver using this connection.



## WIRING SETUP DIAGRAMS


### Phono (RCA) Audio/Video Wiring Setup Diagram

**Note:** The off-air television antenna shown in the following diagram is optional.

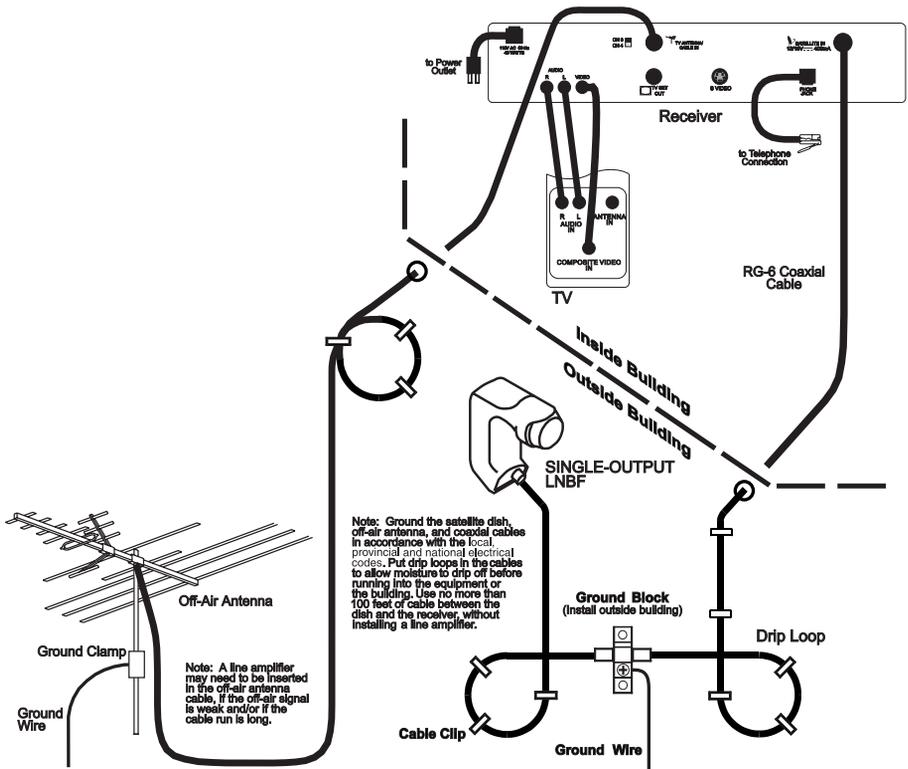




# RECEIVER WITH VCR WIRING SETUP DIAGRAM (RF OR VHF)

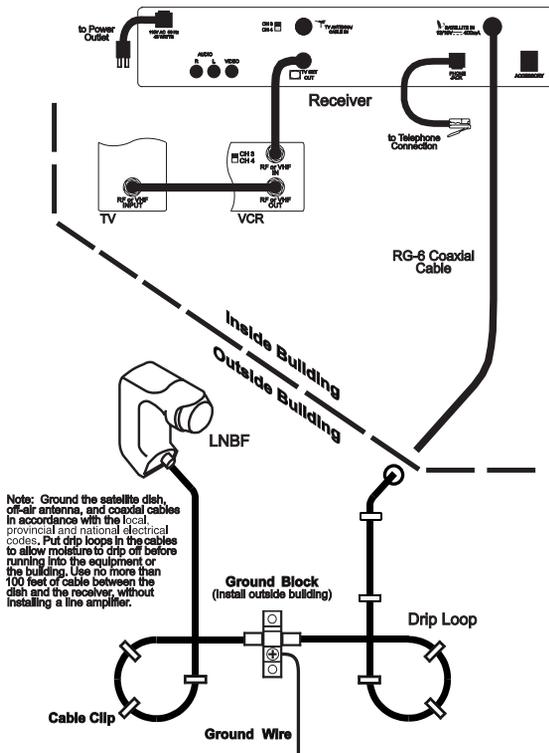

# TWO-RECEIVER WIRING SETUP DIAGRAM (RF OR VHF)

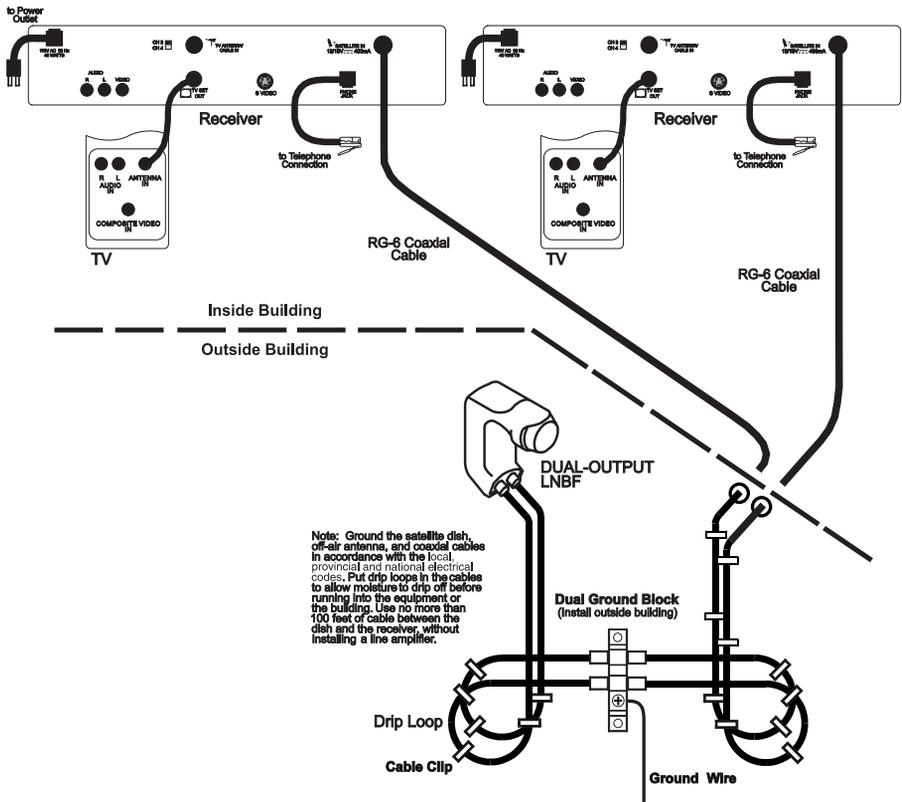

## GLOSSARY

---

Blacked Out Program	A program that cannot be watched in specific locations (for example, a sports event).
Changing Channels	While watching a program, selecting channels using the remote control <b>Up</b> or <b>Down</b> arrow button <b>or</b> the number pad buttons <b>or</b> the receiver front panel <b>Up</b> or <b>Down</b> arrow button.
Critique	The critique information supplied in some program information uses a four star. (* = lowest) to (**** = highest) rating system. The “+” symbol is one-half star.  <b>Note:</b> The critique information is supplied by the program provider, not the receiver manufacturer.
Event	See <b>Program</b> .
IR (Infra-Red)	The remote control uses infra-red light to transmit signals to the receiver.
Program	A TV show, movie, or pay per view program.
Program, Pay Per View	A program that you pay a fee to watch once.
Program Guide	An on-screen guide to the programs that are currently being shown, and the programs that will be shown for an extended time beyond the present. You can select current programs, and purchase pay per view events using the <b>Program Guide</b> .
Rating Codes	The following codes have been assigned to programs to indicate content and suggested audience.  <b>8+ (PG):</b> Parental Guidance suggested. Some material may not be suitable for children under the age of 8.  <b>14+(PG):</b> Not recommended for children under 14. Subject matter warnings. Parental discretion is strongly advised as some material may not be suitable for unsupervised viewing by children.  <b>18+(R):</b> Programming which could contain elements that would make it unsuitable for viewers under the age of 18.  <b>NC17:</b> Programming which could contain content elements that would make it unsuitable for viewers under the age of 17.  <b>NR/AO:</b> Not rated/Adult only. Due to explicit content this programming is intended for adult viewing only.  <b>Language:</b> Adult language <b>Violence:</b> Graphic Violence <b>Sexual Content:</b> Sexual scenes <b>Nudity:</b> Nude scenes

## PROBLEMS AND SOLUTIONS TABLES

---

Please use these tables if you encounter problems operating the system. Look in this section for a description of the problem before calling Bell ExpressVu Customer Service Call Centre. Many problems arise from basic misunderstandings of how the system works, especially when one is just becoming familiar with it. These tables address many problems, usually with a simple solution for each one. To solve a particular problem:

1. Review the section in this Guide that relates to the problem.
2. If you cannot find a solution, then find the section in the following tables that relates to the problem. Look down the **What Is Happening** column until you find the problem
3. For better understanding, read the information in the **Possible Reason** column.
4. Try each of the suggested solutions in the **What to Do** column.
5. If this does not help, call Bell ExpressVu Customer Service Call Centre at 1-888-SKY-DISH, or see the home page at <http://www.expressvu.com> on the World Wide Web. **Note:** Before calling Bell ExpressVu Customer Service Call Centre with a problem, have ready the date of purchase and either your customer account number, the receiver conditional access number, or the receiver model number. Display the **Important System Information** menu to find these numbers (see Ordering Your Bell ExpressVu Programming on page 3-1). Also, write down the contents of any error messages that the receiver displays on the television screen.

**ERROR MESSAGES IN THE MENUS**

<b>What is Happening</b>	<b>Possible Reasons Why</b>	<b>What to Do</b>
The receiver displays an “ERROR” message on the TV screen.	When the receiver finds a problem, it displays an ERROR message on the TV screen.	In most cases, the ERROR message explains the error. Sometimes, the ERROR message prompts you to do something. However, usually all you need to do is select the <b>OK</b> option on the ERROR message to clear the message from the TV screen.
ERROR message text: “The number of password entry retries has been exceeded. Please try again later.”	You may try to enter the password three times. If you do not enter the correct password any of those times, then you must wait several minutes until you may try again.	Wait until several minutes have passed, and try again.
ERROR message text: “The front panel buttons are locked.”	You or someone else locked the receiver front panel buttons.	You <i>must</i> use the remote control to unlock the receiver front panel buttons.
ERROR message text: “Unable to acquire signal.” or “Unable to acquire program guide information.”	The receiver is not receiving a strong enough signal to maintain an uninterrupted, clean picture.	Check the condition of all the coaxial cables and cable connections in the system. Check the condition of the dish mounting and aiming. If needed, contact your installer to re-aim the dish. If the system is OK, then there may be a weather-related problem with transmission of the satellite signal.
ERROR message text: “Please insert your Smart Card.”	Smart card is missing or not inserted correctly.	Check that the Smart Card is fully inserted into the receiver front panel slot.
ERROR message text: “Smart Card not inserted correctly.”	Smart card is inserted upside down or backwards.	Check that the Smart Card is inserted right side up, with the picture on top and the arrow facing in the correct direction.
ERROR message text: “The Smart Card currently inserted is not valid for use with this receiver.”	The receiver will work <i>only</i> with the Smart Card that came with it.	Insert the Smart Card that came with the system.
ATTENTION: Your Smart Card does not currently have authorization to view or purchase this program. Please wait or channel up or down.	There is a problem with the <b>Program Guide</b> information transmitted to the receiver via the satellite signal.	You cannot watch the selected program, even though it is displayed in the <b>Program Guide</b> . Try a different program or channel.
ERROR: “Your receiver has not yet been authorized.”	The receiver has not yet been electronically linked with the Smart Card, via the satellite signal.	If you have authorized your system, wait a few minutes to see if the message is removed. If you have not authorized your system, call Bell ExpressVu Customer Service Call Centre for assistance.
ATTENTION: “Acquiring satellite signal.”	The receiver may have just been plugged in. If so, it is acquiring the satellite signal. The satellite dish may have moved so that it is no longer picking up the satellite signal. The coaxial cables may have loosened or have moisture inside. There may be an interruption of the satellite signal.	Wait a few minutes to see if the message is removed. Check that the <b>Signal Strength</b> bar in the <b>Point Dish and Signal Strength</b> menu is <i>green</i> and displays the word “Locked.” If not, contact your installer to re-aim the satellite dish.

## USING THE REMOTE CONTROL

What is Happening	Possible Reasons Why	What to Do
You cannot find the remote control.	N/A	Use the receiver front panel <b>Control Buttons</b> to control the receiver until you find the remote. If the remote control is permanently lost or too damaged to use, call Bell ExpressVu Customer Service Call Centre to order a replacement.
When you press a button on the remote control, the receiver does not do what you expect.	The remote control may be missing batteries, the batteries may be incorrectly placed in the remote, or the batteries may be weak or dead.	If the batteries are missing or dead, insert fresh AAA-size batteries. If the remote has fresh batteries, check whether they are placed according to the label diagram. If not, remove them and place correctly.
When you press the remote control <b>Power</b> button to turn the receiver ON, the receiver front panel <b>Power</b> light does not light up.	You may not be able to see that the receiver <b>Power</b> light is on, if other lights in the room are too bright. The remote control may not be operating properly or the batteries may be weak or dead. The receiver power cord may not be plugged into a power outlet, or there may be a problem with the power.	Try other remote control buttons to see if the receiver is responding. Replace the remote batteries with fresh ones.  Check that the receiver power cord is not damaged and that the plug is inserted correctly into the outlet.
You use infrared (IR) remote control extenders (called "pyramids"). Other electronic devices exhibit ultra-high frequency (UHF) interference.	The extenders use UHF signals to transmit signals from one room of the building to another. These signals may be causing the interference.	Temporarily stop using the extenders, to see whether this eliminates the interference. If the extenders are the source of the interference, you will have to avoid using them whenever you do not want interference with other devices that use UHF. This is because UHF signals have a long range and go through walls and other solid objects.
You use infrared (IR) remote control extenders (called "pyramids"). The IR remote control extenders do not seem to work.	The IR sensor on the extender that receives the remote control signals may not be facing the remote control.  The IR cable on the extender that sends the signal to the receiver may not be right in front of the IR sensor on the receiver front panel.	Make sure that the extender that receives the signal from the remote control is facing the right way, so that the IR sensor can receive the remote control signals.  Make sure that the IR cable on the extender that sends the signal to the receiver is right in front of the IR sensor on the receiver front panel, so that the receiver IR sensor can receive the signals.  If doing the above does not solve the problem, contact the manufacturer of the extenders for assistance.

### HEARING PROGRAM SOUND

What is Happening	Possible Reasons Why	What to Do
The receiver front panel <b>Power</b> light is on and there is a good picture on the TV set, but you do not hear any sound.	You may have muted the sound, or set the volume so low that you cannot hear it. The audio connections may not be properly connected.	Check the volume level on the TV or audio equipment. Turn off the mute or turn up the volume, as required. Check the audio connectors and cables from the receiver to the TV or the sound system you are using. Check the TV speakers or the sound system you are using.
You hear a foreign language with a program.	You may have programmed the receiver to select an alternate audio language.	Use the <b>System Setup</b> menu to open the <b>Alternate Audio Language</b> menu, where you can select the language you prefer.

### WATCHING A PROGRAM

What is Happening	Possible Reasons Why	What to Do
The receiver front panel <b>Power</b> light is on, but the TV image: is black (no picture), is frozen, has breakups, has "snow," or shows small squares of various colours.	The TV set may not be working properly. If the TV and the receiver are working properly, there may be interference with the satellite signal. The TV may be wired to the wrong input.	Make sure that the TV set is plugged into an electrical outlet. Make sure the outlet has electrical power. Make sure that the TV is turned on. If the receiver is connected to the TV using only the RF or VHF connections, make sure that the TV is tuned to channel 3 or 4 (whichever works best in your area) and that the receiver back panel Channel 3/4 Switch is set to the same channel as the TV. Make sure that the TV brightness and contrast are adjusted correctly. Make sure that the TV is connected properly to the receiver. Check that the system has been installed correctly. Make sure that all required coaxial cables are in place, and check that all cable connectors are firmly connected. Make sure that the satellite dish is aimed at the satellite. Check the strength of the signal using the <b>Point Dish and Signal Strength</b> menu. Consult your installer to re-aim the dish, if necessary, to obtain the maximum possible signal strength. Note the local weather conditions. Heavy rain, snow, or cloud cover may be interfering with transmission of the satellite signal. Remove any snow or other debris which may have collected on the satellite dish. Set the TV to SVIDEO or VIDEO input.

# User Guide

<p>The receiver front panel Power light is on, and there is a picture on the TV screen, but the picture:</p> <ul style="list-style-type: none"> <li>has sparkles or is grainy,</li> <li>has a herringbone pattern,</li> <li>lacks colour or vertical hold, or wobbles, or</li> <li>looks “washed out” or fuzzy.</li> </ul>	<p>The TV set may not be working properly.</p> <p>If the receiver is connected to the TV using only the RF or VHF connections, there may be a strong local broadcast on the same channel, or a channel adjacent to the one to which the TV is tuned.</p> <p>There may be interference from other nearby electrical devices (such as cellular telephones, computers, microwave ovens, radios, stereos, or TVs).</p> <p>The satellite dish may have moved, so that it no longer picks up the satellite signal.</p>	<p>Make sure that the TV brightness and contrast are adjusted correctly, and that the TV is working properly.</p> <p>Make sure that the TV is connected properly to the receiver.</p> <p>Check other nearby electrical devices as possible sources of interference. Check that all required coaxial cables are in place. Check for moisture or water leaking in all connections. Dry them out if needed, then seal them with coaxial cable sealant. Check the dish-to-receiver cable run length; if it is over 100 feet, call your dealer or professional installer. Make sure that the satellite dish is aimed at the satellite. Check the strength of the signal using the Point Dish and Signal Strength menu. If necessary, contact your installer to re-aim the dish to obtain the maximum possible signal strength. Check the dish mount, tightening the bolts if needed.</p>
<p>A “black box” fills almost all of the TV screen.</p>	<p>You may have activated the Close Caption feature on the TV, and put that feature into Text mode.</p>	<p>Using the TV remote control and/or menus displayed by the TV (<i>not</i> the receiver remote control or the menus displayed by the receiver), deactivate the Close Caption feature.</p>
<p>The TV screen is all blue.</p>	<p>You may have connected the receiver to an incorrect input connection on the TV for the signal output from the receiver.</p>	<p>Check your TV owner’s manual for the correct TV input connection to use for the signal output from the receiver.</p>

## USING THE MENUS

What is Happening	Possible Reasons Why	What to Do
<p>You were using a menu, and it suddenly closed, taking you back to the program you were watching.</p>	<p>The menus have a time-out feature that closes any menu after several minutes of no activity. This will discard any changes you have made, but otherwise does no harm to the receiver.</p>	<p>Start over again.</p>

## USING THE PROGRAM GUIDE OR THE BROWSE BANNER

What is Happening	Possible Reasons Why	What to Do
<p>You try to display future programs in the <b>Program Guide</b> or <b>Browse Banner</b>, but find you cannot.</p>	<p>The Program Guide and Browse Banner can display programs scheduled for an extended, but not unlimited time beyond the present.</p>	<p>Try displaying the Program Guide again later. By that time, it may show programs for the time and date you want.</p>
<p>You try to display past programs (programs that have ended) in the <b>Program Guide</b> or <b>Browse Banner</b>, but find you cannot.</p>	<p>The <b>Program Guide</b> and <b>Browse Banner</b> can display <i>only</i> programs that have <i>not</i> yet ended. These features <i>cannot</i> display a time earlier than the present.</p>	<p>Contact the program providers for information on past programs.</p>
<p>When you are using the <b>Program Guide</b> or <b>Browse Banner</b>, some channels are missing.</p>	<p>You have activated a Favourites List other than the list named ALL CHAN.</p>	<p>You can change the active Favourites List while using the <b>Program Guide</b>, by pressing the remote control <b>Guide</b> button. You can choose another custom Favourites List or the <b>ALL CHAN</b> list, which includes all the channels.</p>

### CHANGING CHANNELS

What is Happening	Possible Reasons Why	What to Do
<p>You enter a desired channel number. The channel changes, but the new channel is not exactly the channel you entered.</p> <p>You are scanning up or down through the channels, and the receiver is skipping channels that you know you have purchased.</p>	<p>You may have made a mistake entering the channel number, or the channel number you entered may be invalid.</p> <p>If so, the channel displayed is the closest possible to the channel you entered.</p> <p>If you were watching a program and entered the number for a channel that you have not purchased, the receiver will change to the unpurchased program and allow a purchase or display a message.</p> <p>If a Favourites List other than <b>ALL CHAN</b> is active, the receiver will skip channels not on the active list.</p>	<p>Carefully retry entering the channel number you want.</p> <p>Press the remote control <b>Recall</b> button to return to the previous channel number. Select <b>ALL CHAN</b> as the active Favourites List.</p>

### USING FAVOURITES LISTS

What is Happening	Possible Reasons Why	What to Do
<p>You try to change the <b>ALL CHAN</b> list. The receiver displays an ERROR message.</p>	<p>The receiver will not allow you to change the <b>ALL CHAN</b> list.</p>	<p>Choose another list to change.</p>
<p>You try to make an empty Favourites List active. The receiver highlights the <b>Modify List</b> option.</p>	<p>The receiver will not allow you to activate an empty list.</p>	<p>Choose another list to use, or add at least one channel to the empty list.</p>
<p>You try to add a channel to a Favourites List. The receiver displays an ERROR message.</p>	<p>The list is full (that is, it has the maximum number of channels allowed in it).</p>	<p>You <i>must</i> delete a channel from the list to make room for each new channel.</p>

## SETTING AND USING SECURITY LOCKS

What is Happening	Possible Reasons Why	What to Do
You set a lock ( <i>for example</i> , a lock on programs by ratings), but the lock does not take effect.	You have not locked the receiver.	You <i>must</i> lock the receiver for any lock to take effect.
You forgot your password, so that you are unable to unlock the receiver.	You may not have written down the password, to keep it in a safe place.	Call Bell ExpressVu Customer Service Call Centre. You must provide the following information: (1) your name; (2) your address; (3) your telephone number; (4) the receiver serial identification number; and (5) your Bell ExpressVu Customer Service Call Centre Personal Identification Number (PIN), if you use one.

## ORDERING A PAY PER VIEW PROGRAM

What is Happening	Possible Reasons Why	What to Do
Someone orders a pay per view program without your permission.	You may have been away from the receiver, and someone else used it.	Lock the receiver to prevent unauthorized pay per view purchases. <b>Note:</b> You do not have to set any locks to lock pay per view purchases. Locking the receiver <i>automatically</i> locks pay per view purchases. <i>Remember that you are responsible for all pay per view purchases, whether or not you authorize such purchases.</i> If you lock the receiver, then anyone who wants to order a pay per view program <i>must</i> enter the password.
You are not able to order a pay per view program.	The receiver may not be connected to an active telephone line. The Smart Card credit limit may have been exceeded.	The receiver <i>must</i> be connected at <i>all</i> times to an active telephone connection. If you install two or more receivers, each receiver <i>must</i> be connected at <i>all</i> times to an active telephone connection. Call Bell ExpressVu Customer Service Call Centre.
You find that you are not able to cancel a pay per view program.	You ordered a pay per view program, and then decided not to watch it.	You cannot cancel an order for a pay per view program, whether it was just ordered or ordered previously.
Your setup includes more than one receiver. You order a pay per view program, but it does not appear via all of the receivers.	You ordered a pay per view program, and want it to be available via all the receivers in your setup.	If you use more than one receiver, you <i>must</i> order a pay per view program for each receiver.

## PERFORMING DIAGNOSTIC TESTS

What is Happening	Possible Reasons Why	What to Do
You are doing a Front Panel or Remote Control Diagnostic Test, and the receiver turns OFF.	You pressed the remote control <b>Power</b> button or the receiver front panel <b>Power</b> button.	Turn the receiver back ON, and use the on-screen menus to return to the <b>Diagnostics</b> menu. You can now resume the test, but remember not to press the remote control <b>Power</b> button or the receiver front panel <b>Power</b> button.
You are doing a Front Panel Diagnostic Test, and the receiver displays a failure message.	The front panel buttons are not working correctly. <b>Note:</b> The front panel button lock has no effect on this test.	Call Bell ExpressVu Customer Service Call Centre for assistance.
You are doing a Remote Control Diagnostic Test, and the receiver does not respond when you press a remote button.	You pressed the remote control <b>Page Up</b> or <b>Page Down</b> button.	The Remote Control Diagnostic Test does <i>not</i> cover the remote control <b>Page Up</b> or <b>Page Down</b> button.
You are doing a Remote Control Diagnostic Test, and the receiver displays the <b>Diagnostics</b> menu.	You pressed the remote control <b>Cancel</b> button.	Pressing the remote control <b>Cancel</b> button returns the receiver to the <b>Diagnostics</b> menu. Select the <b>Remote Control</b> option to resume the test, but remember not to press the remote control <b>Cancel</b> button.
You are doing a Remote Control Diagnostic Test, and the receiver displays a failure message.	The remote control may be missing batteries, the batteries may be incorrectly placed in the remote, or the batteries may be weak or dead. The remote control may be damaged or defective.	If the batteries are missing or dead, insert fresh AAA-size batteries. If the remote is damaged or defective, call Bell ExpressVu Customer Service Call Centre for assistance.
You are doing a Dish Signal Diagnostic Test, and the receiver displays a failure message.	The satellite dish may have been moved, so that it no longer receives the satellite signal. Coaxial cables may have loosened, or have moisture inside. There may be interference with the satellite signal. The dish may be full of snow or debris.	Contact your installer to re-aim the satellite dish for the maximum signal strength. Check the dish mount, tightening bolts if needed. Check that all coaxial cables are firmly connected and dry. A variety of weather (in particular, heavy rain, snow, or cloud cover) may interrupt the satellite signal. Check whether the dish is full of snow or debris, and clean it out if necessary. Call Bell ExpressVu Customer Service Call Centre for assistance.
You are doing a Telephone Connection Diagnostic Test, and the receiver displays a failure message.	The receiver cannot get a dial tone through the telephone connection.	Check the receiver back panel Telephone Jack connection and the telephone line. Make sure that the telephone line is connected to an active telephone connection. Make sure that the receiver is set up for the type of telephone system that you use. Make sure that no one else is using the telephone line while you do the test. Check the telephone line for a dial tone; if there is no dial tone, call the local telephone company for assistance.
You are doing a Main Unit Diagnostic Test, and the receiver displays a failure message.	The receiver may have been damaged or be defective.	Call Bell ExpressVu Customer Service Call Centre for assistance.

## USING THE TELEPHONE FOR VOICE/DATA/FAX

What is Happening	Possible Reasons Why	What to Do
During a telephone call, you hear “clicks.”	The receiver may have tried to call Bell ExpressVu Customer Service Call Centre in order to send pay per view purchase information. When the receiver found that the telephone was busy, it automatically disconnected.	You do not have to do anything. The receiver <i>must</i> be connected at <i>all</i> times to an active telephone connection. If you install two or more receivers, each receiver <i>must</i> be connected at <i>all</i> times to an active telephone connection. Call Bell ExpressVu Customer Service Call Centre.
You pick up the telephone to make a call, but you do not hear a dial tone.	The receiver was calling Bell ExpressVu Customer Service Call Centre in order to send pay per view information. When the receiver found that the telephone was picked up, it automatically disconnected.	Press the telephone receiver button to hang up. Release the button to get a dial tone.
Your computer or FAX machine tries to send a FAX or modem transmission, but fails.	The receiver was calling Bell ExpressVu Customer Service Call Centre in order to send pay per view information. When the receiver found that a call was being made on the telephone, it automatically disconnected. The FAX or modem found that there was no dial tone, and canceled the transmission.	Resend the FAX or modem transmission.
Your computer or FAX machine was receiving a FAX or modem transmission, but an error occurred.	The receiver may have tried to call Bell ExpressVu Customer Service Call Centre in order to send pay per view purchase information during the FAX or mode call. When the receiver found that the telephone was busy, it automatically disconnected. This generated “clicks” that caused an error in the FAX or modem transmission.	Have the sender resend the FAX or modem transmission.